



Geothermal Products

Specification Sheets

Geothermal Heat Pump Specifications

Document #	Tonnage	Description
S3422		Company Brochure
S3406		Geothermal Consumer Pamphlet
S3427		GeoTrio™ Series Geothermal Brochure
S3423		GT Series GeoTrio™ Geothermal Heat Pump Specification R-410A
S3405	2.0 – 6.0	GeoTec™ Series Geothermal Brochure
S3399		GV Series GeoTec™ Geothermal Heat Pump Specification R-410A
S3388		GS Series Geothermal Heat Pump Brochure
S3228		Loop Pump Module, Hose Kits & Flow Meter Accessories
SM10-03		Geothermal Heat Pump Tax Credit Bulletin & Mfg Certificate
Serial Number Link		Bard Serial Number Nomenclature Matrix
7960-607		GeoTec™ Series Bard Limited Warranty
7960-618		GeoTrio™ Non-Registered 5 Year Limited Warranty
7960-619		GeoTrio™ Registered 10 Year Limited Warranty

GT Series ~ Geo-Trio Step Capacity Geothermal H/P ~ R-410A

GTA Series A-Coil Section – Geo-Trio

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
GTA3600UD1-A GTA3600UD1-A		2100-537	2110-737	-

GTB Series Blower Section – Geo-Trio

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
GTB1-A		2100-537	2110-737	4117-100

GTC Series Compressor Section – Geo-Trio

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
GTC36S1-ADCX GTC48S1-ADCX GTC60S1-ADCX GTC36S1-ADNX GTC48S1-ADNX GTC60S1-ADNX	911-0537	2100-537	2110-737	4117-101
		4117-102 2100-539		Low Voltage Wiring Diagram GT Series User's Information Guide



Geothermal Products

GT Series Geo-Trio Accessories

Model		Installation Manual	Parts Manual	Wiring Diagram
GTHZ1	Horiz. Drain Pan	7960-614		
GTLID	Compressor Lid	7960-616		
8604-0**	Duct Heaters		2110-730	

GV Step Capacity Series Geothermal Heat Pump Units ~ R-410A

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
GV27S1-A	911-0501	2100-545	2110-739	4105-102
GV38S1-A	911-0501	2100-545	2110-739	4105-102
GV51S1-A	911-0501	2100-545	2110-739	4105-102
GV61S1-A	911-0501	2100-545	2110-739	4105-102
GV71S1-A	911-0501	2100-545	2110-739	4105-102
		2100-548	GeoTec User Information Guide	

GV Step Capacity Series Optional Electric Heaters

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
EH3GSVA-A05C	911-0301	2100-544	2110-155	4106-100
EH3GSVA-A09C	911-0301	2100-544	2110-155	4106-100
EH3GSVA-A14C	911-0301	2100-544	2110-155	4106-100
EH5GSVA-A05C	911-0301	2100-544	2110-155	4106-100
EH5GSVA-A09C	911-0301	2100-544	2110-155	4106-100
EH5GSVA-A14C	911-0301	2100-544	2110-155	4106-100
EH5GSVA-A18C	911-0301	2100-544	2110-155	4106-100

GV Series Domestic Hot Water Pump Module

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
GVDM-26		2100-546	2100-517	4053-113

Geothermal Optional Accessories

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
DORFC-1		2100-518		
DORFC-2				



Geothermal Products

Geothermal Optional Accessories

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
DORGPT-1		2100-565		