



Oil Furnaces

Specification Sheets

Oil Furnaces Specifications

Document #	Description
S3422	Company Brochure
S3367 S3305	FH / FC / FL Series Oil Furnaces SOF Horizontal Series
Serial Number Link	Bard Serial Number Nomenclature Matrix
Warranty Link	Bard Limited Warranty (USA, Canada & Mexico)

F Series Oil Furnaces

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
FH085D36F	911-0541	2100-422	2110-927	4047-118(F)
FH110D48F	911-0542	2100-422	2110-925	4047-118(B)
FH110D60F	911-0542	2100-422	2110-925	4047-118(B)
FC085D36F	911-0542	2100-422	2110-925	4047-120(D)
FLF085D36F	911-0540	2100-422	2110-926	4047-119(E)
FLR085D36F	911-0540	2100-422	2110-926	4047-119(E)
FLF110D48F	911-0540	2100-422	2110-926	4047-119(C)
FLR110D48F	911-0540	2100-422	2110-926	4047-119(C)
FLF110D60F	911-0540	2100-422	2110-926	4047-119(C)
FLR110D60F	911-0540	2100-422	2110-926	4047-119(C)
FLR140D60F	911-0540	2100-422	2110-926	4047-119(C)

F Series Oil Furnace Accessories

Model	Description
7960-509	CFB23A Combustible Floor Base - FC085D36E Furnace
7960-511	FR25 Filter Kit - FC085D36E Furnace

SOF Series Oil Furnaces

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
SOF175D60A		2100-299	2110-919	
SOF265B90A				