



# Oil Furnaces

## Specification Sheets

### Oil Furnaces Specifications

Document #	Description
<a href="#">S3367</a> <a href="#">S3305</a> <a href="#">Serial Number Link</a> <a href="#">Warranty Link</a>	FH / FC / FL Series Oil Furnaces <b>“E” Revision</b> SOF Horizontal Series Bard Serial Number Nomenclature Matrix Bard Limited Warranty (USA, Canada & Mexico)

### F Series Oil Furnaces (**“E” - Revision**)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
FH085D36E	911-0412	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-118(B)</a>
FH110D48E	911-0412	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-118(B)</a>
FH110D60E	911-0412	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-118(B)</a>
FC085D36E	911-0426	<a href="#">2100-422</a>	<a href="#">2110-927</a>	<a href="#">4047-120(B)</a>
FLF085D36E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLR085D36E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLF110D48E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLR110D48E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLF110D60E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLR110D60E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>
FLR140D60E	911-0420	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119(C)</a>

### F Series Oil Furnace Accessories

Model	Description
<a href="#">7960-509</a>	CFB23A Combustible Floor Base - FC085D36E Furnace
<a href="#">7960-511</a>	FR25 Filter Kit - FC085D36E Furnace

### SOF Series Oil Furnaces

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
SOF175D60A		<a href="#">2100-299</a>	<a href="#">2110-919</a>	
SOF265B90A				