



# Oil Furnaces

## Specification Sheets

### Oil Furnaces Specifications

Document #	Description
<a href="#">S3422</a>	Company Brochure
<a href="#">S3428</a>	FH / FC / FL Series Oil Furnaces – ECM Blower Motor Models
<a href="#">S3367</a>	FH / FC / FL Series Oil Furnaces – PCS Blower Motor Models
<a href="#">S3305</a>	SOF Horizontal Series
<a href="#">Serial Number Link</a>	Bard Serial Number Nomenclature Matrix
<a href="#">Warranty Link</a>	Bard Limited Warranty (USA, Canada & Mexico)

### F Series Oil Furnaces – ECM Blower Motor

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
FH085V42A	911-0545	<a href="#">2100-540</a>	<a href="#">2110-929</a>	<a href="#">4047-121</a>
FH110V48A	911-0545	<a href="#">2100-540</a>	<a href="#">2110-929</a>	<a href="#">4047-121</a>
FH110V60A	911-0545	<a href="#">2100-540</a>	<a href="#">2110-929</a>	<a href="#">4047-121</a>
FC085V42A	911-0546	<a href="#">2100-540</a>	<a href="#">2110-930</a>	<a href="#">4047-122</a>
FLF085V42A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLR085V42A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLF110V48A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLR110V48A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLF110V60A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLR110V60A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>
FLR140V60A	911-0544	<a href="#">2100-540</a>	<a href="#">2110-928</a>	<a href="#">4047-123</a>



# Oil Furnaces

## F Series Oil Furnaces – PSC Blower Motor

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
FH085D36F	911-0541	<a href="#">2100-422</a>	<a href="#">2110-927</a>	<a href="#">4047-118</a>
FH110D48F	911-0542	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-118</a>
FH110D60F	911-0542	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-118</a>
FC085D36F	911-0542	<a href="#">2100-422</a>	<a href="#">2110-925</a>	<a href="#">4047-120</a>
FLF085D36F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLR085D36F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLF110D48F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLR110D48F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLF110D60F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLR110D60F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>
FLR140D60F	911-0540	<a href="#">2100-422</a>	<a href="#">2110-926</a>	<a href="#">4047-119</a>

## F Series Oil Furnace Accessories

Model	Description
<a href="#">7960-509</a>	CFB23A Combustible Floor Base - FC085D36E Furnace
<a href="#">7960-511</a>	FR25 Filter Kit - FC085D36E Furnace

## SOF Series Oil Furnaces

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
SOF175D60A		<a href="#">2100-299</a>	<a href="#">2110-919</a>	
SOF265B90A				