



# QH ~ Q-Tec™ Heat Pump Units

## Specification Sheets

Document #	Description
<a href="#">S3407</a>	Q24H-Q60H Series II Air-To-Air Heat Pump Specification <b>R-410A</b>
<a href="#">F1914</a>	Q24H-Q60H Series Engineering Specification Guide ~ <b>R-410A</b> ( <a href="#">F1914-Word.doc</a> )
<a href="#">7960-582</a>	Q24H-Q60H Dehumidification Series Performance Data <b>R-410A</b>
<a href="#">F1746</a>	QH Series Engineering Specification Guide <b>R-22</b>
<a href="#">S3349</a>	QH Series II Air-To-Air Heat Pumps Specification <b>R-22</b>
<a href="#">F1744</a>	QH Dehumidification Series Performance Data <b>R-22</b>
<a href="#">F1849</a>	QSP Series Q-tec Sound Plenum
<a href="#">Color Link</a>	Q-tec Cabinet & Outdoor Grille Finishes
<a href="#">TechniCoat Link</a>	Phenolic Coated Coil Option Information
<a href="#">Case Study Link</a>	Bard Project Case Studies
<a href="#">Serial Number Link</a>	Bard Serial Number Nomenclature Matrix
<a href="#">Warranty Link</a>	Bard Limited Warranty (USA, Canada & Mexico)

## Q\*\*H Series Q-Tec Heat Pump Units ~ R-410A

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
Q24H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C116(B)</a>
Q24H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C216(B)</a>
Q24H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C316(B)</a>
Q30H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C116(B)</a>
Q30H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C216(B)</a>
Q30H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C316(B)</a>
Q36H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C116(B)</a>
Q36H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C216(B)</a>
Q36H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C316(B)</a>
Q42H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C116(B)</a>
Q42H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C216(B)</a>
Q42H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C316(B)</a>
Q48H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C116(B)</a>
Q48H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C216(B)</a>
Q48H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C316(B)</a>
Q60H1-A	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C118</a>
Q60H1-B	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C218(A)</a>
Q60H1-C	911-0507	<a href="#">2100-519</a>	<a href="#">2110-574</a>	<a href="#">4100C318</a>
		<a href="#">2100-034</a>	Q-Tec User Information Manual	



# QH ~ Q-Tec™ Heat Pump Units

## Q\*\*H\*D Dehumidification Series Q-Tec Heat Pump Units ~ R-410A

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
Q24H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C117</a>
Q24H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C217</a>
Q24H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C317</a>
Q30H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C117</a>
Q30H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C217</a>
Q30H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C317</a>
Q36H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C117</a>
Q36H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C217</a>
Q36H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C317</a>
Q42H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C117</a>
Q42H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C217</a>
Q42H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C317</a>
Q48H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C117</a>
Q48H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C217</a>
Q48H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C317</a>
Q60H1DA	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C119</a>
Q60H1DB	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C219A</a>
Q60H1DC	911-0510	<a href="#">2100-521</a>	<a href="#">2110-575</a>	<a href="#">4100C319</a>
		<a href="#">2100-034</a>	Q-Tec User Information Manual	



# QH ~ Q-Tec™ Heat Pump Units

## QH Series Q-Tec Heat Pump Units ~ R-22

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
QH243-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH243-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH243-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
QH302-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH302-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH302-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
QH362-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH362-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH362-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
QH422-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH422-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH422-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
QH482-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH482-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH482-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
QH602-A	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C105</a>
QH602-B	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C207</a>
QH602-C	911-0410	<a href="#">2100-420</a>	<a href="#">2110-547</a>	<a href="#">4100C307</a>
		<a href="#">2100-034</a>	Q-Tec User Information Manual	



# QH ~ Q-Tec™ Heat Pump Units

## QH Dehumidification Series Q-Tec Heat Pump Units ~ R-22

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
QH244DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH244DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH244DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
QH303DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH303DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH303DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
QH363DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH363DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH363DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
QH423DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH423DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH423DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
QH483DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH483DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH483DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
QH603DA	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C114</a>
QH603DB	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C214</a>
QH603DC	911-0427	<a href="#">2100-435</a>	<a href="#">2110-550</a>	<a href="#">4100C314</a>
		<a href="#">2100-034</a>	Q-Tec User Information Manual	



# QH ~ Q-Tec™ Heat Pump Units

## QH Low-Ampacity Series Q-Tec Heat Pump Units ~ R-22

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
QH302LA	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C106</a>
QH302LB	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C208</a>
QH302LC	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C308</a>
QH362LA	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C106</a>
QH362LB	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C208</a>
QH362LC	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C308</a>
QH422LA	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C106</a>
QH422LB	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C208</a>
QH422LC	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C308</a>
QH482LA	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C106</a>
QH482LB	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C208</a>
QH482LC	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C308</a>
QH602LA	911-0410	<a href="#">2100-379</a>	<a href="#">2110-533</a>	<a href="#">4100C106</a>
Supplemental QH Series Low-Ampacity Electrical Information				<a href="#">7960-371(C)</a>
				<a href="#">2100-034</a> Q-Tec User Information Manual

## QH & Q\*\*H Series Ventilation Option Installation Manuals

[2100-305](#) QCRV-4 / QCRV-P Commercial Room Ventilator  
[2100-310](#) QERV-A4B Energy Recovery Ventilator

## QH & Q\*\*H Series Accessory Installation Manuals

[2100-289](#) QSW42A, QWS42A-16, QWS42A-19, QWS42A-20, QWS42A-23, QWS42A-30 Series Wall Sleeve

[2100-319](#) QWS48A, QWS48A-16, QWS48A-19, QWS48A-20, QWS48A-23, QWS48A-30 Series Wall Sleeve

[2100-446](#) QWS42A-H19 Series **Hurricane** Wall Sleeve

[2100-434](#) QWS48A-H19 Series **Hurricane** Wall Sleeve

[7960-571](#) QCDS48A Condensate Drain Kit (\*\*QH & Q\*\*H Series Only\*\*)

[2100-394](#) QCDS48H Heated Condensate Drain Kit (\*\*QH & Q\*\*H Series Only\*\*)

[7960-356](#) QLG Outdoor Louver

[7960-359](#) QPB Plenum Boxes

[7960-438](#) QCX Cabinet Extensions

[7960-444](#) QSTX42 Side Trim Extension Kit

[7960-441](#) QPBX42-9-\* QPBX48-9-\* Top Fill System

[7960-442](#) QPBX42-10-\* QPBX48-10-\* Top Fill System

[7960-452](#) QPBHW Free Blow & Ducted Hot Water Plenum Boxes

[7960-545](#) QPBHW-MOD Free Blow & Ducted Hot Water Plenum Boxes (Modulating)



# QH ~ Q-Tec™ Heat Pump Units

## QH & Q\*\*H Series Accessory Installation Manuals

[7960-518](tel:7960-518)

QSP Sound Plenum Installation Instructions