



NOTE: POSITION ADJUSTMENT THUMBWHEEL IS LOCATED ON BACK OF MOTOR ABOVE THE WIRING TERMINALS

VENTILATOR MOTOR

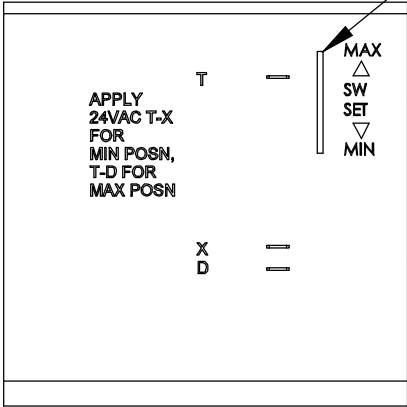

POSITION ADJUSTMENT THUMBWHEEL

ADJUSTMENT THUMBWHEEL

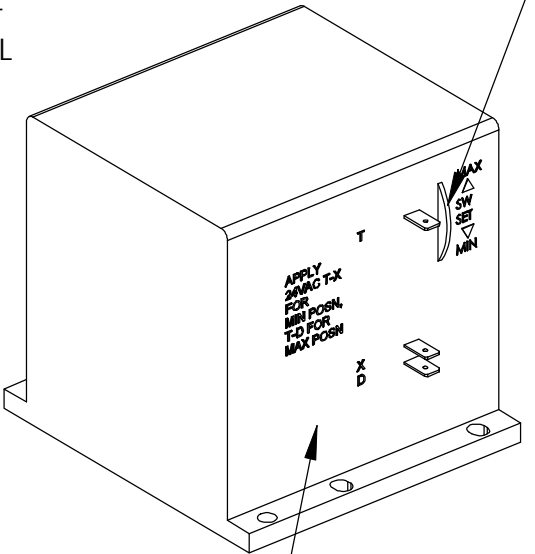

BACK OF ACTUATOR MOTOR

ADJUST FULL OPEN POSITION WITH THUMBWHEEL

ROTATE UP TO OPEN  
DOWN TO CLOSE