

TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,F. ADJUST POT #1.
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,F. ADJUST POT #2.
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,F. ADJUST POT #3.


THIS WIRE CONNECTS
 FOR CO2 SENSOR
 APPLICATIONS ONLY

 ALTERNATE CONNECTION FOR
 CONSTANT VENTILATION

WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

PART ABBREVIATION LIST	
CCB	CRV CONTROL BOARD
CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR

UNIT LOW VOLTAGE
 TERMINAL STRIP

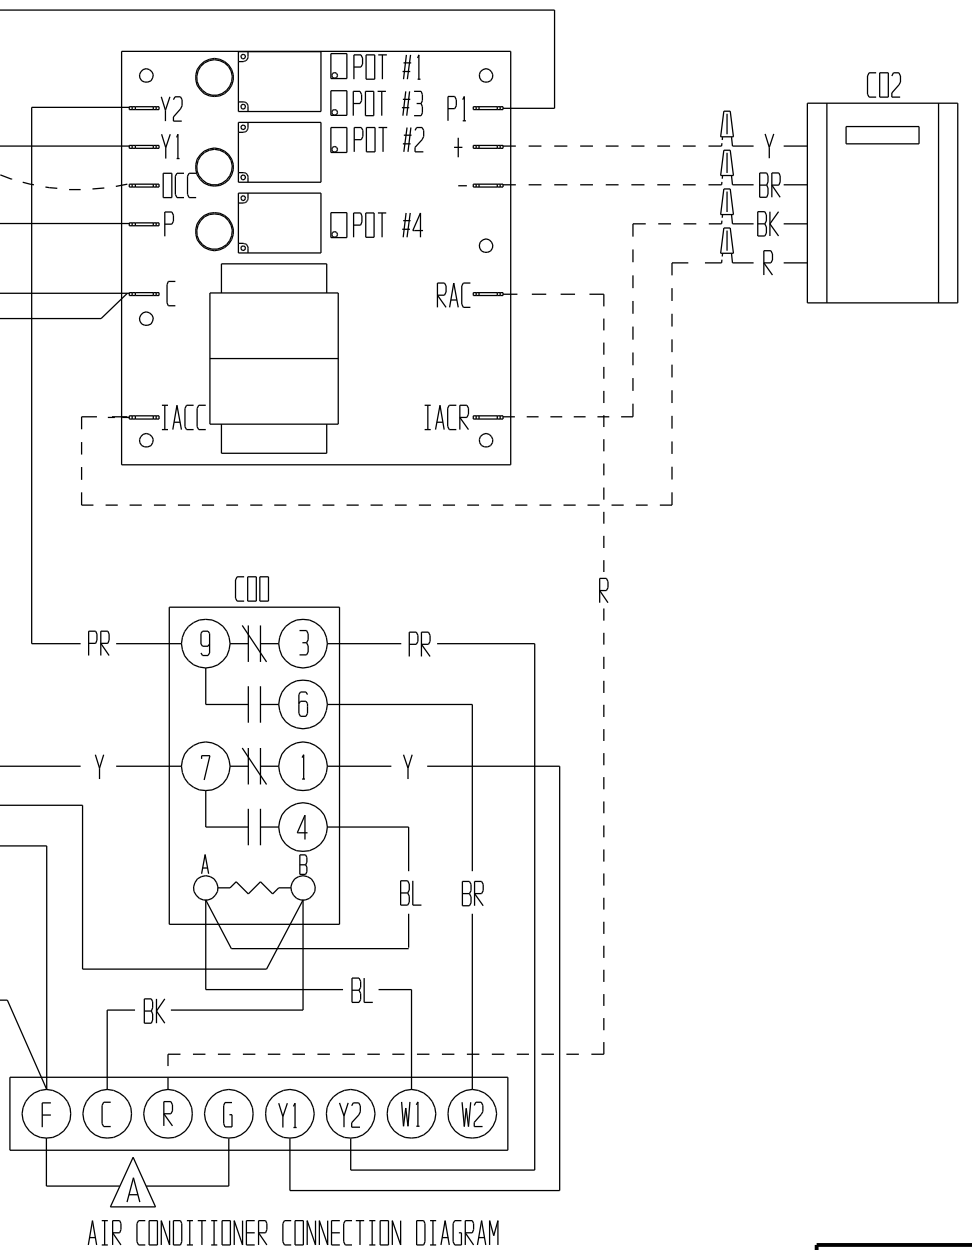

AIR CONDITIONER CONNECTION DIAGRAM