


ON/OFF CRV WIRING DIAGRAM

4056-244

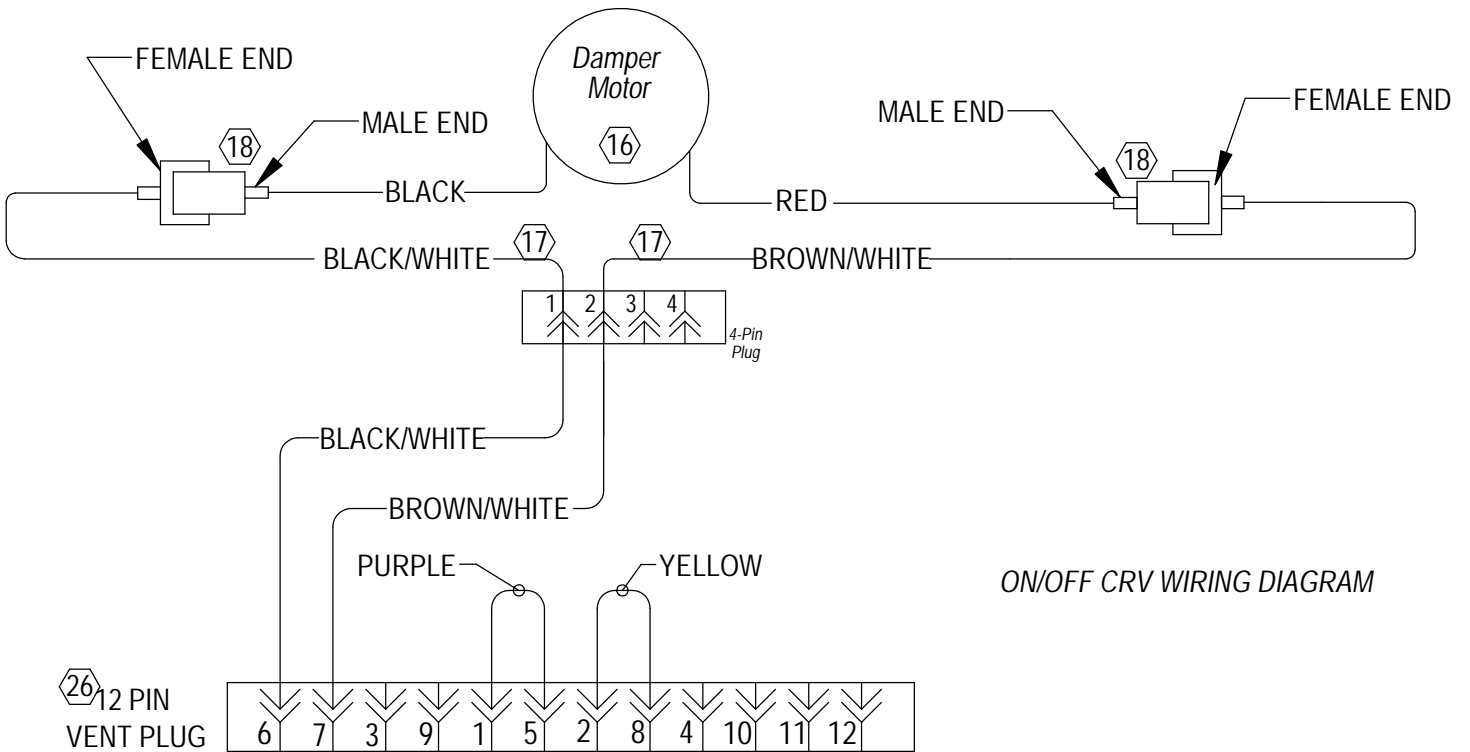

ON/OFF CRV WIRING DIAGRAM

4056-244