




Climate Control Solutions
Bard Manufacturing Company, Inc.
Bryan, Ohio 43506

ILG-10

ILG-20

ILG-30

OUTDOOR LOUVER GRILLE INSTALLATION INSTRUCTIONS

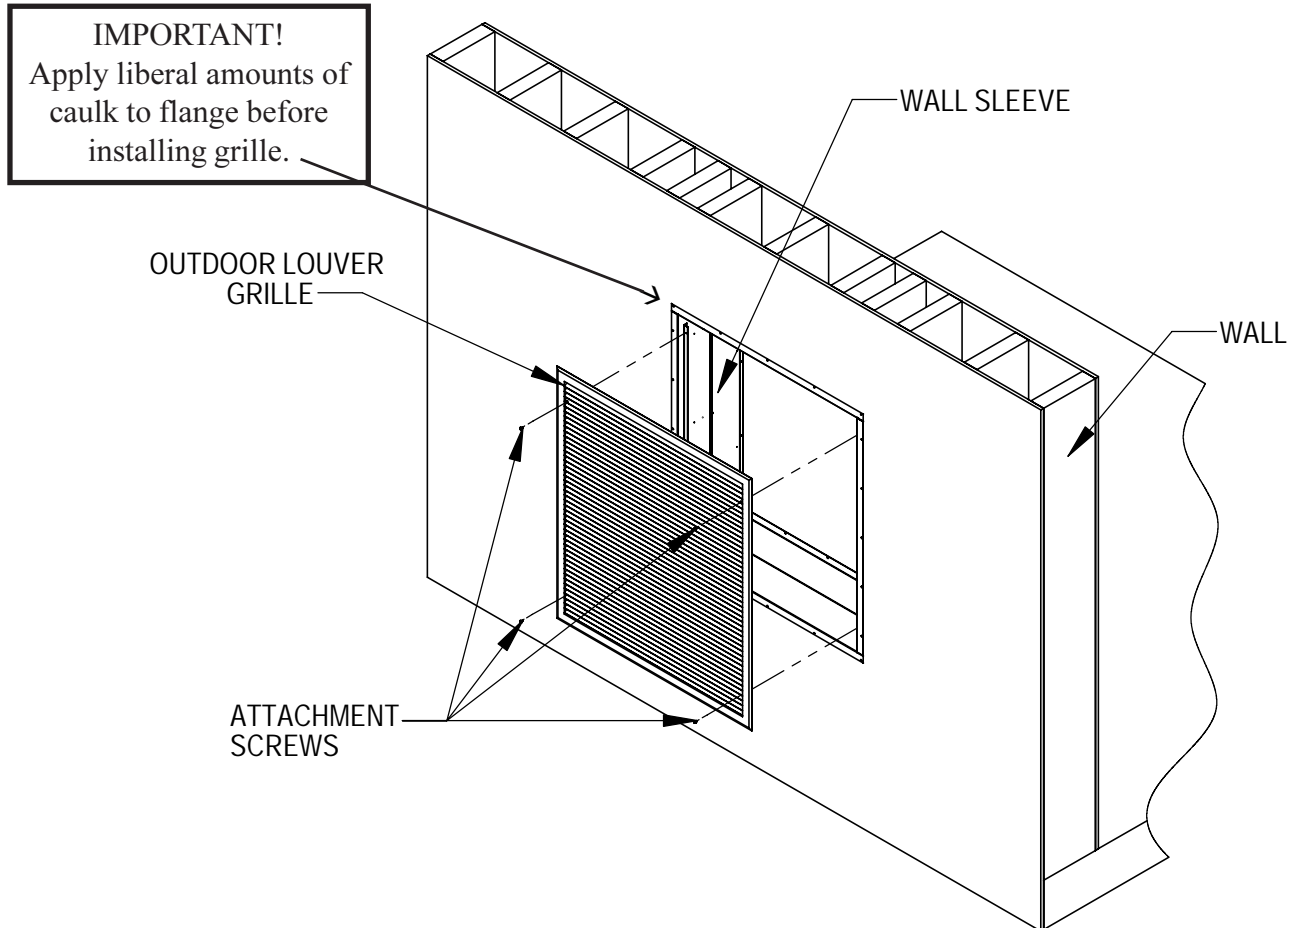

MIS-2930

1. Remove the four screws holding the weatherization panel to the wall sleeve and discard.
2. Remove the weatherization panel and discard.
3. Apply a liberal amount of caulk all the way around the sleeve flange.
4. Position the Outdoor Louver Grille in the sleeve opening. The louvers must be facing downward.
5. The Outdoor Louver Grille flanges should touch the sleeve flanges on the outside wall.
6. Locate the four mounting holes in the Outdoor Louver Grille (look under the louvers).
7. The Outdoor Louver Grille fastens through the same holes in the sleeve as the weather panel.
8. Insert the 1½" screws (provided) through the grille mounting holes and attach the Outdoor Louver Grille using the mounting holes provided in the sleeve.