


---

# INSTALLATION INSTRUCTIONS

---

## OUTDOOR LOUVER GRILLE ILS1-\*\*, ILA2-\*\*, ILST4-\*\*

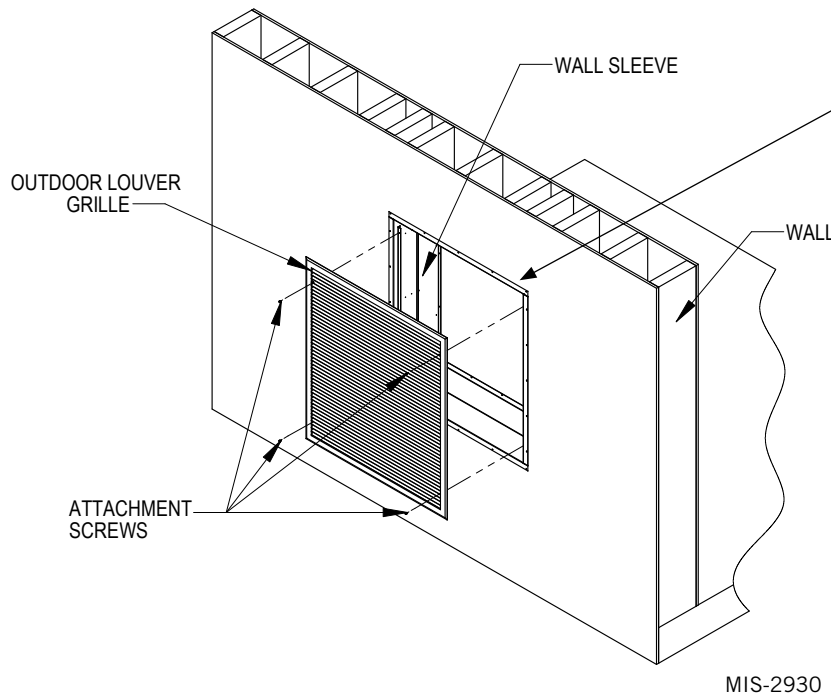

### IMPORTANT!

Apply liberal amounts of caulk to wall sleeve flange before installing grille.

1. Remove the four screws holding the weatherization panel to the wall sleeve and discard.
2. Remove the weatherization panel and discard.
3. Apply a liberal amount of caulk all the way around the wall sleeve flange.
4. Position the outdoor louver grille in the wall sleeve opening. The louvers must be facing downward.
5. The outdoor louver grille flanges should touch the wall sleeve flanges on the outside wall.
6. Locate the four mounting holes in the outdoor louver grille (look under the louvers). The outdoor louver grille fastens through the same holes in the sleeve as the weatherization panel.
7. Insert the 1½" screws (provided) through the grille mounting holes and attach the outdoor louver grille using the mounting holes provided in the sleeve.



Climate Control Solutions

Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
www.bardhvac.com

Manual: 7960-742  
Supersedes: **NEW**  
Date: 4-18-16