
SUPPLEMENTAL INSTRUCTIONS

Exporting Parameters on LC6000-200 Controller

These instructions detail the process for exporting parameters on the LC6000-200 controller.

Tools and Supplies Needed

- Laptop computer
- USB cable
- Personal anti-static grounding strap

INSTRUCTIONS


IMPORTANT: Bard recommends the use of personal grounding straps to prevent static electricity shorts to electronic controls.

To export an alarm log:

1. Press MENU key to go to the Main Menu screen.
2. Use UP or DOWN keys and ENTER key to enter USER password 1313.
3. Press UP or DOWN keys to scroll to **Settings**; press ENTER key.
4. Press UP or DOWN keys to scroll to **Initialization**; press ENTER key.
5. Press UP or DOWN keys to scroll to **Params Import/Export**; press ENTER key.
6. Press ENTER key to scroll to **File Name** (see Figure 1).

NOTE: Make sure **Memory type** is set as **INTERNAL FLASH MEMORY** to ensure proper download.

FIGURE 1

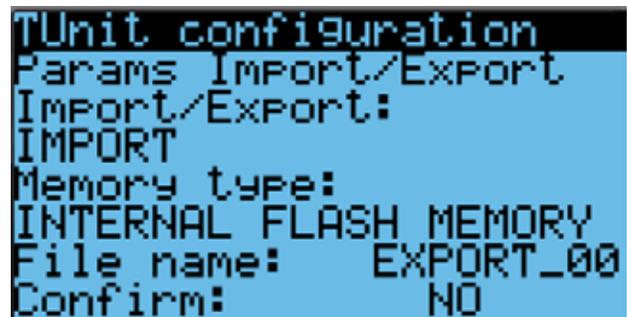

7. Press UP or DOWN key to change the EXPORT number, if desired.
8. Press ENTER key to scroll to **Confirm?**
9. Press UP or DOWN key to change value to **YES**; press ENTER key.
10. After download is complete, the **Operation done** screen will appear (see Figure 2).

FIGURE 2



Climate Control Solutions

Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 7960-827
Supersedes: **NEW**
Date: 12-17-18

NOTE: Do not connect the LC6000 control board to the laptop using the USB cable before exporting as this will cause a **Cannot access file** message to appear and the log will not be saved. If this happens, remove USB connection, press ESCAPE key and redo Step 8.

11. Connect one end of USB cable to the short USB adapter cable on LC6000-200 control board (see Figure 3). Connect other end of USB cable to laptop.

12. Once the connection has been made between control board and laptop, the laptop screen should display as shown in Figure 4. The LC6000 will export the parameters as a text file.

This completes the software update process.

FIGURE 3

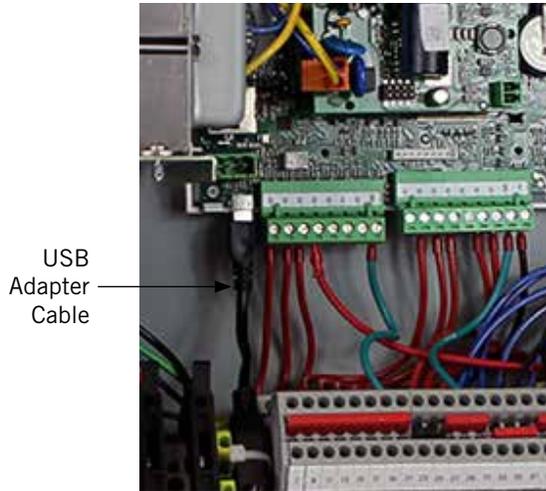


FIGURE 4

Name	Date modified	Type	Size
LC6000_Config	12/13/2018 2:25 PM	File	2 KB
EXPORT_1.txt	12/13/2018 2:26 PM	Text Document	21 KB
UPGRADE	1/1/2000 12:00 AM	File folder	
HTTP	1/1/2000 10:35 PM	File folder	