



# 50HZ Export Air Conditioners

## Specification Sheets

### 9 EER Efficiency Rating

### W\*\*A Series Wall-Mount™ Air Conditioners (50hz) (R-410A Refrigerant)

Document #	Tonnage	Description
<a href="#">S3408</a>	2.0 – 6.0	W24A1, W30A1, W36A1, W42A1, W48A1, W60A1, W70A1

### W\*\*V Series Variable Capacity Wall-Mount™ ECU (50/60hz) (R-410A)

Document #	Tonnage	Description
<a href="#">S3426</a>	3.0 – 6.0	W3RV1, W5RV1, W6RV1 W3LV1, W5LV1, W6LV1

### WE Series Wall-Mount™ Air Conditioners (50hz) (R-407C Refrigerant)

Document #	Tonnage	Description
<a href="#">S3354</a>	1.0	WE121-G Series (R-407C)
<a href="#">S3355</a>	2.0 – 6.0	WE252, WE301, WE371, WE421, WE482, WE602, WE701 (R-407C)

### Optional Wall-Mount Accessories

Document #	Description
<a href="#">S3370</a>	WUVCLP Series Wall-Mount UV-C Light Package
<a href="#">Grille Link</a>	Supply & Return Air Grille Submittal Information
<a href="#">TechniCoat Link</a>	Phenolic Coated Coil Option Information
<a href="#">Thermostat Link</a>	Bard Thermostat Information & Installation Instructions
<a href="#">Serial Number Link</a>	Bard Serial Number Nomenclature Matrix

### Package Variable Capacity ECU (50/60hz) (R-410A)

Document #	Tonnage	Description
TBR	5.0 – 6.0	P60RV1-R P72RV1-S P72RV1-T P60LV1-R P72LV1-S P72LV1-T



# 50HZ Export Air Conditioners

## W Series (Right-Hand) Wall-Mount™ A/C (50hz) (R-410A Refrigerant)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
W24A1-D	911-0493	<a href="#">2100-508</a>	<a href="#">2110-483</a>	<a href="#">4095-143</a>
W24A1-F	911-0493	<a href="#">2100-508</a>	<a href="#">2110-483</a>	<a href="#">4095-632</a>
W30A1-D	911-0489	<a href="#">2100-508</a>	<a href="#">2110-482</a>	<a href="#">4095-143</a>
W30A1-F	911-0489	<a href="#">2100-508</a>	<a href="#">2110-482</a>	<a href="#">4095-632</a>
W36A1-D	911-0489	<a href="#">2100-508</a>	<a href="#">2110-482</a>	<a href="#">4095-143</a>
W36A1-E	911-0489	<a href="#">2100-508</a>	<a href="#">2110-482</a>	<a href="#">4095-242</a>
W36A1-F	911-0489	<a href="#">2100-508</a>	<a href="#">2110-482</a>	<a href="#">4095-632</a>
W42A1-E	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-243</a>
W42A1-F	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-634</a>
W48A1-E	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-243</a>
W48A1-F	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-634</a>
W60A1-E	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-243</a>
W60A1-F	911-0491	<a href="#">2100-508</a>	<a href="#">2110-481</a>	<a href="#">4095-634</a>
Supplemental 50hz Electrical Data For The Above Units			<a href="#">7960-574</a>	
W70A1-P	911-0505	<a href="#">2100-508</a>	<a href="#">2110-490</a>	<a href="#">4095-633</a>

## W Series (Left-Hand) Wall-Mount™ A/C (50hz) (R-410A Refrigerant)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
W24L1-F	911-0494	<a href="#">2100-508</a>	<a href="#">2110-486</a>	<a href="#">4095-632</a>
W36L1-F	911-0490	<a href="#">2100-508</a>	<a href="#">2110-486</a>	<a href="#">4095-632</a>
W42L1-F	911-0497	<a href="#">2100-508</a>	<a href="#">2110-484</a>	<a href="#">4095-634</a>
W48L1-F	911-0497	<a href="#">2100-508</a>	<a href="#">2110-484</a>	<a href="#">4095-634</a>
W60L1-F	911-0497	<a href="#">2100-508</a>	<a href="#">2110-484</a>	<a href="#">4095-634</a>
Supplemental 50hz Electrical Data For The Above Units			<a href="#">7960-574</a>	
W70L1-P	911-0505	<a href="#">2100-508</a>	<a href="#">2110-490</a>	<a href="#">4095-633</a>
Supplemental 50hz Electrical Data For The Above Units			<a href="#">7960-574</a>	



# 50HZ Export Air Conditioners

## WE Series (Right-Hand) Wall-Mount™ A/C (50hz) (R-407C Refrigerant)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
WE121-G	911-0357	<a href="#">2100-384</a>	<a href="#">2110-447</a>	<a href="#">4095-115</a>
WE253-D	911-0358	<a href="#">2100-385</a>	<a href="#">2110-448</a>	<a href="#">4095-128</a>
WE253-F	911-0358	<a href="#">2100-385</a>	<a href="#">2110-448</a>	<a href="#">4095-620</a>
Supplemental 50hz Electrical Data For The Above Units			<a href="#">7960-457</a>	
WE302-D	911-0359	<a href="#">2100-385</a>	<a href="#">2110-449</a>	<a href="#">4095-128</a>
WE302-F	911-0359	<a href="#">2100-385</a>	<a href="#">2110-449</a>	<a href="#">4095-620</a>
WE372-D	911-0359	<a href="#">2100-385</a>	<a href="#">2110-449</a>	<a href="#">4095-128</a>
WE372-F	911-0359	<a href="#">2100-385</a>	<a href="#">2110-449</a>	<a href="#">4095-620</a>
WE422-F	911-0360	<a href="#">2100-385</a>	<a href="#">2110-450</a>	<a href="#">4095-623</a>
WE483-F	911-0360	<a href="#">2100-385</a>	<a href="#">2110-450</a>	<a href="#">4095-623</a>
WE603-F	911-0360	<a href="#">2100-385</a>	<a href="#">2110-450</a>	<a href="#">4095-623</a>
WE702-F	911-0361	<a href="#">2100-385</a>	<a href="#">2110-451</a>	<a href="#">4095-627</a>
Supplemental 50hz Electrical Data For The Above Units			<a href="#">7960-249</a>	

## W\*\*V Series Variable Capacity Wall-Mount™ ECU (50/60hz) (R-410A)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
W3RV1-R	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-157</a>
W3RV1-S	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-254</a>
W3RV1-T	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-354</a>
W5RV1-R	911-0539	<a href="#">2100-538</a>	<a href="#">2110-496</a>	<a href="#">4095-157</a>
W5RV1-S	911-0539	<a href="#">2100-538</a>	<a href="#">2110-496</a>	<a href="#">4095-254</a>
W5RV1-T	911-0539	<a href="#">2100-538</a>	<a href="#">2110-496</a>	<a href="#">4095-354</a>
W6RV1-S	911-0543	<a href="#">2100-538</a>	<a href="#">2110-497</a>	<a href="#">4095-254</a>
W6RV1-T	911-0543	<a href="#">2100-538</a>	<a href="#">2110-497</a>	<a href="#">4095-354</a>
W3RL1-R	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-157</a>
W3RL1-S	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-254</a>
W3RL1-T	911-0536	<a href="#">2100-538</a>	<a href="#">2110-495</a>	<a href="#">4095-354</a>



# 50HZ Export Air Conditioners

## W\*\*V Series Variable Capacity Wall-Mount™ ECU (50/60hz) (R-410A)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
W5LV1-R		<a href="#">2100-538</a>		
W5LV1-S		<a href="#">2100-538</a>		
W5LV1-T		<a href="#">2100-538</a>		
W6LV1-S		<a href="#">2100-538</a>		
W6LV1-T		<a href="#">2100-538</a>		
	<a href="#">2100-559</a>			8403-066 ECU Series Controller Installation Operation & Quick Start
	<a href="#">2100-560</a>			8403-066 ECU Series Controller Advanced Programming & Features

## Package Variable Capacity ECU (50/60hz) (R-410A) (Right Hand Access)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
P60RV1-R				
P72RV1-S				
P72RV1-T				
				8403-066 ECU Series Controller Installation Operation & Quick Start
				8403-066 ECU Series Controller Advanced Programming & Features

## Package Variable Capacity ECU (50/60hz) (R-410A) (Left Hand Access)

Model	Literature Assembly	Installation Manual	Parts Manual	Wiring Diagram
P60LV1-R				
P72LV1-S				
P72LV1-T				
				8403-066 ECU Series Controller Installation Operation & Quick Start
				8403-066 ECU Series Controller Advanced Programming & Features