



# Bard Ventilation Options

## Motorized Fresh Air Damper Ventilation Options (MFAD)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
MFAD-2		<a href="#">2100-225</a>	<a href="#">2110-658</a>	
MFAD-3		<a href="#">2100-225</a>	<a href="#">2110-658</a>	
MFAD-5		<a href="#">2100-225</a>	<a href="#">2110-658</a>	

## Commercial Room Ventilator Options (CRV)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
CRVS-1		<a href="#">2100-529</a>	<a href="#">2110-693</a>	<a href="#">4056-205</a>
CRV-2		<a href="#">2100-206</a>	<a href="#">2110-656</a>	<a href="#">4056-121</a>
CRVS-3		<a href="#">2100-448</a>	<a href="#">2110-684</a>	<a href="#">4056-189</a>
CRVP-3		<a href="#">2100-448</a>	<a href="#">2110-684</a>	<a href="#">4056-180</a>
CRVP-L3		<a href="#">2100-448</a>	<a href="#">2110-684</a>	<a href="#">4056-196</a>
CRVS-5		<a href="#">2100-458</a>	<a href="#">2110-684</a>	<a href="#">4056-189</a>
CRVP-5		<a href="#">2100-458</a>	<a href="#">2110-684</a>	<a href="#">4056-180</a>
CRVP-L5		<a href="#">2100-458</a>	<a href="#">2110-684</a>	<a href="#">4056-196</a>
CPVE6-A-X	WH381-WH612	<a href="#">2100-396</a>		<a href="#">4056-177</a>
CPVE6-A-4	WH381-WH612	<a href="#">2100-396</a>		<a href="#">4056-177</a>
CPVE6-C-X	WH381-WH612	<a href="#">2100-396</a>		<a href="#">4056-304</a>
CPVE6-C-4	WH381-WH612	<a href="#">2100-396</a>		<a href="#">4056-304</a>
CRVMP-5		<a href="#">2100-457</a>	<a href="#">2110-686</a>	<a href="#">4056-159</a>
CHCRV-5	CH	<a href="#">2100-450</a>	<a href="#">2110-1108</a>	



# Bard Ventilation Options

<b>Economizer Ventilation Options (EIFM)</b>				
<b>Models</b>	<b>Applicable Models</b>	<b>Installation Manual</b>	<b>Parts Manual</b>	<b>Wiring Diagram</b>
EIFM-1B		<a href="#">2100-389</a>	<a href="#">2110-679</a>	<a href="#">4056-137</a>
EIFM-2B		<a href="#">2100-390</a>	<a href="#">2110-678</a>	<a href="#">4056-135</a>
EIFM-3B		<a href="#">2100-390</a>	<a href="#">2110-678</a>	<a href="#">4056-135</a>
EIFM-5B		<a href="#">2100-391</a>	<a href="#">2110-678</a>	<a href="#">4056-135</a>
EIFM-3C		<a href="#">2100-449</a>	<a href="#">2110-683</a>	
EIFM-5C		<a href="#">2100-447</a>	<a href="#">2110-683</a>	
EDFM-2		<a href="#">2100-271</a>	<a href="#">2110-662</a>	
EDFM-3A		<a href="#">2100-271</a>	<a href="#">2110-662</a>	
EDFM-5A		<a href="#">2100-276</a>	<a href="#">2110-662</a>	
CHEIFM-5-*	CH	<a href="#">2100-485</a>	<a href="#">2110-689</a>	

<b>Energy Recovery Ventilator Options (ERV / WERV)</b>				
<b>Models</b>	<b>Applicable Models</b>	<b>Installation Manual</b>	<b>Parts Manual</b>	<b>Wiring Diagram</b>
ERVF-A2		<a href="#">2100-514</a>	<a href="#">2110-692</a>	<a href="#">4056-198</a>
ERVF-C2		<a href="#">2100-514</a>	<a href="#">2110-692</a>	<a href="#">4056-309</a>
ERVF-A3		<a href="#">2100-512</a>	<a href="#">2110-692</a>	<a href="#">4056-199</a>
ERVF-C3		<a href="#">2100-512</a>	<a href="#">2110-692</a>	<a href="#">4056-310</a>
ERVF-A5		<a href="#">2100-513</a>	<a href="#">2110-692</a>	<a href="#">4056-200</a>
ERVF-C5		<a href="#">2100-513</a>	<a href="#">2110-692</a>	<a href="#">4056-311</a>
WERV-A2B		<a href="#">2100-469</a>	<a href="#">2110-687</a>	<a href="#">4056-153</a>
WERV-C2B		<a href="#">2100-469</a>	<a href="#">2110-687</a>	<a href="#">4056-302</a>
WERV-A3C		<a href="#">2100-469</a>	<a href="#">2110-687</a>	<a href="#">4056-306</a>
WERV-C3C		<a href="#">2100-469</a>	<a href="#">2110-687</a>	<a href="#">4056-306</a>
WERV-A5C		<a href="#">2100-470</a>	<a href="#">2110-687</a>	<a href="#">4056-307</a>
WERV-C5C		<a href="#">2100-470</a>	<a href="#">2110-687</a>	<a href="#">4056-307</a>
WERV Pulley and Belt Replacement Instructions				<a href="#">7960-514</a>
WERV Cassette Bearing Replacement Instructions				<a href="#">7960-541</a>
CHERV-A5-*	CH	<a href="#">2100-477</a>	<a href="#">2110-688</a>	<a href="#">4056-192</a>
CHERV-C5-+	CH	<a href="#">2100-477</a>	<a href="#">2110-688</a>	<a href="#">4056-192</a>



# Bard Ventilation Options

## CT242 Series Wall-Mount™ Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
EIFMC-2X	CT	<a href="#">2100-320</a>	<a href="#">2110-673</a>	<a href="#">4056-170</a>

## WF Series Wall-Furnace Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WFBOP-A	WF	<a href="#">7960-560</a>		
WFBFAD-A	WF	<a href="#">7960-558</a>		
WFCRVS	WF	<a href="#">2100-491</a>	<a href="#">2110-1109</a>	
WFCRVP	WF	<a href="#">2100-491</a>		
WFERV-*	WF	<a href="#">2100-495</a>		

## WG-W\*\*G Series Gas/Electric Wall-Mount™ Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WGBFAD-3	WG	<a href="#">7960-453</a>		
WGBFAD-5	WG	<a href="#">7960-453</a>		
WGMFAD-3	WG	<a href="#">2100-362</a>	<a href="#">2110-1100</a>	<a href="#">4056-172</a>
WGMFAD-5	WG	<a href="#">2100-362</a>	<a href="#">2110-1100</a>	<a href="#">4056-172</a>
WGCRVS-3	WG	<a href="#">2100-363</a>	<a href="#">2110-1101</a>	<a href="#">4056-173</a>
WGCRVS-3A	W**G	<a href="#">2100-524</a>	<a href="#">2110-1113</a>	<a href="#">4056-203</a>
WGCRVS-5	WG	<a href="#">2100-363</a>	<a href="#">2110-1101</a>	<a href="#">4056-173</a>
WGCRVS-5A	W**G	<a href="#">2100-524</a>	<a href="#">2110-1113</a>	<a href="#">4056-203</a>
WGCRVP-3	WG	<a href="#">2100-363</a>	<a href="#">2110-1101</a>	<a href="#">4056-171</a>
WGCRVP-3A	W**G		<a href="#">2110-1113</a>	
WGCRVP-5	WG	<a href="#">2100-363</a>	<a href="#">2110-1101</a>	<a href="#">4056-171</a>
WGCRVP-5A	W**G		<a href="#">2110-1113</a>	



# Bard Ventilation Options

## WG Series Gas/Electric Wall-Mount™ Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WGSCRVMP-5	WG*S	<a href="#">2100-499</a>	<a href="#">2110-686</a>	<a href="#">4056-195</a>
WGEIFM-3B	WG	<a href="#">2100-378</a>	<a href="#">2110-1103</a>	<a href="#">4056-176</a>
WGEIFM-5B	WG		<a href="#">2110-1103</a>	<a href="#">4056-176</a>
WGSEIFM-5	WG*S	<a href="#">2100-498</a>	<a href="#">2110-683</a>	<a href="#">4056-176</a>
WGERV-A3-*	WG	<a href="#">2100-364</a>	<a href="#">2110-1102</a>	<a href="#">4056-174</a>
WGERV-A5-*	WG	<a href="#">2100-364</a>	<a href="#">2110-1102</a>	<a href="#">4056-174</a>
	WERV Pulley and Belt Replacement Instructions			<a href="#">7960-514</a>
	WERV Cassette Bearing Replacement Instructions			<a href="#">7960-541</a>
WGERV-A3B-*	W**G	<a href="#">2100-534</a>	<a href="#">2110-1115</a>	<a href="#">4056-206</a>
WGERV-A5B-*	W**G	<a href="#">2100-534</a>	<a href="#">2110-1115</a>	<a href="#">4056-206</a>
WGERV-C3B-*	W**G	<a href="#">2100-534</a>	<a href="#">2110-1115</a>	<a href="#">4056-312</a>
WGERV-C5B-*	W**G	<a href="#">2100-534</a>	<a href="#">2110-1115</a>	<a href="#">4056-312</a>
WGSERV-A5-*	WG*S	<a href="#">2100-364</a>	<a href="#">2110-1102</a>	<a href="#">4056-183</a>
WGSERV-C5-*	WG*S	<a href="#">2100-364</a>	<a href="#">2110-1102</a>	<a href="#">4056-184</a>



# Bard Ventilation Options

## Q-Tec Series

### Commercial Room Ventilation Option

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QCRV-4	QA, QC, QH, QW	<a href="#">2100-305</a>	<a href="#">2110-667</a>	
QCRV-P	QA, QC, QH, QW	<a href="#">2100-305</a>	<a href="#">2110-667</a>	
QWSCRV	QW*S	<a href="#">2100-531</a>	<a href="#">2110-1114</a>	

## Q-Tec Series

### Energy Recovery Ventilator Option

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QH 920-0031 QW 920-0032	QA, QC, QH, QW	<a href="#">2100-473</a>	<a href="#">2110-1003</a>	
Thermostat Programming Sheet For Energy Recovery				<a href="#">7960-436</a>
QWSERV	QW*S	<a href="#">2100-533</a>	<a href="#">2110-1004</a>	<a href="#">4114-100</a>

## Q-Tec Series

### Economizer Option

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QEFM-5	(QA Series Only)	<a href="#">2100-436</a>	<a href="#">2110-681</a>	

## PA / PH Series

### Energy Recovery Ventilator Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ERVR-A3D-X ERVR-C3D-X	P / PA13 PH / PH13	<a href="#">2100-445</a>	<a href="#">2110-956</a>	