



Bard Ventilation Options

Motorized Fresh Air Damper Ventilation Options (MFAD)				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
MFAD-2		2100-225	2110-658	
MFAD-3		2100-225	2110-658	
MFAD-5		2100-225	2110-658	

Commercial Room Ventilator Options (CRV)				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
CRVS-1		2100-529	2110-693	4056-205
CRV-2		2100-206	2110-656	4056-121
CRVS-3		2100-448	2110-684	4056-189
CRVP-3		2100-448	2110-684	4056-180
CRVP-L3		2100-448	2110-684	4056-196
CRVS-5		2100-458	2110-684	4056-189
CRVP-5		2100-458	2110-684	4056-180
CRVP-L5		2100-458	2110-684	4056-196
CPVE6-A-X	WH381- WH612	2100-396		4056-177
CPVE6-A-4	WH381- WH612	2100-396		4056-177
CPVE6-C-X	WH381- WH612	2100-396		4056-304
CPVE6-C-4	WH381- WH612	2100-396		4056-304
CRVMWH-3	T**H / T**S	2100-556	2110-684	4056-187
CRVMP-5		2100-457	2110-686	4056-159
CHCRV-5	CH	2100-450	2110-1108	



Bard Ventilation Options

EIFM Series Economizer Ventilation Options

(Enthalpy Type Control)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
EIFM-1B	W12A	2100-389	2110-679	4056-137
EIFM-2B	W17A-W24A	2100-390	2110-678	4056-135
EIFM-3B	W30A-W36A	2100-390	2110-678	4056-135
EIFM-5B	W42A-W70A	2100-391	2110-678	4056-135
EIFM-3C	W30A-W36A	2100-449	2110-683	
EIFM-5C	W42A-W70A	2100-447	2110-683	
EDFM-2	W17A-W24A	2100-271	2110-662	
EDFM-3A	W30A-W36A	2100-271	2110-662	
EDFM-5A	W42A-W70A	2100-276	2110-662	
CHEIFM-5-*	CH	2100-485	2110-689	

ECONWMT-E Series

Telecom Economizer Ventilation Options

(Enthalpy Type Control)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ECONWMT-E5X		2100-561	2110-694	4056-212
ECONWMT-E51		2100-561	2110-694	4056-212
ECONWMT-E54		2100-561	2110-694	4056-212
ECONWMT-E55		2100-561	2110-694	4056-212
ECONWMT-E58		2100-561	2110-694	4056-212

ECONWMT-T Series

Telecom Economizer Ventilation Options

(Dry Bulb Type Control)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ECONWMT-T5X		2100-561	2110-694	4056-212
ECONWMT-T51		2100-561	2110-694	4056-212
ECONWMT-T54		2100-561	2110-694	4056-212
ECONWMT-T55		2100-561	2110-694	4056-212
ECONWMT-T58		2100-561	2110-694	4056-212



Bard Ventilation Options

ECONWMS-E Series Classroom Economizer Ventilation Options

(Enthalpy Type Control)

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ECONWMS-E2X		2100-564	2110-694	4056-212
ECONWMS-E21		2100-564	2110-694	4056-212
ECONWMS-E24		2100-564	2110-694	4056-212
ECONWMS-E25		2100-564	2110-694	4056-212
ECONWMS-E28		2100-564	2110-694	4056-212
ECONWMS-E3X		2100-564	2110-694	4056-212
ECONWMS-E31		2100-564	2110-694	4056-212
ECONWMS-E34		2100-564	2110-694	4056-212
ECONWMS-E35		2100-564	2110-694	4056-212
ECONWMS-E38		2100-564	2110-694	4056-212
ECONWMS-E5X		2100-564	2110-694	4056-212
ECONWMS-E51		2100-564	2110-694	4056-212
ECONWMS-E54		2100-564	2110-694	4056-212
ECONWMS-E55		2100-564	2110-694	4056-212
ECONWMS-E58		2100-564	2110-694	4056-212

CT242 Series Wall-Mount™ Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
EIFMC-2X	CT	2100-320	2110-673	4056-170



Bard Ventilation Options

Energy Recovery Ventilator Options (ERVR / WERV)				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ERVF-A2		2100-514	2110-692	4056-198
ERVF-C2		2100-514	2110-692	4056-309
ERVF-A3		2100-512	2110-692	4056-199
ERVF-C3		2100-512	2110-692	4056-310
ERVF-A5		2100-513	2110-692	4056-200
ERVF-C5		2100-513	2110-692	4056-311
WERV-A2B		2100-469	2110-687	4056-153
WERV-C2B		2100-469	2110-687	4056-302
WERV-A3C		2100-469	2110-687	4056-306
WERV-C3C		2100-469	2110-687	4056-306
WERV-A5C		2100-470	2110-687	4056-307
WERV-C5C		2100-470	2110-687	4056-307
				7960-514
				7960-541

WERV Pulley and Belt Replacement Instructions
WERV Cassette Bearing Replacement Instructions

Energy Recovery Ventilator Options (ERVR / WERV)				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
CHERV-A5-*	CH	2100-477	2110-688	4056-192
CHERV-C5-+	CH	2100-477	2110-688	4056-192



Bard Ventilation Options

WF Series Wall-Furnace Ventilation Options				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WFBOP-A	WF	7960-560		
WBFAD-A	WF	7960-558		
WFCRVS	WF	2100-491	2110-1109	
WFCRVP	WF	2100-491		
WFERV-*	WF	2100-495		

WG-W**G Series Gas/Electric Wall-Mount™ Ventilation Options				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WGBFAD-3	WG	7960-453		
WGBFAD-5	WG	7960-453		
WGMFAD-3	WG	2100-362	2110-1100	4056-172
WGMFAD-5	WG	2100-362	2110-1100	4056-172
WGCRVS-3	WG	2100-363	2110-1101	4056-173
WGCRVS-3A	W**G	2100-524	2110-1113	4056-203
WGCRVS-5	WG	2100-363	2110-1101	4056-173
WGCRVS-5A	W**G	2100-524	2110-1113	4056-203
WGCRVP-3	WG	2100-363	2110-1101	4056-171
WGCRVP-3A	W**G		2110-1113	
WGCRVP-5	WG	2100-363	2110-1101	4056-171
WGCRVP-5A	W**G		2110-1113	
WGSCRVMP-5	WG*S	2100-499	2110-686	4056-195
WGEIFM-3B	WG	2100-378	2110-1103	4056-176
WGEIFM-5B	WG		2110-1103	4056-176
WGSEIFM-5	WG*S	2100-498	2110-683	4056-176



Bard Ventilation Options

WG Series Gas/Electric Wall-Mount™ Ventilation Options

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
WGERV-A3-*	WG	2100-364	2110-1102	4056-174
WGERV-A5-*	WG	2100-364	2110-1102	4056-174
	WERV Pulley and Belt Replacement Instructions			7960-514
	WERV Cassette Bearing Replacement Instructions			7960-541
WGERV-A3B-*	W**G	2100-534	2110-1115	4056-206
WGERV-A5B-*	W**G	2100-534	2110-1115	4056-206
WGERV-C3B-*	W**G	2100-534	2110-1115	4056-312
WGERV-C3C-*	W**G	2100-534	2110-1115	4056-313
WGERV-C5B-*	W**G	2100-534	2110-1115	4056-312
WGERV-C5C-*	W**G	2100-534	2110-1115	4056-313
WGSERV-A5-*	WG*S	2100-364	2110-1102	4056-183
WGSERV-A5A-*	WG*S	2100-534	2110-1102	4056-206
WGSERV-C5-*	WG*S	2100-364	2110-1102	4056-184
WGSERV-C5A-*	WG*S	2100-534	2110-1102	4056-313

Q-Tec Series

Commercial Room Ventilation Option

Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QCRV-4	QA, QC, QH, QW	2100-305	2110-667	
QCRV-P	QA, QC, QH, QW	2100-305	2110-667	
QWSCRV	QW*S	2100-531	2110-1114	



Bard Ventilation Options

Q-Tec Series				
Energy Recovery Ventilator Option				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QH 920-0031 QW 920-0032	QA, QC, QH, QW	2100-473	2110-1003	
				Thermostat Programming Sheet For Energy Recovery 7960-436
QWSERV	QW*S	2100-533	2110-1004	4114-100

Q-Tec Series				
Economizer Option				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
QEFM-5	(QA Series Only)	2100-436	2110-681	

PA / PH Series				
Energy Recovery Ventilator Options				
Models	Applicable Models	Installation Manual	Parts Manual	Wiring Diagram
ERVR-A3D-X ERVR-C3D-X	P / PA13 PH / PH13	2100-445	2110-956	