

# **INSTALLATION INSTRUCTIONS**

## **WALL MOUNTED PACKAGE AIR CONDITIONERS**

### **MODELS**

**WA181**

**WA241**

**MANUAL 2100-200 REV. D  
SUPERSEDES REV. C  
FILE VOL. III, TAB 16**

## SECTION 1 --GETTING OTHER INFORMATION AND PUBLICATIONS

These publications can help you install the air conditioner or heat pump. You can usually find these at your local library or purchase them directly from the publisher. Be sure to consult current edition of each standard.

National Electrical Code	-ANSI/NFPA 70
Standard For The Installation Of Air Conditioning and Ventilating Systems	-ANSI/NFPA 90A
Standard For Warm Air Heating and Air Conditioning Systems	-ANSI/NFPA 90B
Load Calculation For Residential Winter and Summer Air Conditioning	-ACCA Manual J
Duct Design For Residential Winter and Summer Air Conditioning and Equipment Selection	-ACCA Manual D

---

### FOR MORE INFORMATION, CONTACT THESE PUBLISHERS

<b>ACCA:</b>	<b>AIR CONDITIONING CONTRACTORS OF AMERICA</b> 1513 16th Street NW Washington, DC 20036 Telephone: (202) 483-9370	Fax: (202) 234-4721
<b>ANSI:</b>	<b>AMERICAN NATIONAL STANDARDS INSTITUTE</b> 11 West Street, 13th Floor New York, NY 10036 Telephone: (212) 642-4900	Fax: (212) 302-1286
<b>ASHRAE:</b>	<b>AMERICAN SOCIETY OF HEATING REFRIGERATING AND AIR CONDITIONING ENGINEERS, INCORPORATED</b> 1791 Tullie Circle, N.E. Atlanta, GA 30329-2305 Telephone: (404) 636-8400	Fax: (404) 321-5478
<b>NFPA:</b>	<b>NATIONAL FIRE PROTECTION ASSOCIATION</b> Batterymarch Park P. O. Box 9101 Quincy, MA 02269-9901 Telephone: (800) 344-3555	Fax: (617) 984-7057

COPYRIGHT JUNE, 1992  
BARD MANUFACTURING COMPANY  
BRYAN, OH 43506 USA

# TABLE OF CONTENTS

## PART 1 -- WALL MOUNT--GENERAL INSTALLATION INFORMATION

Air Conditioner Wall Mount Model Nomenclature . . . . .	1
Shipping Damage . . . . .	1
General . . . . .	4
Duct Work . . . . .	4
Filters . . . . .	5
Fresh Air Intake . . . . .	5
Condensate Drain . . . . .	5

## PART 2 -- INSTALLATION

Wall Mounting Information . . . . .	5
Mounting The Unit . . . . .	5

### WIRING

Wiring--Main Power . . . . .	7
Wiring: Low Voltage Wiring . . . . .	7

## PART 3 -- START-UP

Important Installer Note . . . . .	9
Crankcase Heaters . . . . .	9
Service Hints . . . . .	9
Sequence of Operation . . . . .	9
Pressure Service Ports . . . . .	10

## PART 4 -- TROUBLESHOOTING

Fan Blade Setting Dimensions . . . . .	10
Removal of The Fan Shroud . . . . .	10
Refrigerant Charge . . . . .	11
Pressure Tables . . . . .	12
Optional Accessories. . . . .	13


## FIGURES AND TABLES

Figure 1	Unit Dimensions . . . . .	2
Figure 2	Mounting Locations . . . . .	6
Figure 3	Unit 24V Terminal Board . . . . .	8
Figure 4	Start-Up . . . . .	9
Figure 5	Fan Blade Setting . . . . .	10

Table 1	Electric Heat Table . . . . .	1
Table 2	Electrical Specifications . . . . .	3
Table 3	Thermostat Wire Sizes . . . . .	7
Table 4	Fan Blade Setting . . . . .	10
Table 5	Refrigerant Charge . . . . .	11
Table 6	Indoor Blower Performance . . . . .	11
Table 7	Recommended Operating Ranges . . . . .	11
Table 8	Maximum ESP of Operation . . . . .	11
Table 9	Cooling--Pressure (PSI) . . . . .	12
Table 10	Optional Accessories . . . . .	13

# PART 1 -- WALL MOUNT GENERAL INFORMATION

## AIR CONDITIONER WALL MOUNT MODEL NOMENCLATURE

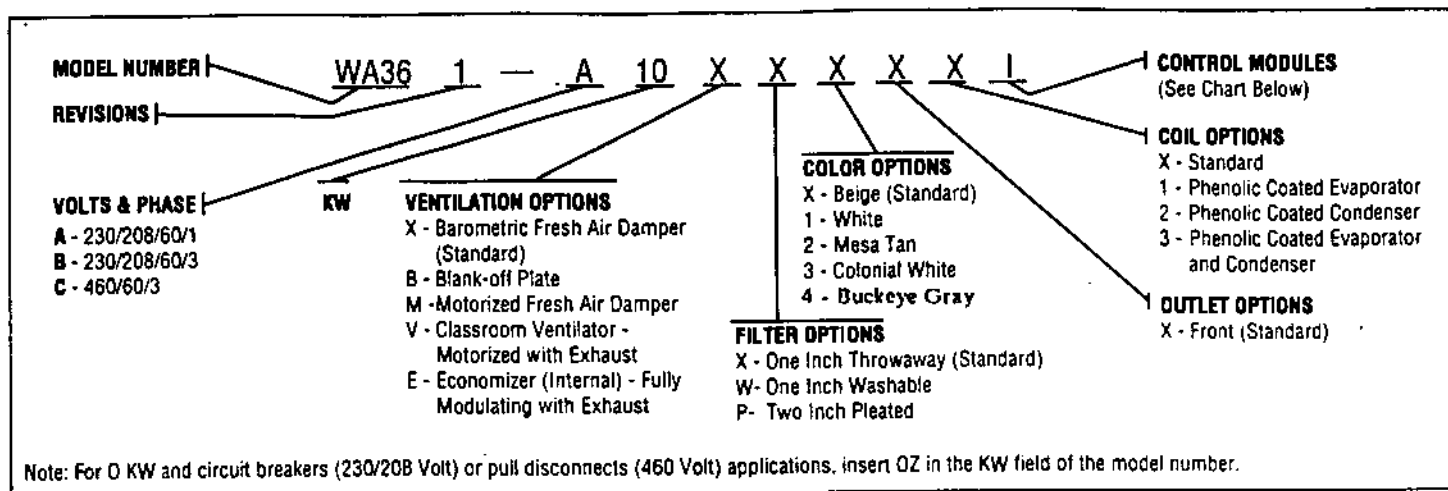

**TABLE 1 ELECTRIC HEAT TABLE**

Models	WA181-A				WA241-A				WA241-B			
	240-1		208-1		240-1		208-1		240-3		208-3	
	A	BTU	A	BTU	A	BTU	A	BTU	A	BTU	A	BTU
4					16.7	13650	14.4	10240				
5	20.8	17065	18.1	12800	20.8	17065	18.1	12800				
8	33.3	27300	28.8	20475	33.3	27300	28.8	20475				
10	41.6	34130	36.2	25600	41.6	34130	36.2	25600				
6									14.4	20500	12.5	15360
9									21.7	30600	18.7	23030

### SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

FIGURE 1  
SIZE SPECS FOR MIS-278

UNIT	WIDTH (W)	DEPTH (D)	HEIGHT (H)	SUPPLY		RETURN		E	F	G	I	J	K	L	M	N	O	P	Q
				A	B	C	B												
18 & 24	32-7/8	16-7/8	70-1/2	7-7/8	19-7/8	11-7/8	19-7/8	34-7/8	18-1/4	25-3/4	20-3/4	26-3/4	28	29-1/4	27	2-9/16	34	22-1/16	10-1/2

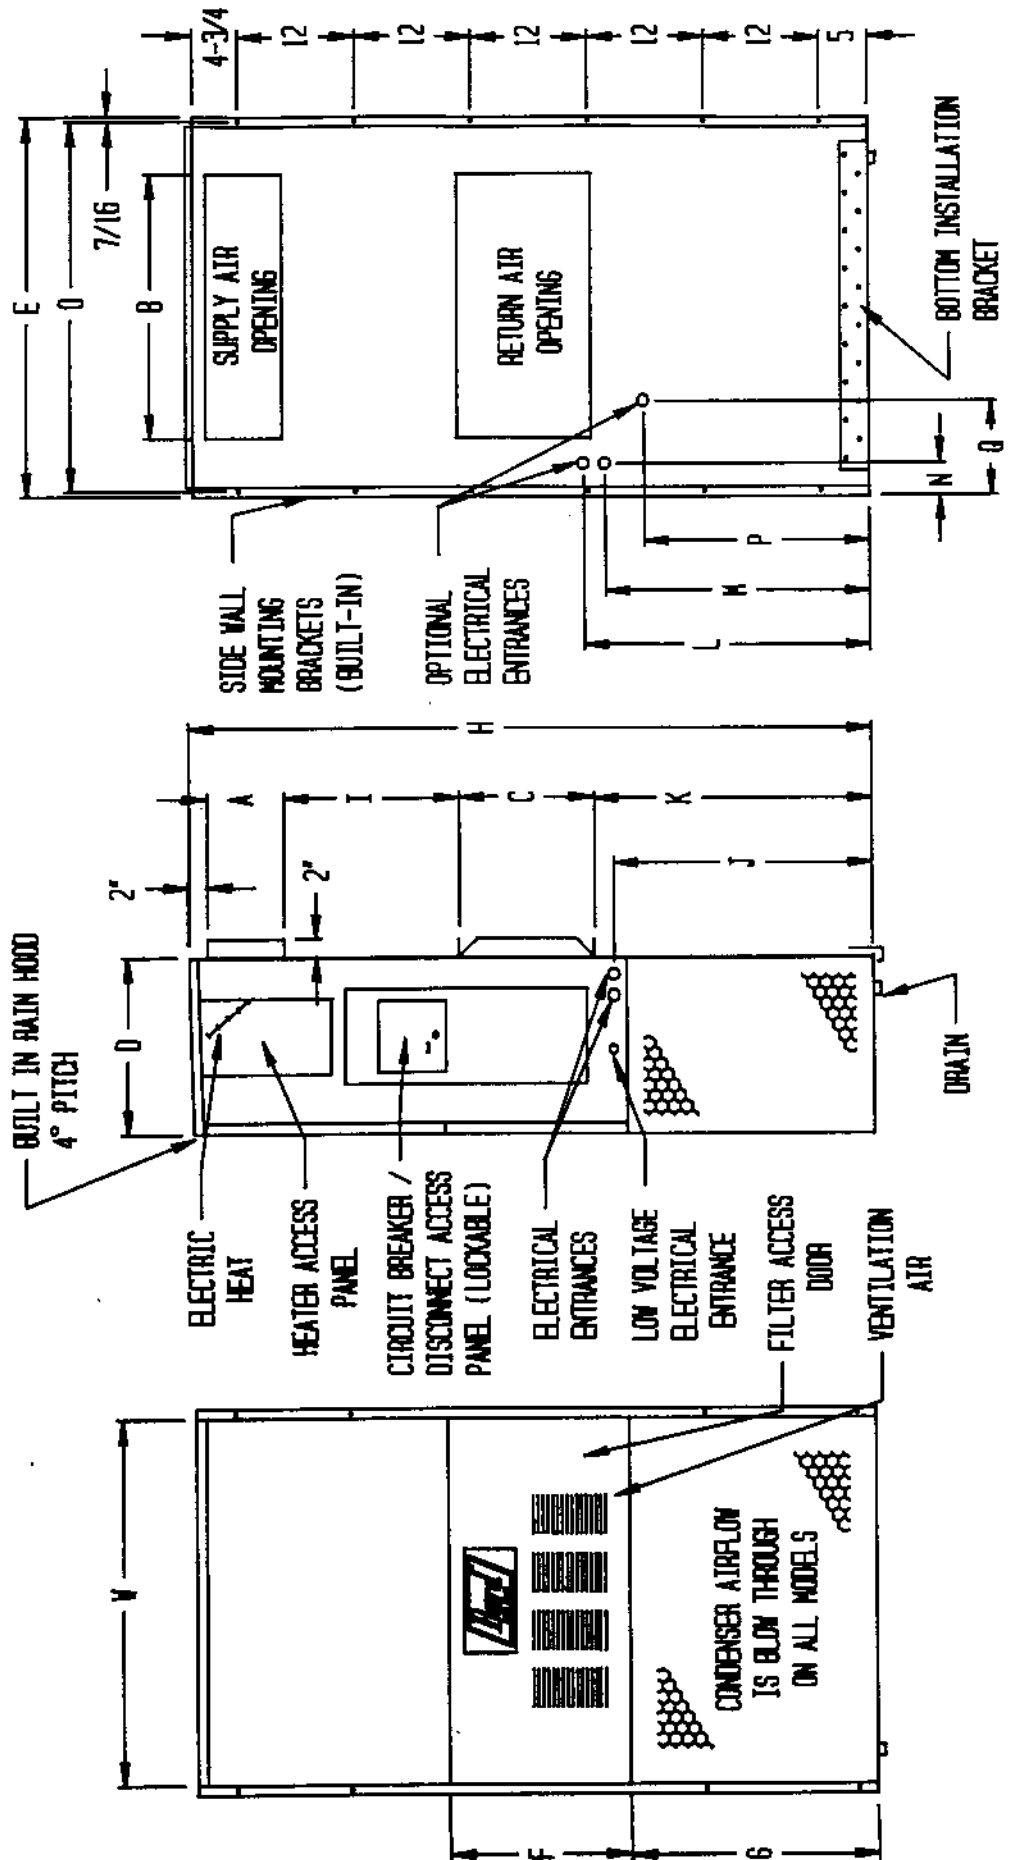


TABLE 2

SINGLE CIRCUIT						
Model	Rated Volts and Phase	No. Field Power Ckts.	(3) Minimum Circuit Ampacity	(1) Maximum External Fuse Or Circuit Breaker	(2) Field Power Wire Size	(2) Ground Wire Size
WA181-A00,A0Z	230/208-1	1	14	20	12	12
A05		1	28	30	10	10
A08		1	44	45	8	10
A10		1	54	60	6	10
WA241-A00,A0Z	230/208-1	1	15	20	12	12
A04		1	22	25	10	10
A05		1	28	30	10	10
A08		1	44	45	8	10
A10		1	54	60	6	10
WA241-B00,B0Z	230/208-3	1	11	15	14	12
B06		1	20	20	12	12

(1) Maximum size of the time delay fuse or HACR type circuit breaker for protection of field wiring conductors.

(2) Based on 75°C copper wire. All wiring must conform to NEC and all local codes.

(3) These "Minimum Circuit Ampacity" values are to be used for sizing the field power conductors. Refer to the National Electrical Code (latest revision), article 310 for power conductor sizing. Caution: When more than one field power conductor circuit is run thru one conduit, the conductors must be derated. Pay special attention to note 8 of table 310 regarding Ampacity Adjustment Factors when more than 3 conductors are in a raceway.

## GENERAL

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

The refrigerant system is completely assembled and charged. All internal wiring is complete.

The unit is designed for use with or without duct work. Flanges are provided for attaching the supply and return ducts.

These instructions explain the recommended method to install the air cooled self-contained unit and the electrical wiring connections to the unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made. See Page 1 for information on codes and standards.

Size of unit for a proposed installation should be based on heat loss calculation made according to methods of Air Conditioning Contractors of America (ACCA). The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

## DUCT WORK

All duct work, supply and return, must be properly sized for the design air flow requirement of the equipment. Air Conditioning Contractors of America (ACCA) is an excellent guide to proper sizing. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

Refer to Table 8 for maximum static pressure available for duct design.

Design the duct work according to methods given by the Air Conditioning Contractors of America (ACCA). When duct runs through unheated spaces, it should be insulated with a minimum of one inch of insulation. Use insulation with a vapor barrier on the outside of the insulation. Flexible joints should be used to connect the duct work to the equipment in order to keep the noise transmission to a minimum.

Ducts through the walls must be insulated and all joints taped or sealed to prevent air or moisture entering the wall cavity.

Some installations may not require any return air duct. It is recommended that on this type of installation that a filter grille be located in the wall. Filters must be of sufficient size to allow a maximum velocity of 400 FPM.

**NOTE:** If no return air duct is used, applicable installation codes may limit this cabinet to installation only in a single story structure.



## **FILTERS**

A 1-inch throwaway filter is supplied with each unit. The filter slides into position making it easy to service. This filter can be serviced from the outside by removing the service door. A 1-inch washable filter and 2-inch pleated filter are also available as optional accessories. The internal filter brackets are adjustable to accommodate the 2-inch filter by loosening 2 screws in each bracket assembly and sliding the brackets apart to the required width and retightening the 4 screws.

## **FRESH AIR INTAKE**

All units are built with a fresh air inlet slots punched in the service panel.

The fresh air damper assembly is standard equipment with the unit because of the variety of state or local codes requiring fresh air capability. It is shipped already attached to each unit.

All capacity, efficiency and cost of operation information as required for Department of Energy "Energyguide" Fact Sheets is based upon the fresh air blank-off plate in place and is recommended for maximum energy efficiency.

The blank-off plate is available upon request from the factory and is installed in place of the fresh air damper shipped with each unit.

## **CONDENSATE DRAIN**

A plastic drain hose extends from the drain pan at the top of the unit down to the unit base. There are openings in the unit base for the drain hose to pass through. In the event the drain hose is connected to a drain system of some type, it must be an open or vented type system to assure proper drainage.

## **PART 2 -- INSTALLATION INSTRUCTIONS**

### **WALL MOUNTING INFORMATION**



1. These units are secured by wall mounting brackets which secure the unit to the outside wall surface at both sides. A bottom mounting bracket is provided for ease of installation, but is not required.
2. On wood-frame walls, the wall construction must be strong and rigid enough to carry the weight of the unit without transmitting any unit vibration.
3. Concrete block walls must be thoroughly inspected to insure that they are capable of carrying the weight of the installing unit.

### **MOUNTING THE UNIT**

1. Two holes, for the supply and return air openings, must be cut through the wall as shown in Figure 2.
2. Locate and mark lag bolt locations and bottom mounting bracket location, if desired. See Figure 2.
3. Mount bottom mounting bracket, if used.
4. Hook top rain flashing under back bend of top. Top rain flashing is shipped attached to the back of the unit on the right side.
5. Position unit in opening and secure with 5/16 lag bolts; use 7/8 inch diameter flat washers on the lag bolts.
6. Secure rain flashing to wall and caulk across entire length of top. See Figure 2.
7. For additional mounting rigidity, the return air and supply air frames or collars can be drilled and screwed or welded to the structural wall itself (depending upon wall construction). Be sure to observe required clearance if combustible wall.
8. On side by side installations, maintain a minimum of 20 inches clearance on right side to allow access to control panel and heat strips and allow proper airflow to outdoor coil.

FIGURE 2  
MOUNTING INSTRUCTIONS

NOTE: IT IS RECOMMENDED THAT A BEAD OF SILICONE CAULKING BE PLACED BEHIND THE SIDE MOUNTING FLANGES AND UNDER THE TOP FLASHING AT TIME OF INSTALLATION.

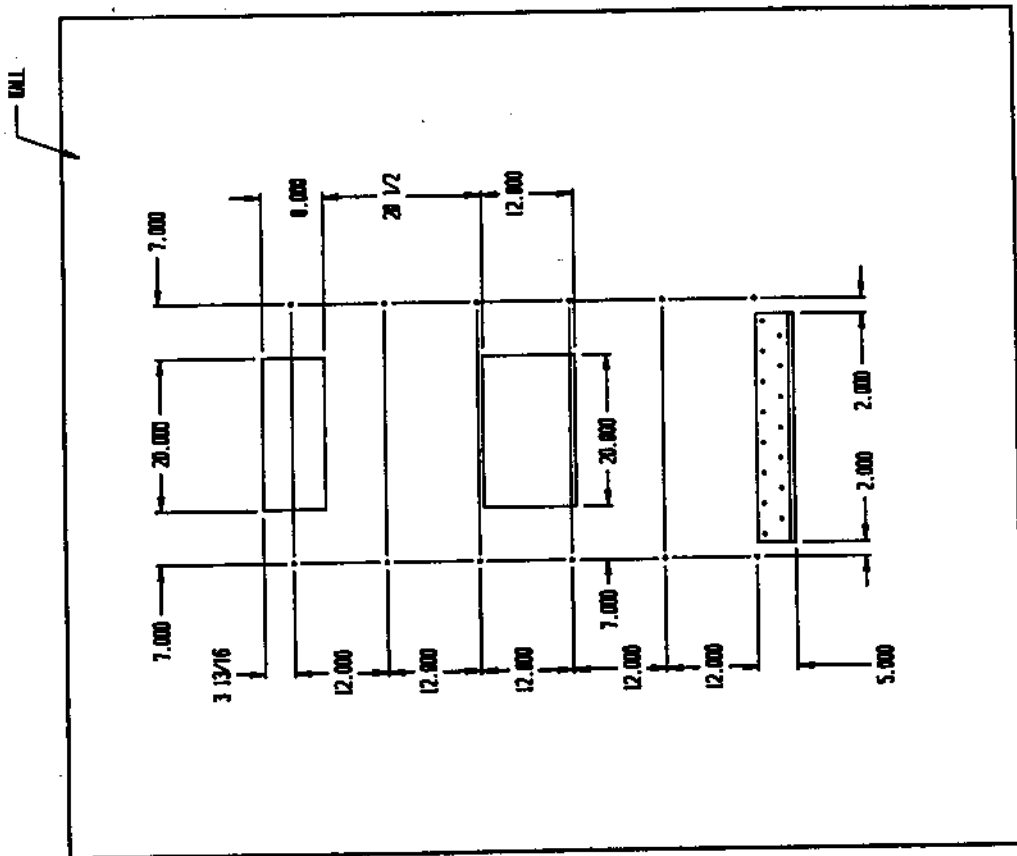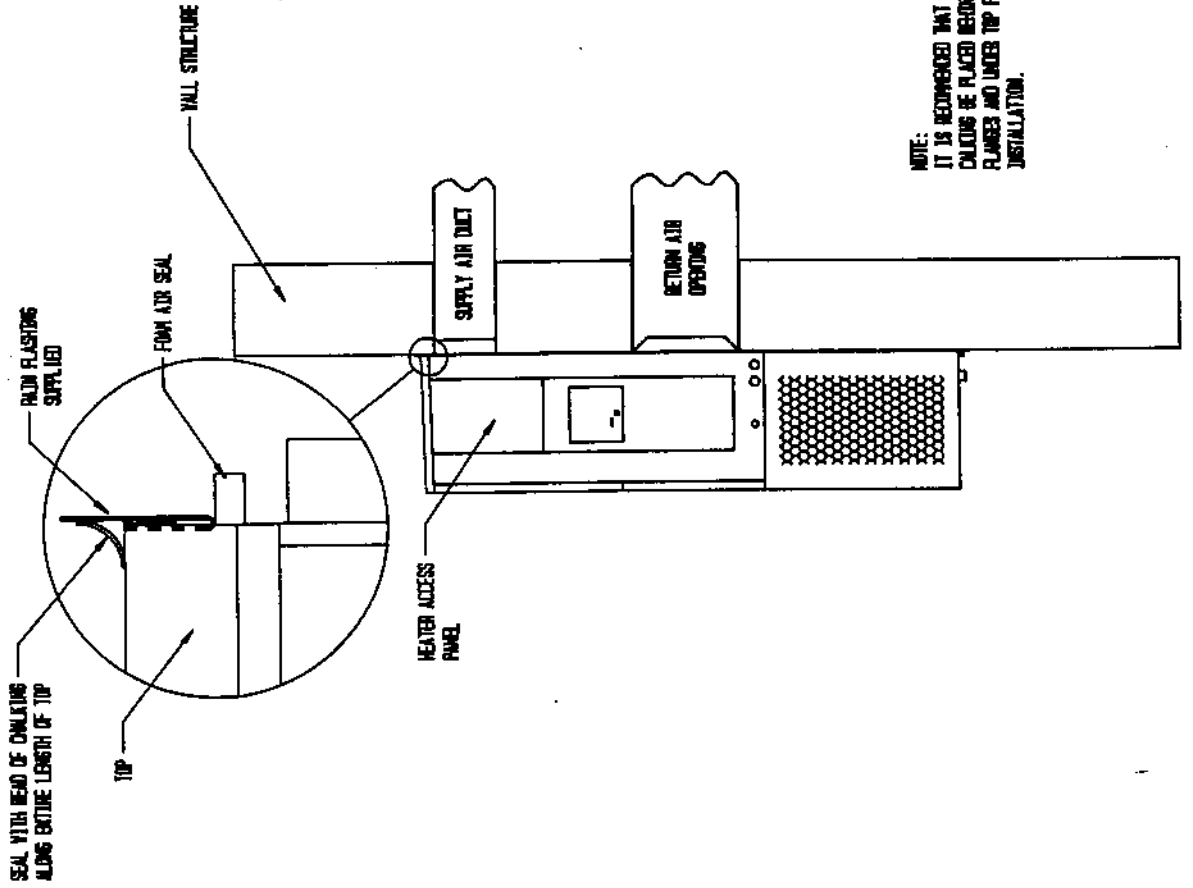

**WIRING--MAIN POWER**

Refer to the unit rating plate for wire sizing information and maximum fuse or "HACR Type" circuit breaker size. Each outdoor unit is marked with a "Minimum Circuit Ampacity". This means that the field wiring used must be sized to carry that amount of current. Depending on the installed KW of electric heat, there may be two field power circuits required. If this is the case, the unit serial plate will so indicate. All models are suitable only for connection with copper wire. Each unit and/or wiring diagram will be marked "Use Copper Conductors Only". These instructions MUST BE adhered to. Refer to the National Electrical Code (NEC) for complete current carrying capacity data on the various insulation grades of wiring material. All wiring must conform to NEC and all local codes.

The electrical data lists fuse and wire sizes (75°C copper) for all models, including the most commonly used heater sizes. Also shown are the number of field power circuits required for the various models with heaters.

The unit rating plate lists a "Maximum Time Delay Relay Fuse" or "HACR Type" circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

The disconnect access door on this unit may be locked to prevent unauthorized access to the disconnect. To convert for the locking capability, bend the tab located in the bottom left hand corner of the disconnect opening under the disconnect access panel straight out. This tab will now line up with the slot in the door. When shut, a padlock may be placed through the hole in the tab preventing entry.

**WIRING: LOW VOLTAGE WIRING**

230/208V, 1 phase and 3 phase equipment dual primary voltage transformers. All equipment leaves the factory wired on 240V tap. For 208V operation, reconnect from 240V to 208V tap. The acceptable operating voltage range for the 240 and 208V taps are:

TAP	RANGE
240	253 - 216
208	220 - 187

**NOTE:** The voltage should be measured at the field power connection point in the unit and while the unit is operating at full load (maximum amperage operating condition).

Five (5) wires should be run from thermostat subbase to the 24V terminal board in the unit. A five conductor, 18 gauge copper, color-coded thermostat cable is recommended. The connection points are shown in Figure 3.


**TABLE 3 THERMOSTAT WIRE SIZE**




Transformer VA	FLA	Wire Gauge	Maximum Distance In Feet
55	2.3	20 Gauge	45
		18 "	60
		16 "	100
		14 "	160
		12 "	250

**TABLE 3A WALL THERMOSTAT AND SUBBASE COMBINATIONS**


Thermostat	Subbase	Predominate Features
8403-019	8404-012	1 stage cool, 2 stage heat
T874C1760	Q674A1001	System: heat-auto-cool Fan: on-auto
8403-002	8404-003	1 stage heat, 1 stage cool
T87F3111	Q539A1220	System: heat-off-cool Fan: on-auto
8403-009	----	1 stage heat, 1 stage cool
1F56-318		

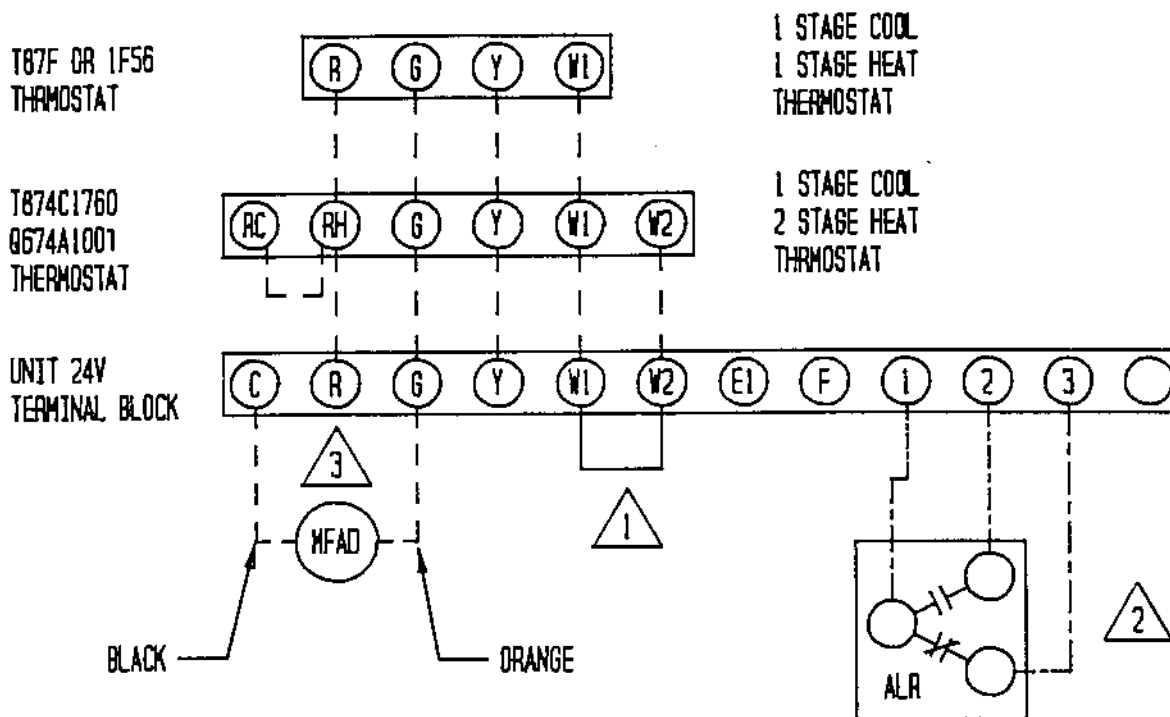FIGURE 3  
LOW VOLTAGE WIRING



-  REMOVE JUMPER FOR 2 STAGE ELECTRIC HEAT ON UNITS WITH 15 OR MORE KW
-  OPTIONAL ALARM RELAY PROVIDED ON UNITS WITH CONTROL MODULE "M" OR "J" INSTALLED. CONTACT RATING 24VAC @ 125VA
-  OPTIONAL MOTORIZED FRESH AIR DAMPER SUGGESTED HOOK UP

OPTIONAL ECONOMIZER LOW VOLTAGE WIRING

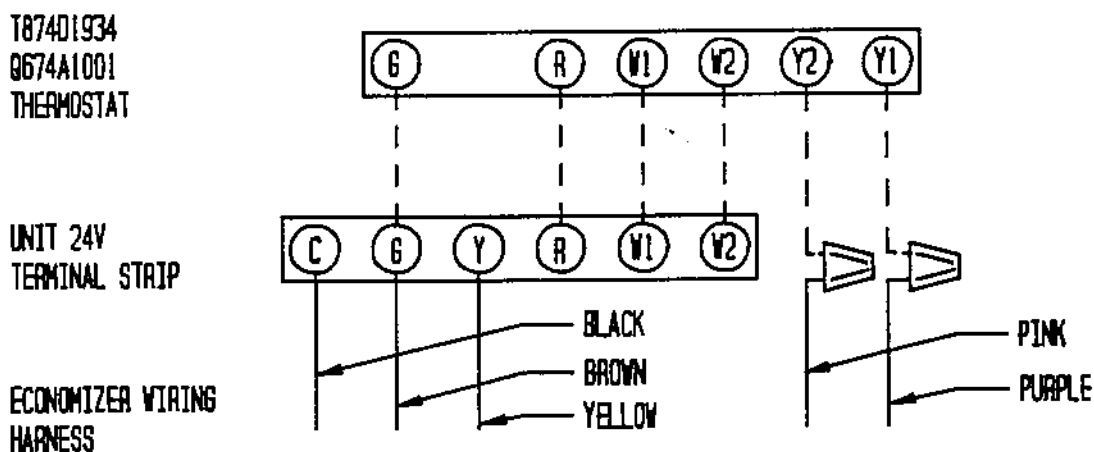

## PART 3 -- START-UP

### **IMPORTANT INSTALLER NOTE**

For improved start-up performance, wash the indoor coil with a dishwasher detergent.

### **CRANKCASE HEATERS**

All units are provided with some form of compressor crankcase heat.

All single and three phase models have an insertion well-type heater located in the lower section of the compressor housing. This is a self-regulating type heater that draws only enough power to maintain the compressor at a safe temperature.

Some form of crankcase heat is essential to prevent liquid refrigerant from migrating to the compressor, causing oil pump out on compressor start-up and possible valve failure due to compressing a liquid.

The decal in Figure 4 is affixed to all outdoor units detailing start-up procedure. This is very important. Please read carefully.

FIGURE 4

## **IMPORTANT**

**THESE PROCEDURES MUST BE FOLLOWED AT INITIAL START-UP AND AT ANY TIME POWER HAS BEEN REMOVED FOR 12 HOURS OR LONGER.**

**TO PREVENT COMPRESSOR DAMAGE WHICH MAY RESULT FROM THE PRESENCE OF LIQUID REFRIGERANT IN THE COMPRESSOR CRANKCASE.**

1. MAKE CERTAIN THE ROOM THERMOSTAT IS IN THE "OFF" POSITION. (THE COMPRESSOR IS NOT TO OPERATE).
2. APPLY POWER BY CLOSING THE SYSTEM DISCONNECT SWITCH THIS ENERGIZES THE COMPRESSOR HEATER WHICH EVAPORATES THE LIQUID REFRIGERANT IN THE CRANKCASE.
3. ALLOW 4 HOURS OR 60 MINUTES PER POUND OF REFRIGERANT IN THE SYSTEM AS NOTED ON THE UNIT RATING PLATE, WHICHEVER IS GREATER.
4. AFTER PROPERLY ELAPSED TIME THE THERMOSTAT MAY BE SET TO OPERATE THE COMPRESSOR.
5. EXCEPT AS REQUIRED FOR SAFETY WHILE SERVICING — DO NOT OPEN SYSTEM DISCONNECT SWITCH.

7961-081

### **SERVICE HINTS**

1. Caution homeowner to maintain clean air filters at all times. Also, not to needlessly close off supply and return air registers. This reduces air flow through the system, which shortens equipment service life as well as increasing operating costs.
2. Switching to heating cycle at 75°F or higher outside temperature may cause a nuisance trip of the remote reset high pressure switch. Turn thermostat off, then on to reset the high pressure switch.
3. The heat pump wall thermostats perform multiple functions. Be sure that all function switches are correctly set for the desired operating mode before trying to diagnose any reported service problems.
4. Check all power fuses or circuit breakers to be sure they are the correct rating.
5. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.

### **SEQUENCE OF OPERATION**

**COOLING**--Circuit R-Y makes at thermostat pulling in compressor contactor, starting the compressor and outdoor motor. The G (indoor motor) circuit is automatically completed on any call for cooling operation or can be energized by manual fan switch on subbase for constant air circulation. On a call for heating, circuit R-W1 make at the thermostat pulling in heat contact for the strip heat and blower operation. On a call for second stage heat, R-W2 makes bringing on second heat contactor, if so equipped.

## PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure curves can be found later in the manual covering all models. It is imperative to match the correct pressure curve to the unit by model number.

## PART 4 -- TROUBLESHOOTING

### FAN BLADE SETTING DIMENSIONS

Shown in the drawing below are the correct fan blade setting dimensions for proper air delivery across the outdoor coil.

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions below be checked and blade adjusted in or out on the motor shaft accordingly.

FIGURE 5

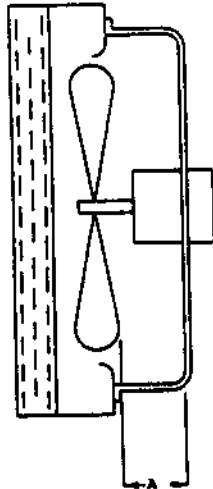


TABLE 4

Model	Dimension A
WA181	1.00
WA241	

### REMOVAL OF THE FAN SHROUD

1. Disconnect all power to unit.
2. Remove the screws holding both grills--one on each side of unit--and remove grills.
3. Remove screws holding fan shroud to condenser and bottom. (9) screws.
4. Unwire condenser fan motor.
5. Slide complete motor, fan blade, and shroud assembly out the left side of the unit.
6. Service motor/fan as needed.
7. Reverse steps to reinstall.

## REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit performance will occur with a refrigerant charge resulting in a suction line temperature (6" from compressor) as shown in the following table:

TABLE 5

Model	Rated Airflow	95° F OD Temperature	82° F OD Temperature
WA181	650	51 - 53	63 - 65
WA241	800	61 - 63	63 - 65

The above suction line temperatures are based upon 80° F dry/bulb/67° F wet bulb (50 percent R.H.) temperature and rated airflow across the evaporator during cooling cycle.

TABLE 6 INDOOR BLOWER PERFORMANCE--CFM @ 230V

E.S.P. In H2O	WA181, WA241 230V	
	Dry	Wet
.0	1020	975
.1	960	905
.2	865	800
.3	820	735
.4	735	650
.5	615	535

TABLE 7

Model	Rated CFM*	Rated ESP*	Recommended Airflow Range
WA181	650	.40	575 - 725
WA241	800	.20	700 - 950

\*Rated CFM and ESP on high speed tap.

MAXIMUM ESP OF OPERATION

TABLE 8 ELECTRIC HEAT ONLY	
Model	ESP
A00	.50
WA181 A05	.50
WA241 A08	.50
B00	.50
WA241 B06	.50

Values shown are for units equipped with STD 1" throw-away filter or 1" washable filter. Derate ESP by .15 for 2" pleated filters.

TABLE 9

## COOLING

Air Temperature Entering Outdoor Coil °F

Model	Return Air Temperature	Pressure	°	°	°	°	°	°	°	°	°
			75	80	85	90	95	100	105	110	115
WA181	75 deg. DB	Low Side	71	73	75	77	79	81	82	84	85
	62 deg. WB	High Side	194	208	223	238	253	268	284	299	315
	80 deg. DB	Low Side	76	78	80	83	84	86	88	90	91
	67 deg. WB	High Side	199	214	229	244	259	275	291	307	323
	85 deg. DB	Low Side	81	84	86	89	91	93	95	96	98
	72 deg. WB	High Side	206	221	237	253	268	285	301	318	334
WA241	75 deg. DB	Low Side	72	75	78	80	82	84	86	87	89
	62 deg. WB	High Side	198	214	230	246	261	276	291	305	319
	80 deg. DB	Low Side	74	77	80	82	84	86	88	90	91
	67 deg. WB	High Side	211	229	246	263	280	295	311	326	341
	85 deg. DB	Low Side	77	80	83	85	87	89	91	93	94
	72 deg. WB	High Side	227	246	265	283	300	318	334	351	367

Low side pressure  $\pm$  2 PSIGHigh side pressure  $\pm$  5 PSIG



Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.



TABLE 10

## OPTIONAL ACCESSORIES

Model	Description	W	W	W
		A	A	A
		1	2	2
		8	4	4
		1	1	1
		-	-	-
		A	A	B
EHWA24-A04	Heater Packages		X	
EHWA02-A05	Heater Packages	X	X	
EHWA02-A08	Heater Packages	X	X	
EHWA02-A10	Heater Packages	X	X	
EHWA24-B06	Heater Packages			X
BOP-2	Blank Off Plate	X	X	X
BFAD-2	Barometric Fresh Air Damper	X	X	X
MFAD-2	Motorized Fresh Air Damper	X	X	X
CRV-2	Classroom Ventilator With Exhaust	X	X	X
EIPW-2	Economizer With Exhaust	X	X	X
CMA-1	High Pressure Control (HPC)	X	X	X
CMA-2	Low Pressure Control (LPC)	X	X	X
CMA-4	Low and High Pressure Control	X	X	X
CMA-5	Time Delay Relay (TDR)	X	X	X
CMA-6	Low Ambient Control (LAC)	X	X	X
CMA-8	TDR + HPC	X	X	X
CMA-10	LPC + HPC + TDR	X	X	X
CMA-11	LPC + HPC + LAC	X	X	X
CMA-12	LAC + TDR	X	X	X
CMA-13	LPC + HPC + TDR + LAC	X	X	X
CNC-15	Start Kit	X	X	
MNCB-02A	Circuit Breaker Kits	X	X	
MNCB-01B	Circuit Breaker Kits			X

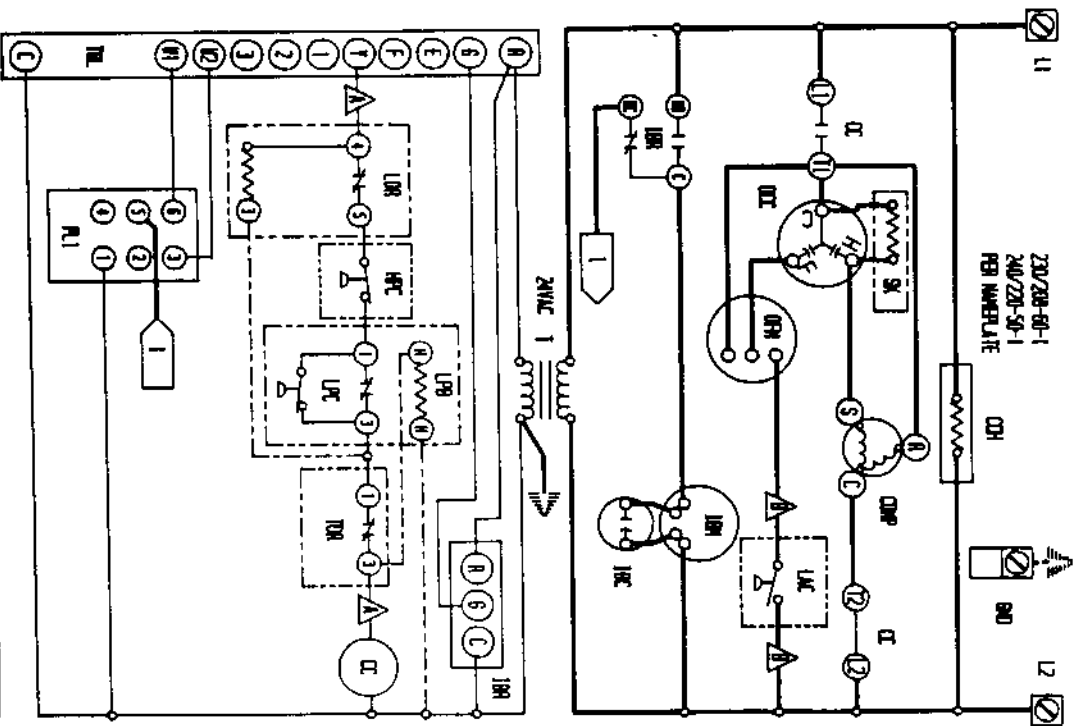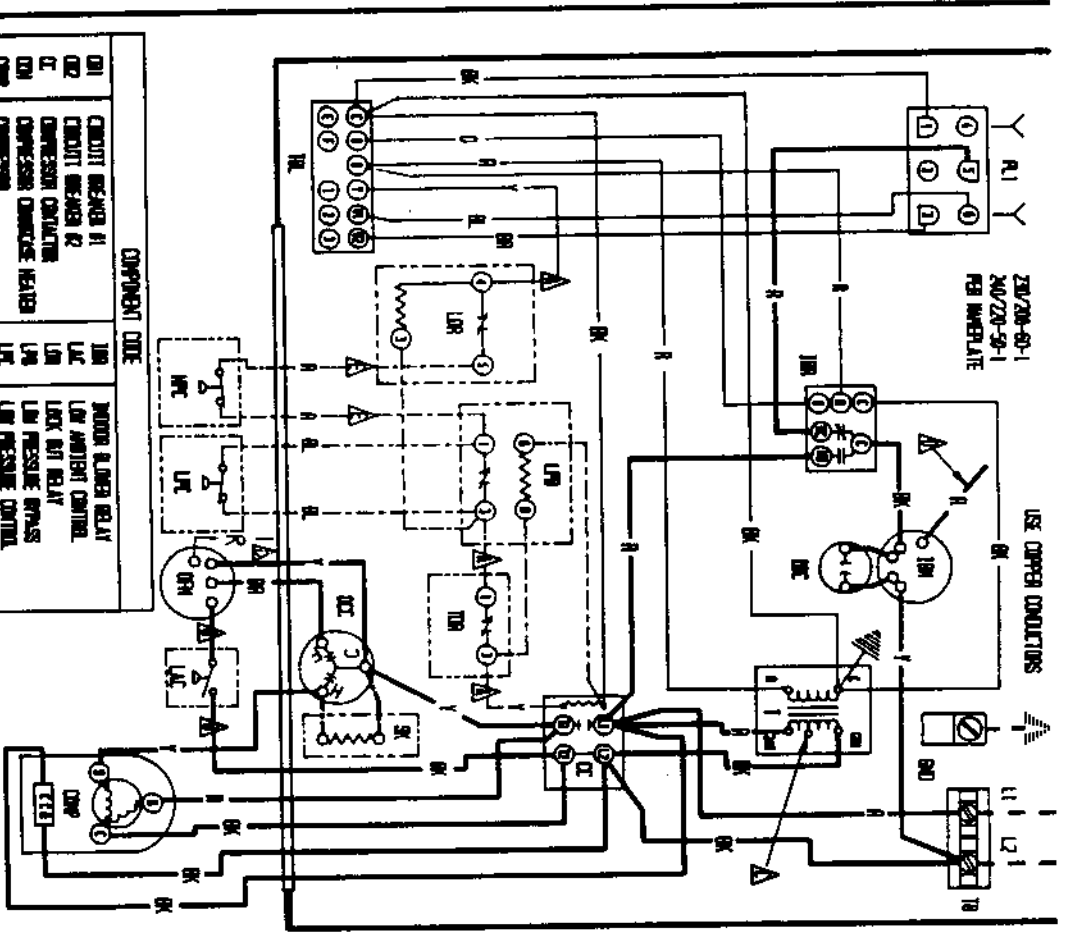

COMPONENT CODE	DESCRIPTION
01	CIRCUIT BREAKER #1
02	THERMISTOR #1
03	COMPRESSOR CONTACTOR #1
04	COMPRESSOR CONTACTOR #2
05	COMPRESSOR CONTACTOR #3
06	COMPRESSOR CONTACTOR #4
07	COMPRESSOR CONTACTOR #5
08	COMPRESSOR CONTACTOR #6
09	COMPRESSOR CONTACTOR #7
10	COMPRESSOR CONTACTOR #8
11	COMPRESSOR CONTACTOR #9
12	COMPRESSOR CONTACTOR #10
13	COMPRESSOR CONTACTOR #11
14	COMPRESSOR CONTACTOR #12
15	COMPRESSOR CONTACTOR #13
16	COMPRESSOR CONTACTOR #14
17	COMPRESSOR CONTACTOR #15
18	COMPRESSOR CONTACTOR #16
19	COMPRESSOR CONTACTOR #17
20	COMPRESSOR CONTACTOR #18
21	COMPRESSOR CONTACTOR #19
22	COMPRESSOR CONTACTOR #20
23	COMPRESSOR CONTACTOR #21
24	COMPRESSOR CONTACTOR #22
25	COMPRESSOR CONTACTOR #23
26	COMPRESSOR CONTACTOR #24
27	COMPRESSOR CONTACTOR #25
28	COMPRESSOR CONTACTOR #26
29	COMPRESSOR CONTACTOR #27
30	COMPRESSOR CONTACTOR #28
31	COMPRESSOR CONTACTOR #29
32	COMPRESSOR CONTACTOR #30
33	COMPRESSOR CONTACTOR #31
34	COMPRESSOR CONTACTOR #32
35	COMPRESSOR CONTACTOR #33
36	COMPRESSOR CONTACTOR #34
37	COMPRESSOR CONTACTOR #35
38	COMPRESSOR CONTACTOR #36
39	COMPRESSOR CONTACTOR #37
40	COMPRESSOR CONTACTOR #38
41	COMPRESSOR CONTACTOR #39
42	COMPRESSOR CONTACTOR #40
43	COMPRESSOR CONTACTOR #41
44	COMPRESSOR CONTACTOR #42
45	COMPRESSOR CONTACTOR #43
46	COMPRESSOR CONTACTOR #44
47	COMPRESSOR CONTACTOR #45
48	COMPRESSOR CONTACTOR #46
49	COMPRESSOR CONTACTOR #47
50	COMPRESSOR CONTACTOR #48
51	COMPRESSOR CONTACTOR #49
52	COMPRESSOR CONTACTOR #50
53	COMPRESSOR CONTACTOR #51
54	COMPRESSOR CONTACTOR #52
55	COMPRESSOR CONTACTOR #53
56	COMPRESSOR CONTACTOR #54
57	COMPRESSOR CONTACTOR #55
58	COMPRESSOR CONTACTOR #56
59	COMPRESSOR CONTACTOR #57
60	COMPRESSOR CONTACTOR #58
61	COMPRESSOR CONTACTOR #59
62	COMPRESSOR CONTACTOR #60
63	COMPRESSOR CONTACTOR #61
64	COMPRESSOR CONTACTOR #62
65	COMPRESSOR CONTACTOR #63
66	COMPRESSOR CONTACTOR #64
67	COMPRESSOR CONTACTOR #65
68	COMPRESSOR CONTACTOR #66
69	COMPRESSOR CONTACTOR #67
70	COMPRESSOR CONTACTOR #68
71	COMPRESSOR CONTACTOR #69
72	COMPRESSOR CONTACTOR #70
73	COMPRESSOR CONTACTOR #71
74	COMPRESSOR CONTACTOR #72
75	COMPRESSOR CONTACTOR #73
76	COMPRESSOR CONTACTOR #74
77	COMPRESSOR CONTACTOR #75
78	COMPRESSOR CONTACTOR #76
79	COMPRESSOR CONTACTOR #77
80	COMPRESSOR CONTACTOR #78
81	COMPRESSOR CONTACTOR #79
82	COMPRESSOR CONTACTOR #80
83	COMPRESSOR CONTACTOR #81
84	COMPRESSOR CONTACTOR #82
85	COMPRESSOR CONTACTOR #83
86	COMPRESSOR CONTACTOR #84
87	COMPRESSOR CONTACTOR #85
88	COMPRESSOR CONTACTOR #86
89	COMPRESSOR CONTACTOR #87
90	COMPRESSOR CONTACTOR #88
91	COMPRESSOR CONTACTOR #89
92	COMPRESSOR CONTACTOR #90
93	COMPRESSOR CONTACTOR #91
94	COMPRESSOR CONTACTOR #92
95	COMPRESSOR CONTACTOR #93
96	COMPRESSOR CONTACTOR #94
97	COMPRESSOR CONTACTOR #95
98	COMPRESSOR CONTACTOR #96
99	COMPRESSOR CONTACTOR #97
100	COMPRESSOR CONTACTOR #98

COMPONENT CODE	DESCRIPTION	WIRE COLOR
01	START RELAY	RED
02	STOP RELAY	BLACK
03	STOP RELAY	BLACK
04	STOP RELAY	BLACK
05	STOP RELAY	BLACK
06	STOP RELAY	BLACK
07	STOP RELAY	BLACK
08	STOP RELAY	BLACK
09	STOP RELAY	BLACK
10	STOP RELAY	BLACK
11	STOP RELAY	BLACK
12	STOP RELAY	BLACK
13	STOP RELAY	BLACK
14	STOP RELAY	BLACK
15	STOP RELAY	BLACK
16	STOP RELAY	BLACK
17	STOP RELAY	BLACK
18	STOP RELAY	BLACK
19	STOP RELAY	BLACK
20	STOP RELAY	BLACK
21	STOP RELAY	BLACK
22	STOP RELAY	BLACK
23	STOP RELAY	BLACK
24	STOP RELAY	BLACK
25	STOP RELAY	BLACK
26	STOP RELAY	BLACK
27	STOP RELAY	BLACK
28	STOP RELAY	BLACK
29	STOP RELAY	BLACK
30	STOP RELAY	BLACK
31	STOP RELAY	BLACK
32	STOP RELAY	BLACK
33	STOP RELAY	BLACK
34	STOP RELAY	BLACK
35	STOP RELAY	BLACK
36	STOP RELAY	BLACK
37	STOP RELAY	BLACK
38	STOP RELAY	BLACK
39	STOP RELAY	BLACK
40	STOP RELAY	BLACK
41	STOP RELAY	BLACK
42	STOP RELAY	BLACK
43	STOP RELAY	BLACK
44	STOP RELAY	BLACK
45	STOP RELAY	BLACK
46	STOP RELAY	BLACK
47	STOP RELAY	BLACK
48	STOP RELAY	BLACK
49	STOP RELAY	BLACK
50	STOP RELAY	BLACK
51	STOP RELAY	BLACK
52	STOP RELAY	BLACK
53	STOP RELAY	BLACK
54	STOP RELAY	BLACK
55	STOP RELAY	BLACK
56	STOP RELAY	BLACK
57	STOP RELAY	BLACK
58	STOP RELAY	BLACK
59	STOP RELAY	BLACK
60	STOP RELAY	BLACK
61	STOP RELAY	BLACK
62	STOP RELAY	BLACK
63	STOP RELAY	BLACK
64	STOP RELAY	BLACK
65	STOP RELAY	BLACK
66	STOP RELAY	BLACK
67	STOP RELAY	BLACK
68	STOP RELAY	BLACK
69	STOP RELAY	BLACK
70	STOP RELAY	BLACK
71	STOP RELAY	BLACK
72	STOP RELAY	BLACK
73	STOP RELAY	BLACK
74	STOP RELAY	BLACK
75	STOP RELAY	BLACK
76	STOP RELAY	BLACK
77	STOP RELAY	BLACK
78	STOP RELAY	BLACK
79	STOP RELAY	BLACK
80	STOP RELAY	BLACK
81	STOP RELAY	BLACK
82	STOP RELAY	BLACK
83	STOP RELAY	BLACK
84	STOP RELAY	BLACK
85	STOP RELAY	BLACK
86	STOP RELAY	BLACK
87	STOP RELAY	BLACK
88	STOP RELAY	BLACK
89	STOP RELAY	BLACK
90	STOP RELAY	BLACK
91	STOP RELAY	BLACK
92	STOP RELAY	BLACK
93	STOP RELAY	BLACK
94	STOP RELAY	BLACK
95	STOP RELAY	BLACK
96	STOP RELAY	BLACK
97	STOP RELAY	BLACK
98	STOP RELAY	BLACK
99	STOP RELAY	BLACK
100	STOP RELAY	BLACK

RED (FIN.) BLACK (GNL)  
BLUE (L) GREEN (N)  
WHITE (S)

WIRE COLOR

1	BLACK	RED	WHITE
2	BLACK	RED	WHITE
3	BLACK	RED	WHITE
4	BLACK	RED	WHITE
5	BLACK	RED	WHITE
6	BLACK	RED	WHITE
7	BLACK	RED	WHITE
8	BLACK	RED	WHITE
9	BLACK	RED	WHITE
0	BLACK	RED	WHITE

USE COPPER CONDUCTORS

WIRE GAUGE TO 200V TYP FOR 200V OPERATION

WIRE GAUGE TO 240V TYP FOR 240V OPERATION


WIRE GAUGE TO 277V TYP FOR 277V OPERATION

WIRE GAUGE TO 300V TYP FOR 300V OPERATION



RED (FIN.) BLACK (GNL)  
BLUE (L) GREEN (N)  
WHITE (S)

WIRE COLOR

1	BLACK	RED	WHITE
2	BLACK	RED	WHITE
3	BLACK	RED	WHITE
4	BLACK	RED	WHITE
5	BLACK	RED	WHITE
6	BLACK	RED	WHITE
7	BLACK	RED	WHITE
8	BLACK	RED	WHITE
9	BLACK	RED	WHITE
0	BLACK	RED	WHITE

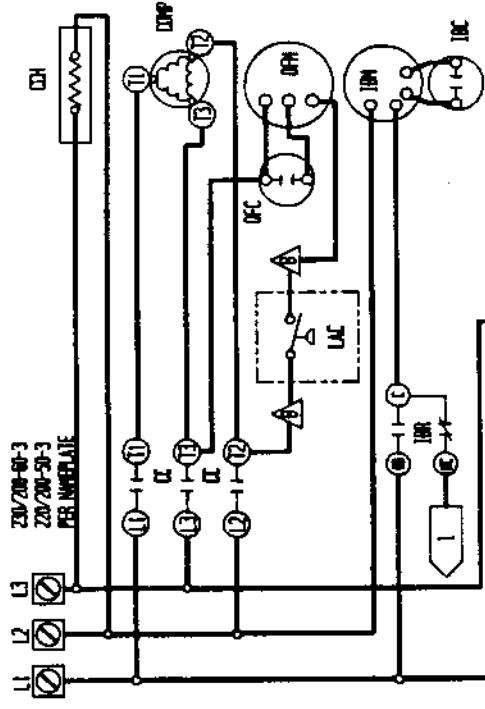

230/200-01-3  
230/200-50-3  
PER WIRE DATE

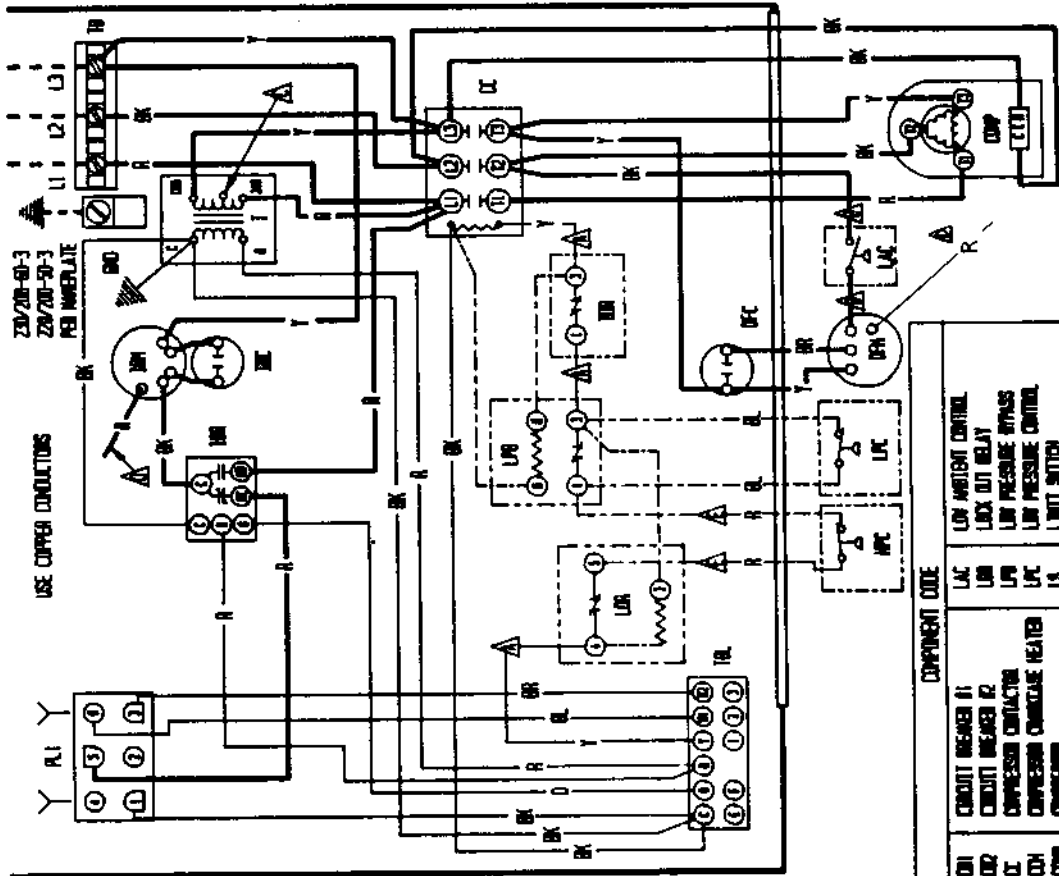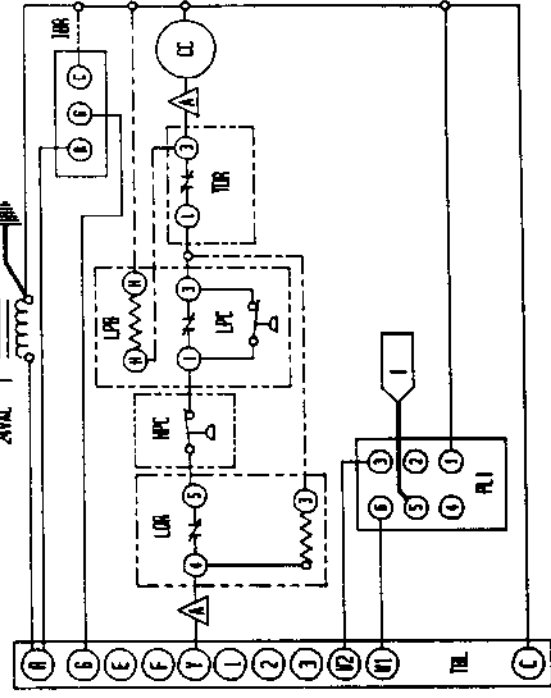

USE COPPER CONDUCTORS

230/200-01-3  
230/200-50-3  
PER WIRE DATE

COMPONENT CODE	
COH1 HEATER #1	LOW AMBIENT CONTROL
COH2 HEATER #2	LOCK OUT RELAY
COH COMPRESSOR CONTACTOR	LOW PRESSURE BYPASS
COH COMPRESSOR CONTACTOR HEATER	LOW PRESSURE CONTROL
COH EQUIPMENT WOUND	LIMIT SWITCH
COH HEAT STRIP #1	OVERFLOW FAN CAPACITOR
COH HEAT STRIP #2	START #1
COH HEATER CONTACTOR #1	START #2
COH HEATER CONTACTOR #2	TRANSFORMER
COH MAIN PRESSURE CONTROL	TEMPERATURE BLACK
COH MAIN BLOWER CAPACITOR	LOW VOLTAGE THERMAL BLACK
COH MAIN BLOWER MOTOR	TERMINAL CONTACT
COH MAIN BLOWER RELAY	TIME DELAY RELAY

RED (LOW) BLACK (HIGH) WIRE APPLICABLE

BLACK	Y	BLACK	Y	BLACK	Y	BLACK	Y	BLACK	Y	BLACK	Y
RED	G	RED	G	RED	G	RED	G	RED	G	RED	G
WHITE	B	WHITE	B	WHITE	B	WHITE	B	WHITE	B	WHITE	B
YELLOW	U	YELLOW	U	YELLOW	U	YELLOW	U	YELLOW	U	YELLOW	U
GREEN	V	GREEN	V	GREEN	V	GREEN	V	GREEN	V	GREEN	V
BLUE	W	BLUE	W	BLUE	W	BLUE	W	BLUE	W	BLUE	W
PURPLE	X	PURPLE	X	PURPLE	X	PURPLE	X	PURPLE	X	PURPLE	X
VIOLET	Z	VIOLET	Z	VIOLET	Z	VIOLET	Z	VIOLET	Z	VIOLET	Z
PINK	AA	PINK	AA	PINK	AA	PINK	AA	PINK	AA	PINK	AA
TAN	AB	TAN	AB	TAN	AB	TAN	AB	TAN	AB	TAN	AB
LAVENDER	AC	LAVENDER	AC	LAVENDER	AC	LAVENDER	AC	LAVENDER	AC	LAVENDER	AC

FACTORY OR. FIELD. OTHER.

FORM NO. 166  
FOR VALUE  
OR VALUE  
ACROSS

BARB IFC. CO.  
BNS 4085-210 C  
DNR. CSB  
CN/APPL.

