


- ⚠ Capacitor provides off-cycle crankcase heat.
- ⚠ 2nd heat contactor operates only during emergency heat or compressor cut-off.

See Installation Manual for 24V
Thermostat Wiring and Thermostat
Functions

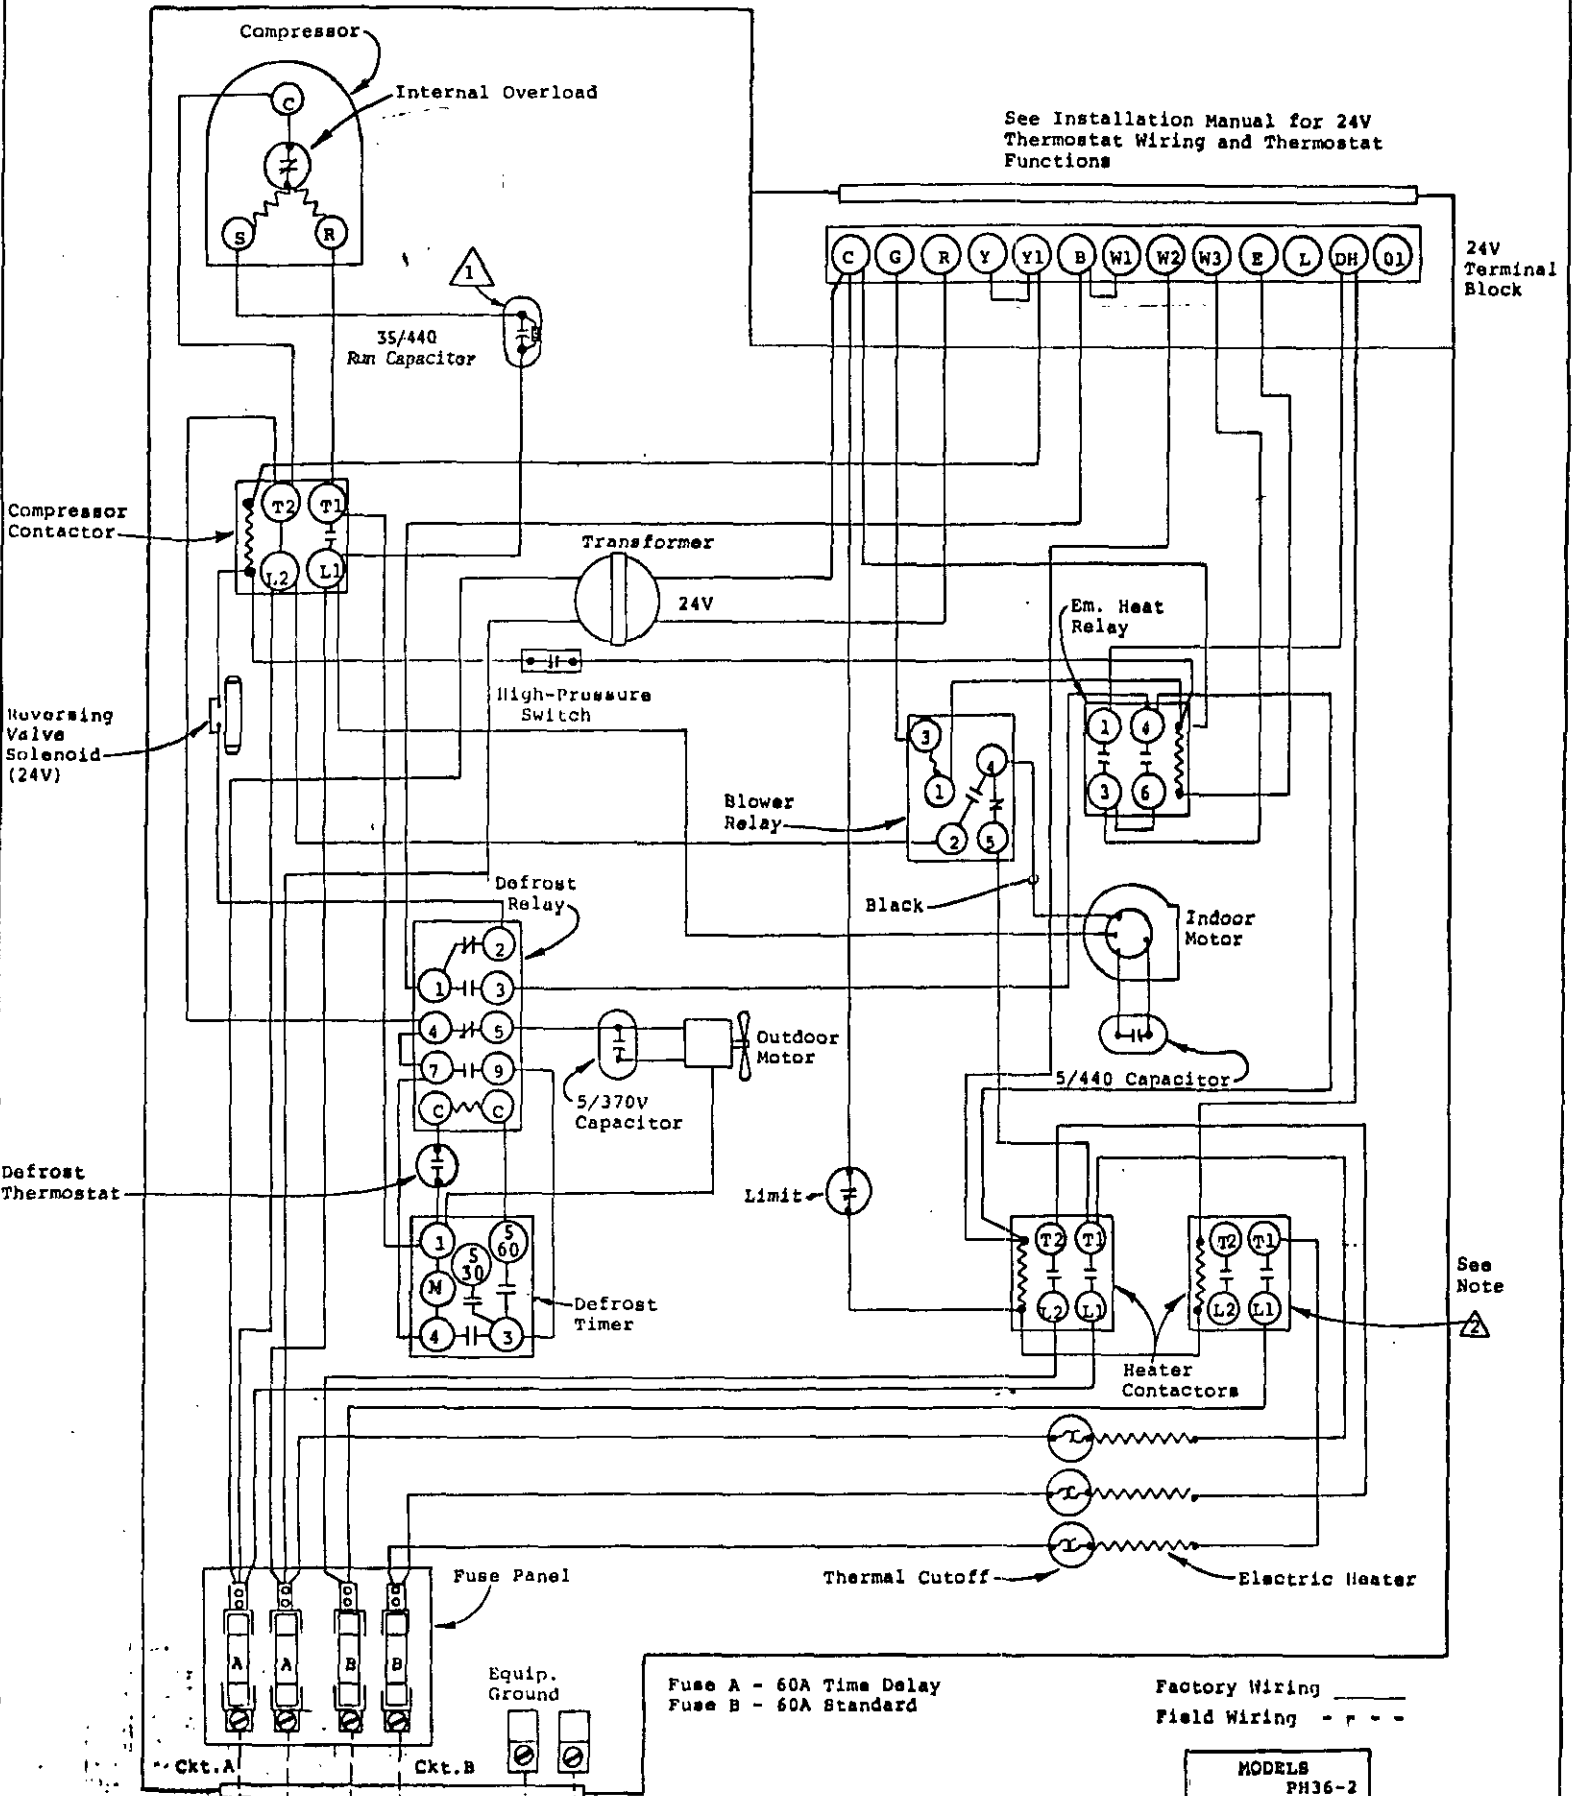

24V
Terminal
Block

See
Note

Fuse A - 60A Time Delay
Fuse B - 60A Standard

Factory Wiring ———
Field Wiring - - - -

MODELS
PH36-2
Heat Pump
w/15kw

USE COPPER OR
ALUMINUM WIRE

240/220-50-1

4005-440