


See installation manual for 24V thermostat wiring and thermostat functions.

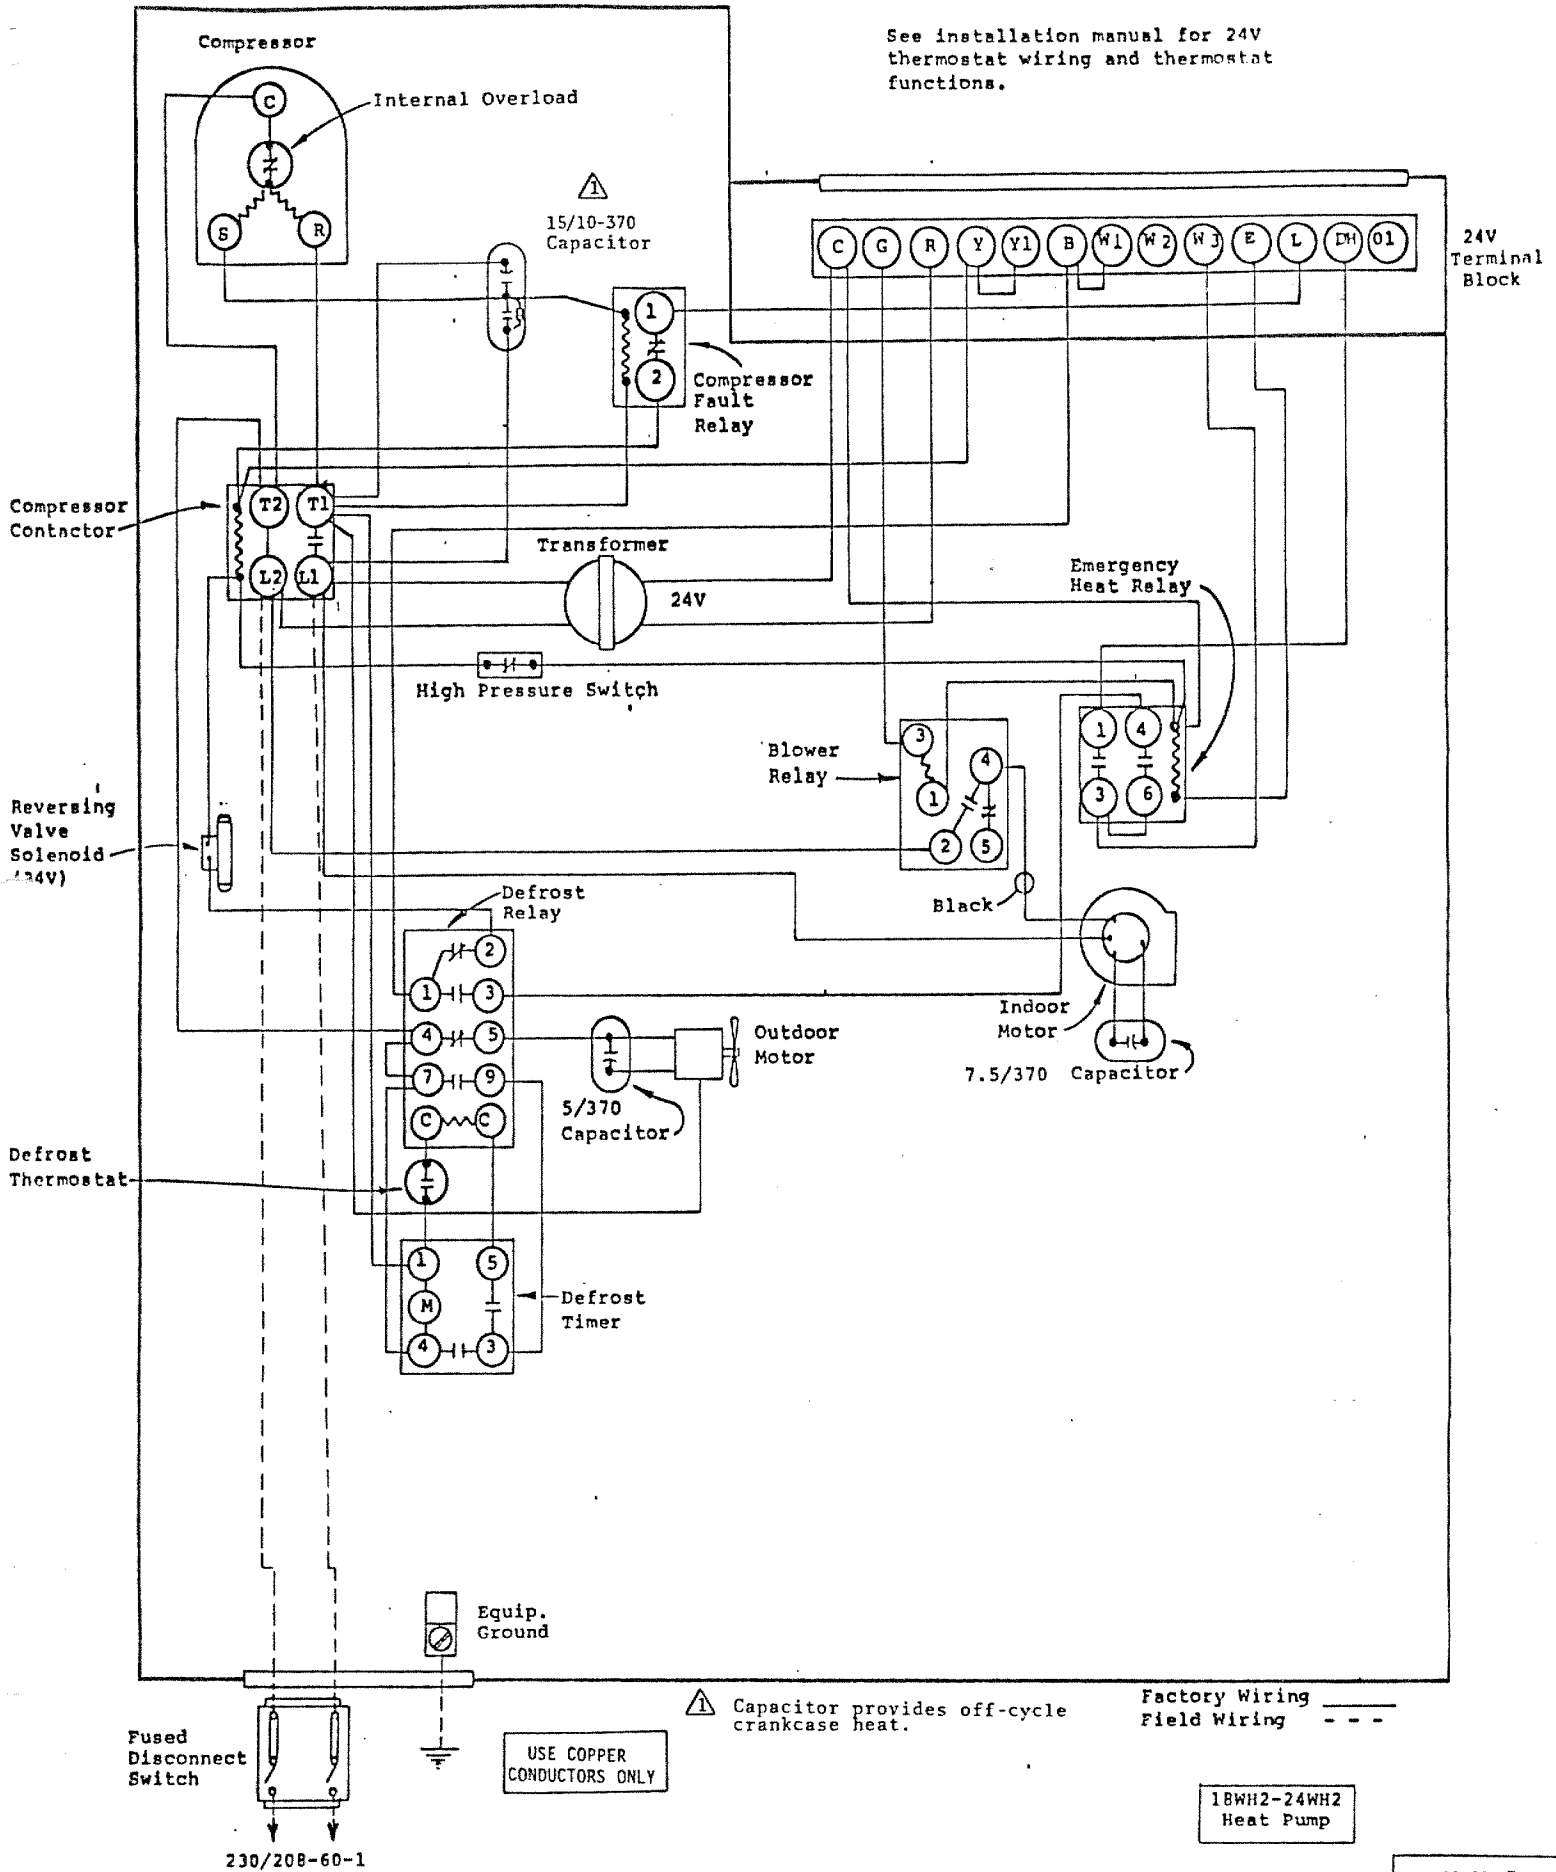

24V Terminal Block

USE COPPER CONDUCTORS ONLY

⚠ Capacitor provides off-cycle crankcase heat.

Factory Wiring ———
Field Wiring - - -

18WH2-24WH2 Heat Pump

4011-110 F

Fused Disconnect Switch

230/208-60-1