

CONTROL KIT TO BASIC UNIT CONNECTION DIAGRAM

- FACTORY WIRE TO BE REMOVED
- FACTORY WIRE TO BE RECONNECTED
- FACTORY WIRING
- FIELD WIRING CONNECTION

- THIS OPTIONAL CONTROL ACCESSORY HAS BEEN ADDED TO THIS UNIT -

- IF ECONOMIZER IS INSTALLED, CONTROL KIT IS LOCATED BEHIND COMPRESSOR PARTITION IN THE RETURN AIR OPENING -

AIR CONDITIONING MODELS

