


2 FURNACE 24V TERMINAL  
 FAN CENTER 5900-01E005A07,  
 R8325A1057 OR 175-200101-10  
 OR ELECTRONIC BLOWER  
 CONTROL 45200, 24V TERMINAL.

1 SET ADJUST HEAT ANTICIPATOR (SEE FURNACE INSTALLATION INSTRUCTIONS)

2 IF THE FURNACE IS NOT INTERNALLY WIRED FOR ADD ON AIR CONDITIONING, A FAN CENTER WILL NEED TO BE ADDED.

3 OPTION SWITCH SETTING  
 SWITCH #1 "OFF"  
 SWITCH #2 "OFF"  
 SWITCH #3 "OFF"  
 SWITCH #4 SEE THERMOSTAT INSTALLATION INSTRUCTIONS

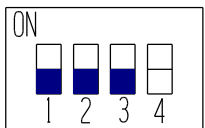

WATER SOURCE HEAT PUMP W/GAS FURNACE

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----

LOW VOLTAGE FIELD WIRING MUST BE CLASS 1