


1 SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).

2 WHEN OUTDOOR THERMOSTAT (USED AS COMPRESSOR CUTOFF) IS INSTALLED, REMOVE JUMPER Y-Y1.

3 IF OUTDOOR THERMOSTAT IS USED TO STAGE HEAT, REMOVE JUMPER W3-O1.

4 OPTION SWITCH SETTING

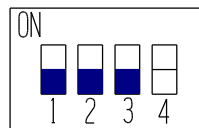

SWITCH #1 "OFF"
 SWITCH #2 "OFF"
 SWITCH #3 "OFF"
 SWITCH #4 SEE THERMOSTAT

INSTALLATION INSTRUCTIONS

5 FOR COUNTERFLOW APPLICATIONS, REMOVE JUMPER W3-O1 ON BC35B & BC36B MODELS ONLY.

HEATPUMP W/14 TO 20KW BLOWER COIL

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----