


① SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).

② OPTION SWITCH SETTING

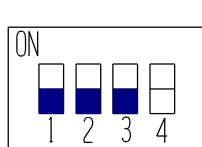

SWITCH #1 "OFF"
 SWITCH #2 "OFF"
 SWITCH #3 "OFF"
 SWITCH #4 SEE THERMOSTAT
 INSTALLATION INSTRUCTIONS

WATER SOURCE HEATPUMP
 W/5 TO 10KW BLOWER COIL

LOW VOLTAGE FIELD
 WIRING MUST BE
 CLASS 1

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----