



- ① SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).
- ② ADD JUMPER W2-W3
- ③ OPTION SWITCH SETTING

WATER SOURCE HEATPUMP  
W/14 TO 20KW BLOWER COIL

ON

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
|---|---|---|---|

SWITCH #1 "OFF"  
SWITCH #2 "OFF"  
SWITCH #3 "OFF"  
SWITCH #4 SEE THERMOSTAT  
INSTALLATION INSTRUCTIONS

LOW VOLTAGE FIELD  
WIRING MUST BE  
CLASS 1

|              | FACTORY<br>WIRING | FIELD<br>WIRING |
|--------------|-------------------|-----------------|
| LOW VOLTAGE  | _____             | -----           |
| HIGH VOLTAGE | —————             | -----           |