


NOTE: REVERSING VALVE OPTION
MUST BE SET TO "COOLING"

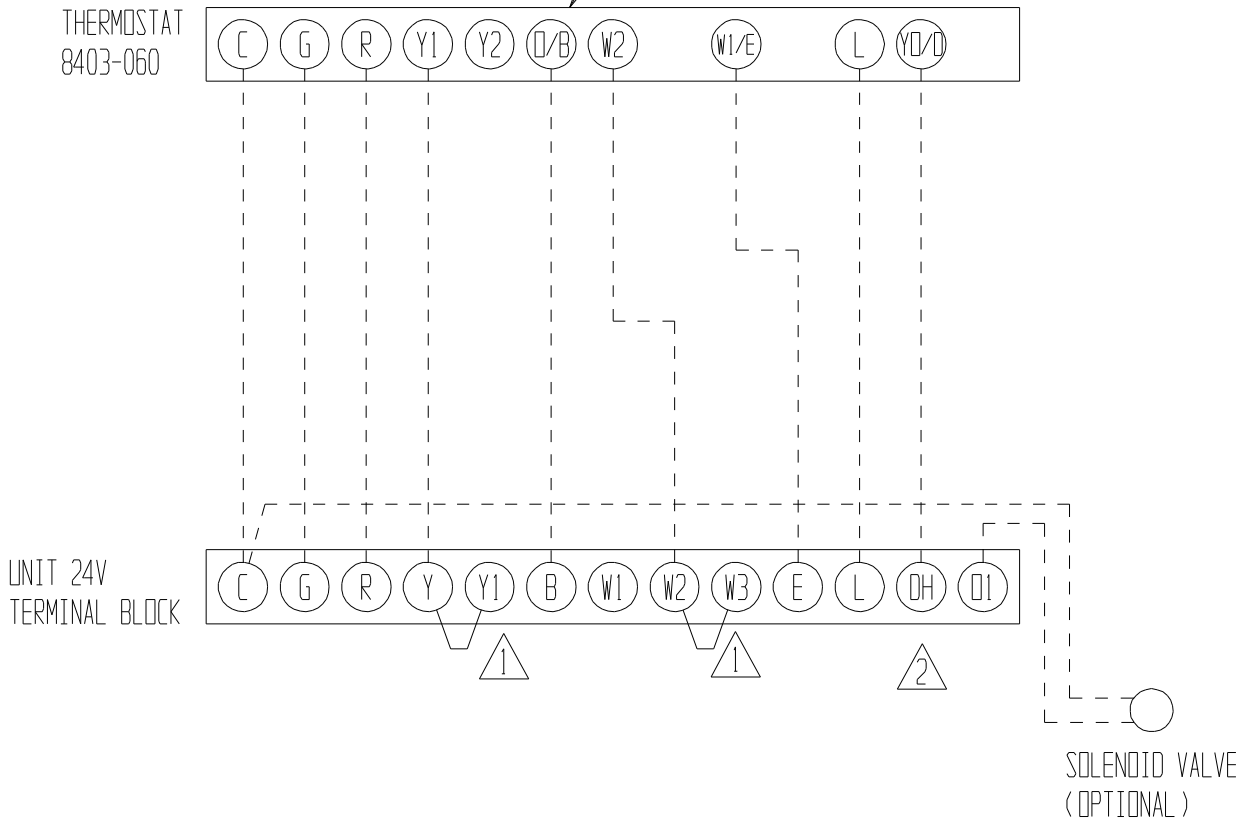

FACTORY INSTALLED JUMPER



MAKE THIS CONNECTION IF HUMIDITY CONTROL SEQUENCE IS DESIRED.
THERMOSTAT MUST BE CONFIGURED FOR "NO ECONOMIZER" FOR HUMIDITY CONTROL TO BE ACTIVE.
REFER TO SECTION "HUMIDITY CONTROL" FOR SET UP.

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	_____	-----