

1 THERMOSTAT  
1F92-71


5 FURNACE 24V TERMINAL,  
FAN CENTER 5900-01E005A07  
R8325A1057, 175-200101-10  
OR ELECTRONIC BLOWER CONTROL  
45200, 24V TERMINAL.

3 OUTDOOR UNIT  
24V TERMINAL

BROWN  
BLUE

YELLOW

1 OPTION SWITCH SETTING

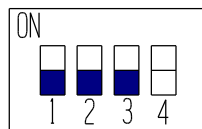

SWITCH #1 "OFF"  
SWITCH #2 "OFF"  
SWITCH #3 "OFF"  
SWITCH #4 SEE THERMOSTAT  
INSTALLATION INSTRUCTIONS

2 WHEN OUTDOOR THERMOSTATE (USED AS CHANGEOVER THERMOSTAT)  
IS INSTALLED, REMOVE JUMPER Y-Y1.

3 IF IT DESIRED NOT TO ALLOW FURNACE TO CYCLE "ON" DURING  
DEFROST, A 24V FACTORY WIRE RETURN (TERMINAL "3" OF  
DEFROST RELAY AND TERMINAL "4" ON EMERGENCY HEAT RELAY  
ON HPQ MODELS OR TERMINAL W2 OF HEATPUMP CONTROL AND  
TERMINAL DH ON TERMINAL BOARD ON UHP MODELS) MUST BE  
REMOVED.

4 HPQ SERIES MODEL DO NOT HAVE R TERMINAL AND IT IS  
NOT REQUIRED TO RUN R WIRE TO THESE MODELS.

5 IF THE FURNACE IS NOT INTERNALLY WIRED FOR ADD ON  
AIR CONDITIONING, A FAN CENTER WILL NEED TO BE ADDED.

HEAT PUMP W/GAS FURNACE

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----