


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

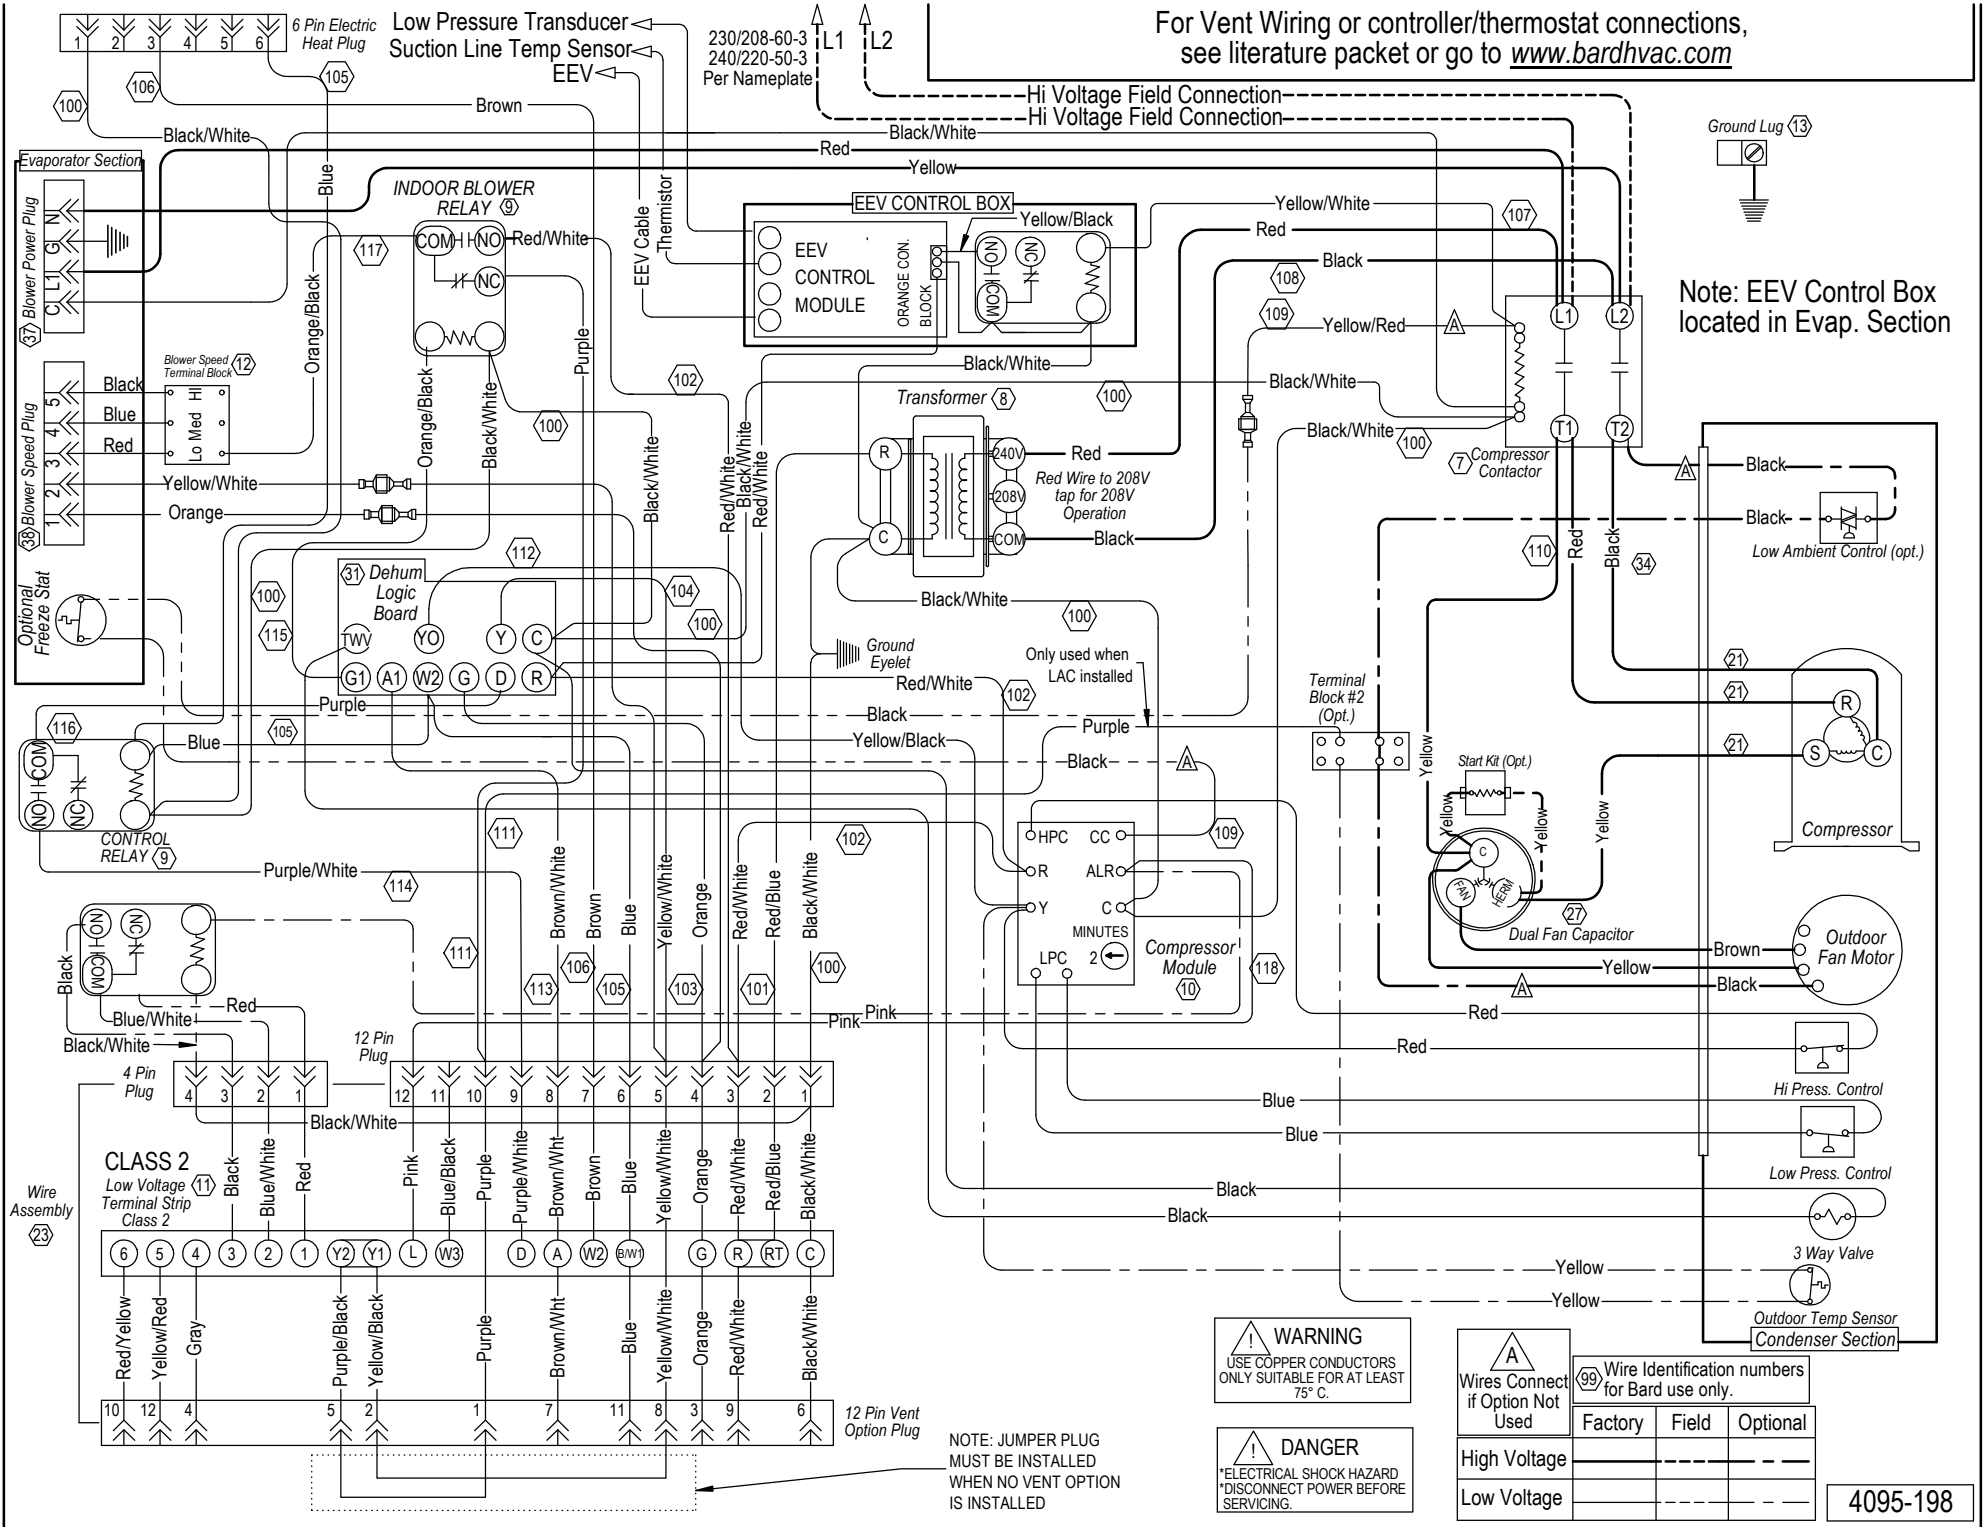

Note: EEV Control Box located in Evap. Section

<p>WARNING USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.</p>	<p>DANGER ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.</p>	<p>Wires Connect if Option Not Used</p>		
		<p>99 Wire Identification numbers for Bard use only.</p>		
High Voltage		Factory	Field	Optional
Low Voltage				

4095-198