


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

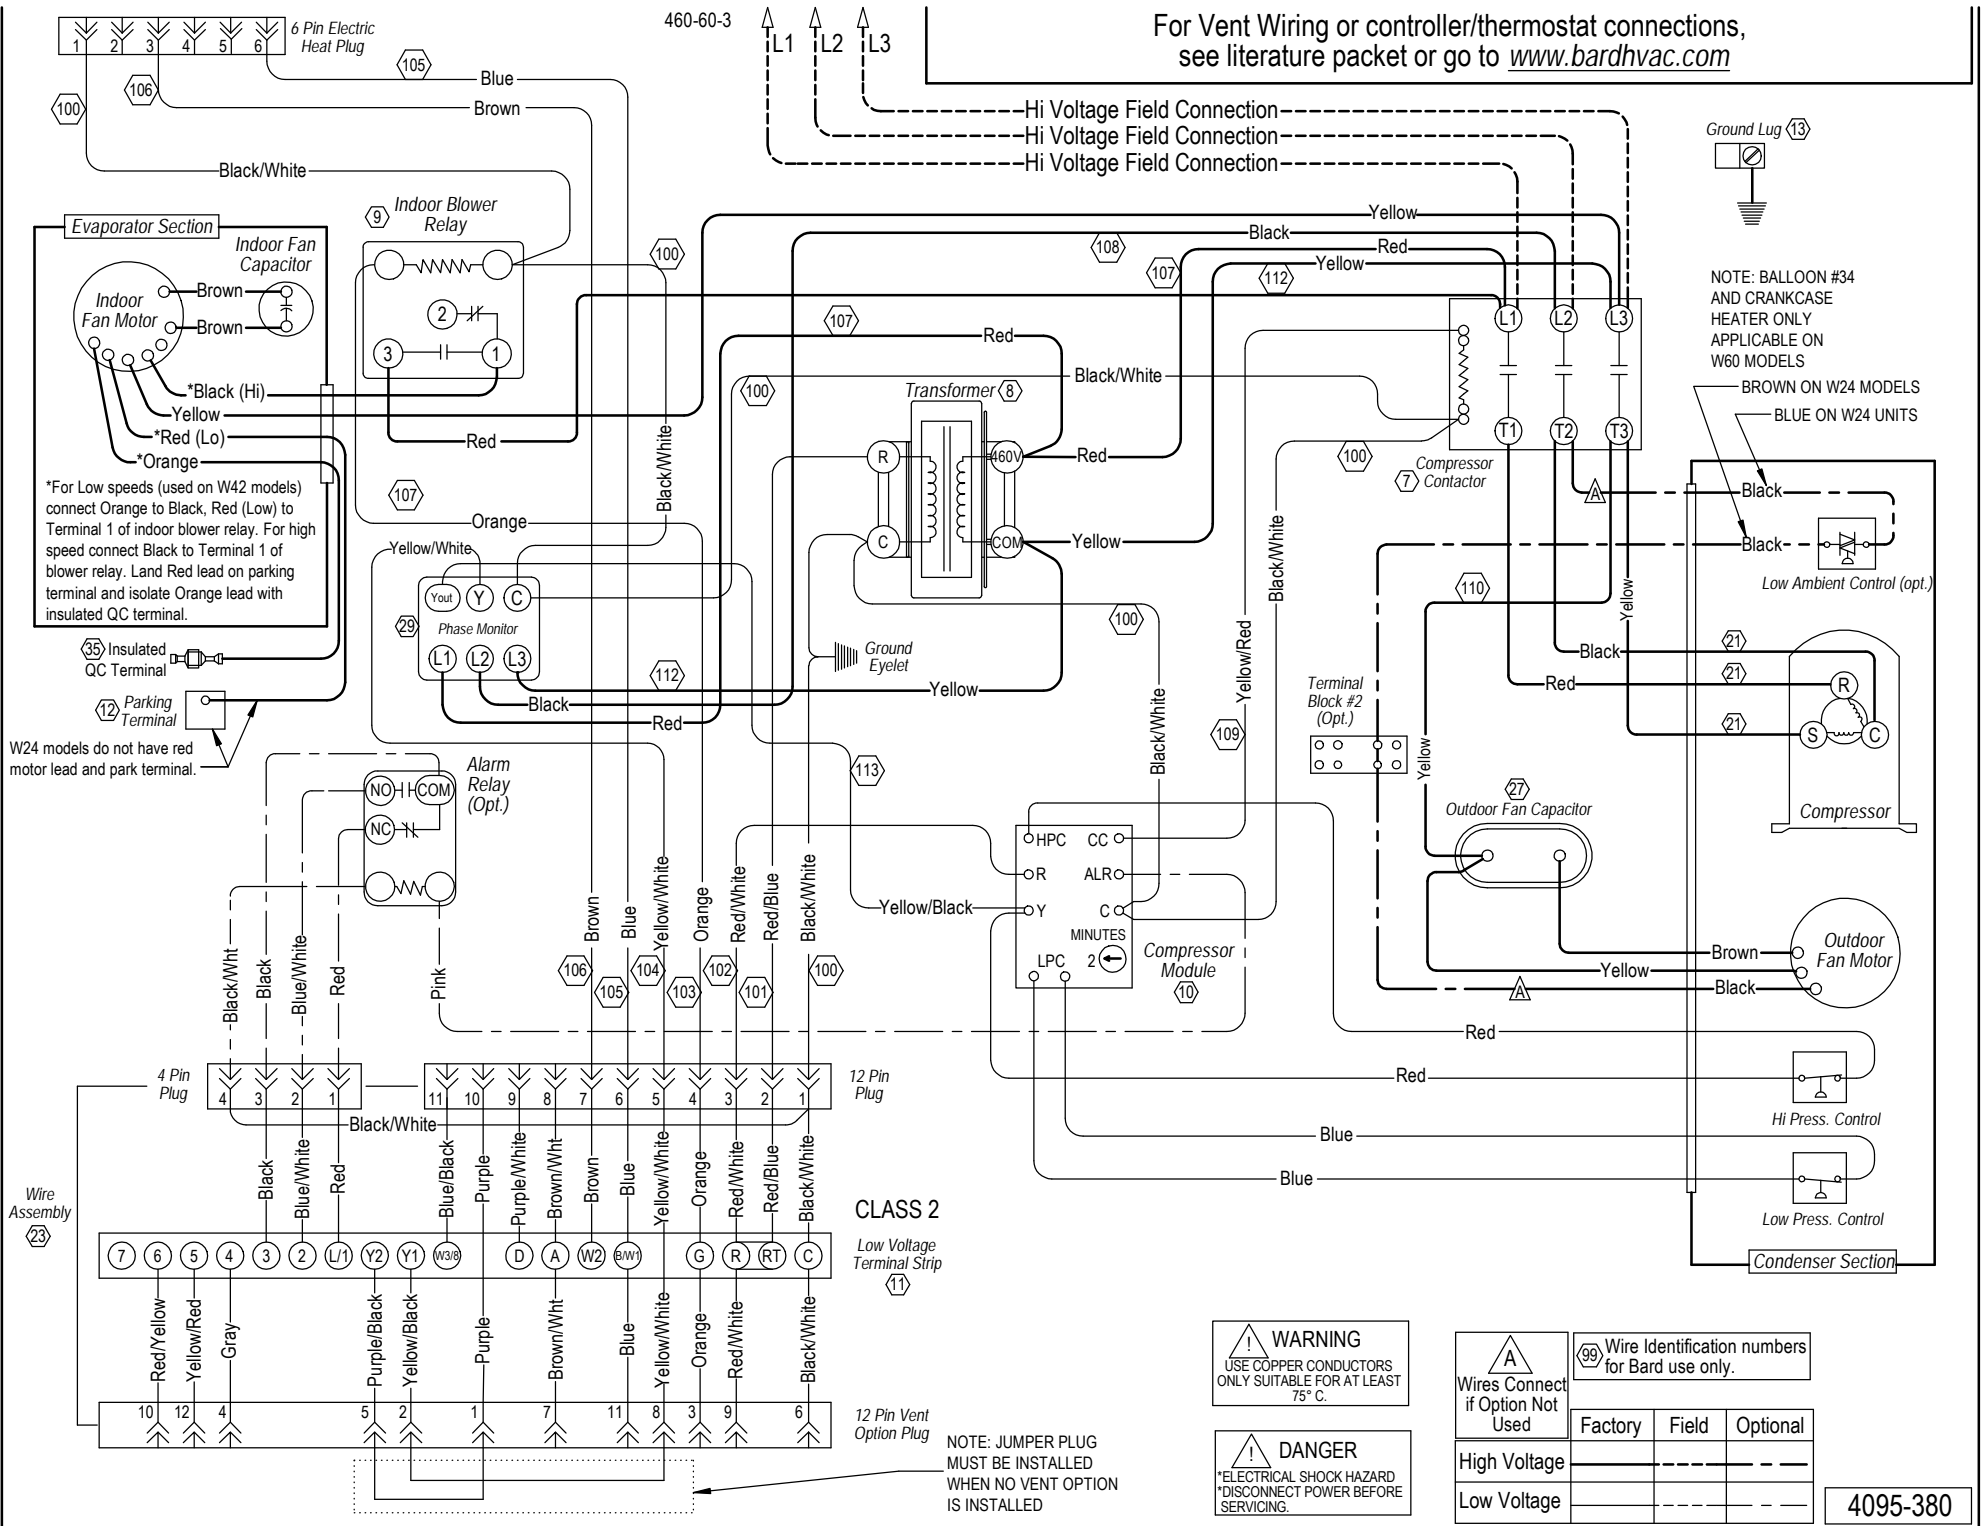

\*For Low speeds (used on W42 models) connect Orange to Black, Red (Low) to Terminal 1 of indoor blower relay. For high speed connect Black to Terminal 1 of blower relay. Land Red lead on parking terminal and isolate Orange lead with insulated QC terminal.

NOTE: BALLOON #34 AND CRANKCASE HEATER ONLY APPLICABLE ON W60 MODELS  
BROWN ON W24 MODELS  
BLUE ON W24 UNITS

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

Wires Connect if Option Not Used	99 Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED