


For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

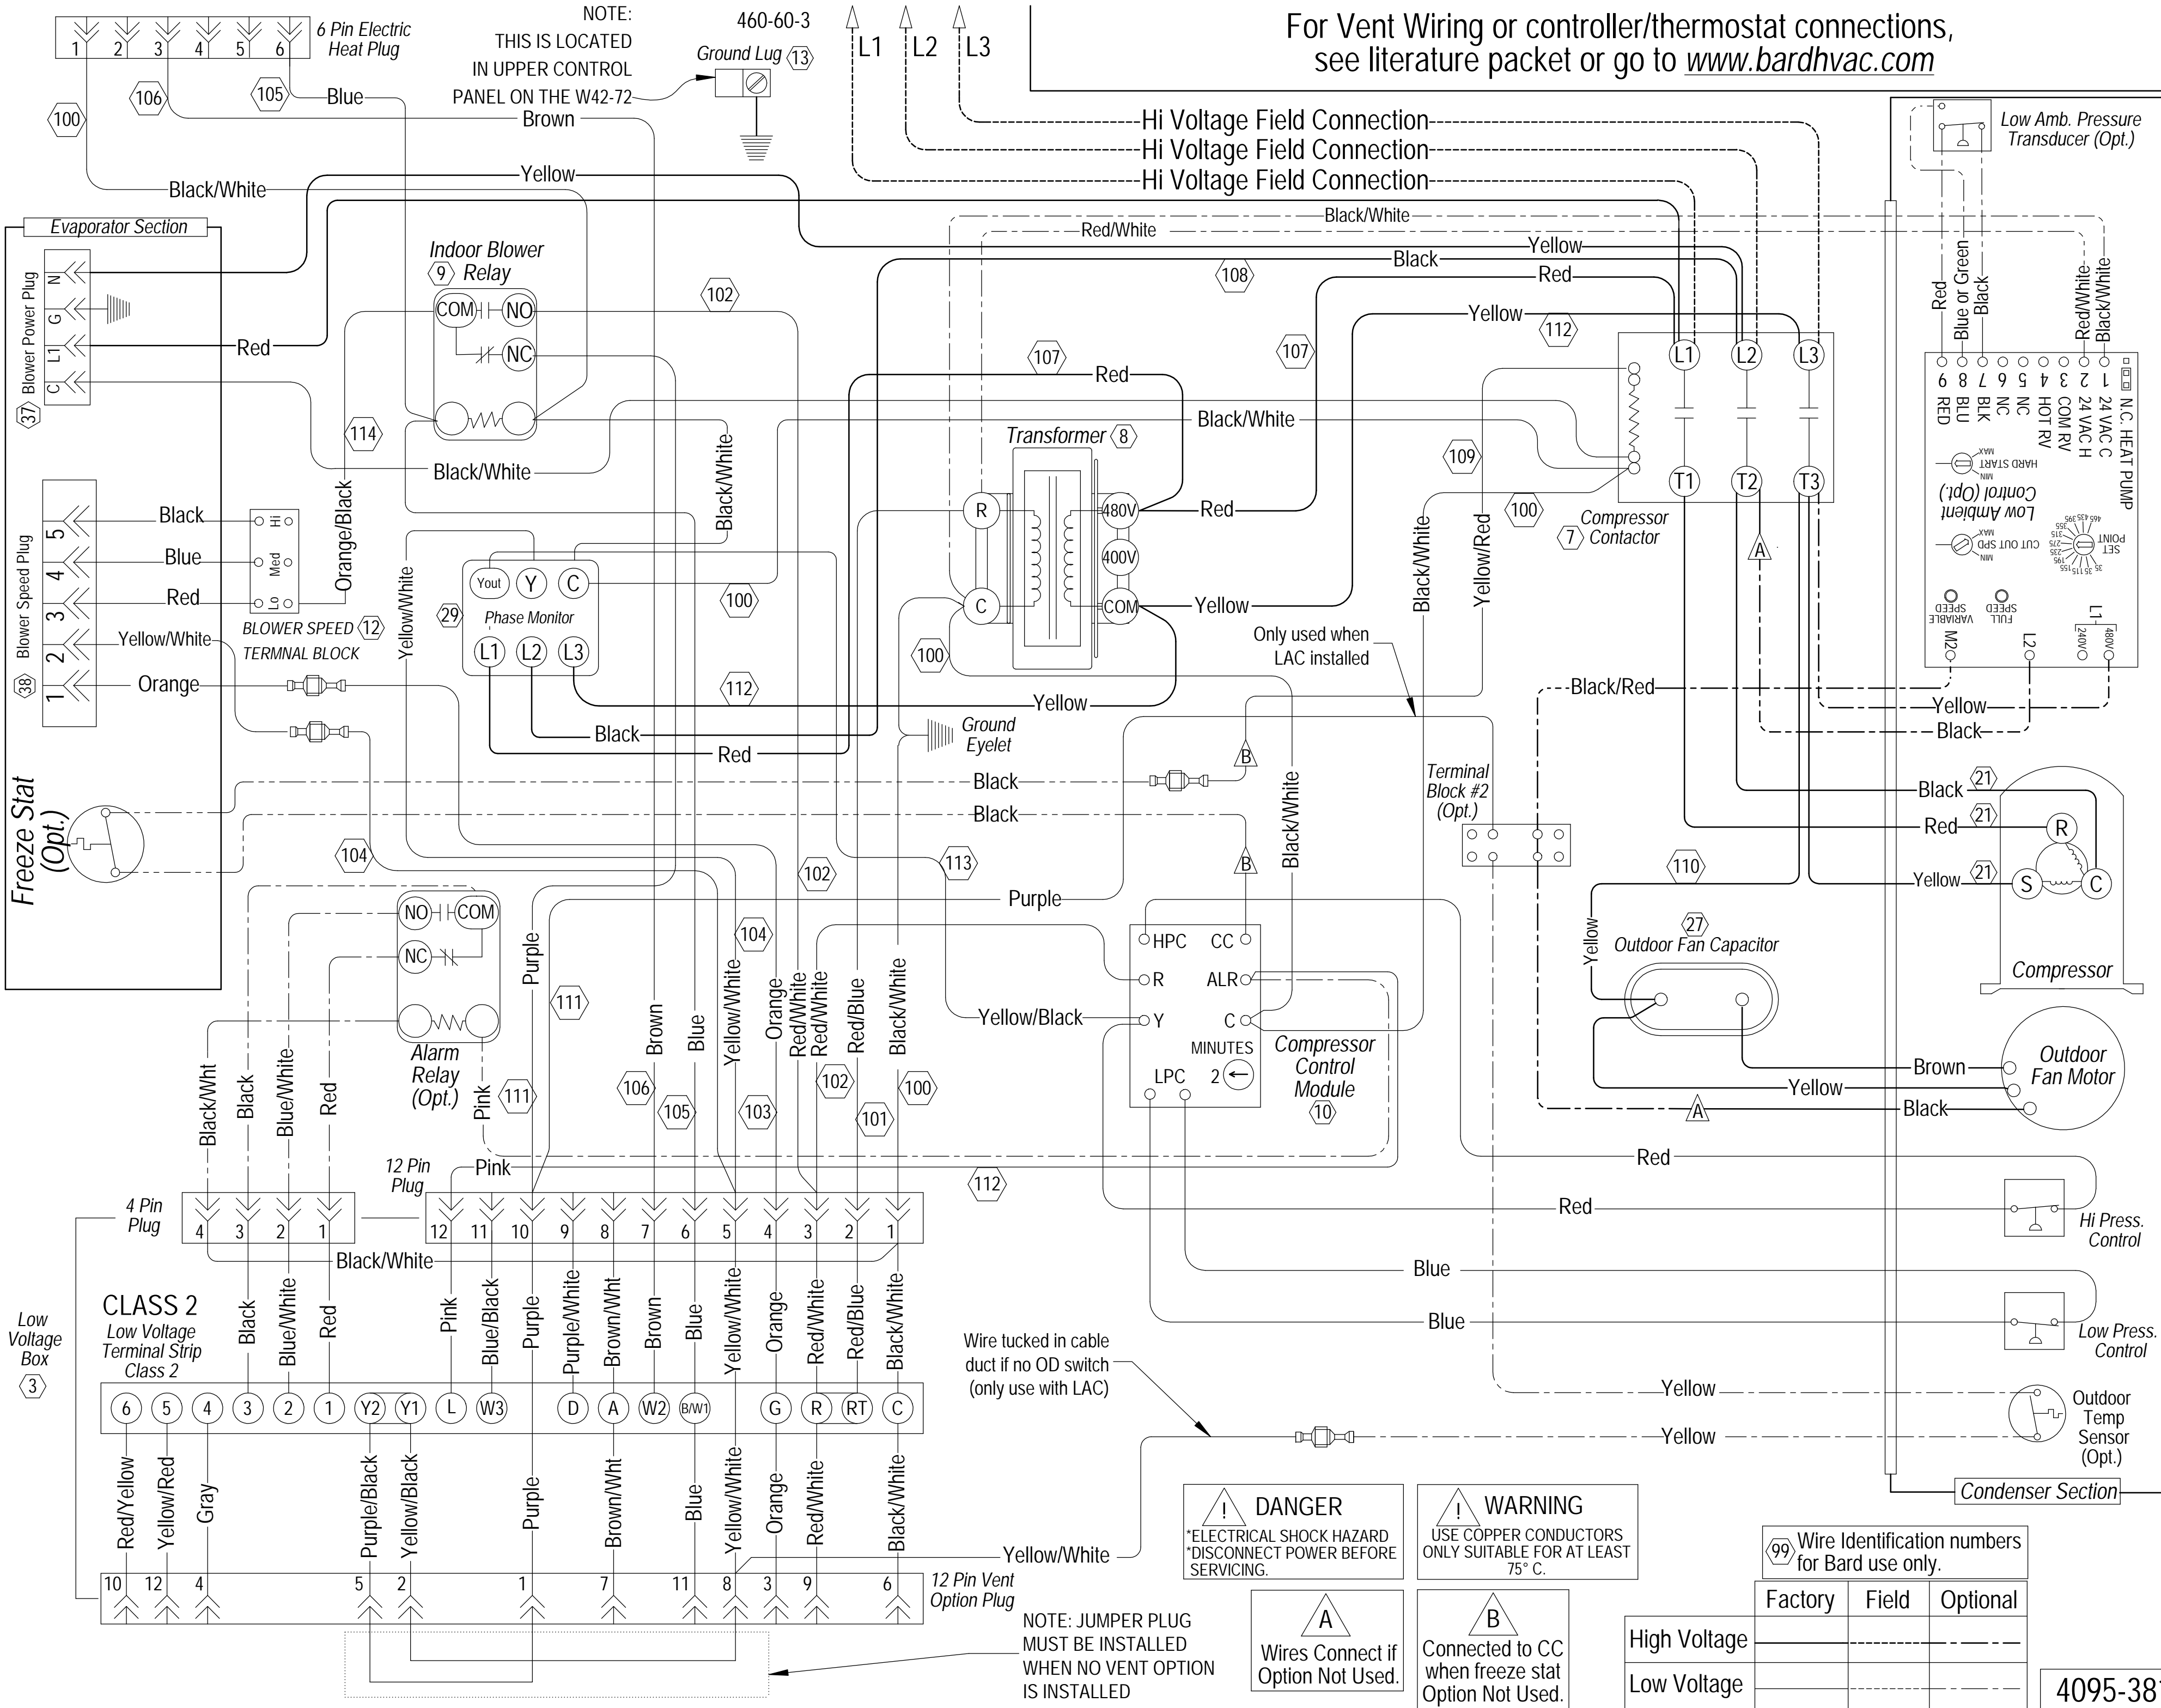

NOTE:  
THIS IS LOCATED  
IN UPPER CONTROL  
PANEL ON THE W42-72

460-60-3  
Ground Lug

**DANGER**  
\*ELECTRICAL SHOCK HAZARD  
\*DISCONNECT POWER BEFORE  
SERVICING.

**WARNING**  
USE COPPER CONDUCTORS  
ONLY SUITABLE FOR AT LEAST  
75° C.

**A**  
Wires Connect if  
Option Not Used.

**B**  
Connected to CC  
when freeze stat  
Option Not Used.

99 Wire Identification numbers  
for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

NOTE: JUMPER PLUG  
MUST BE INSTALLED  
WHEN NO VENT OPTION  
IS INSTALLED