


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhv.com

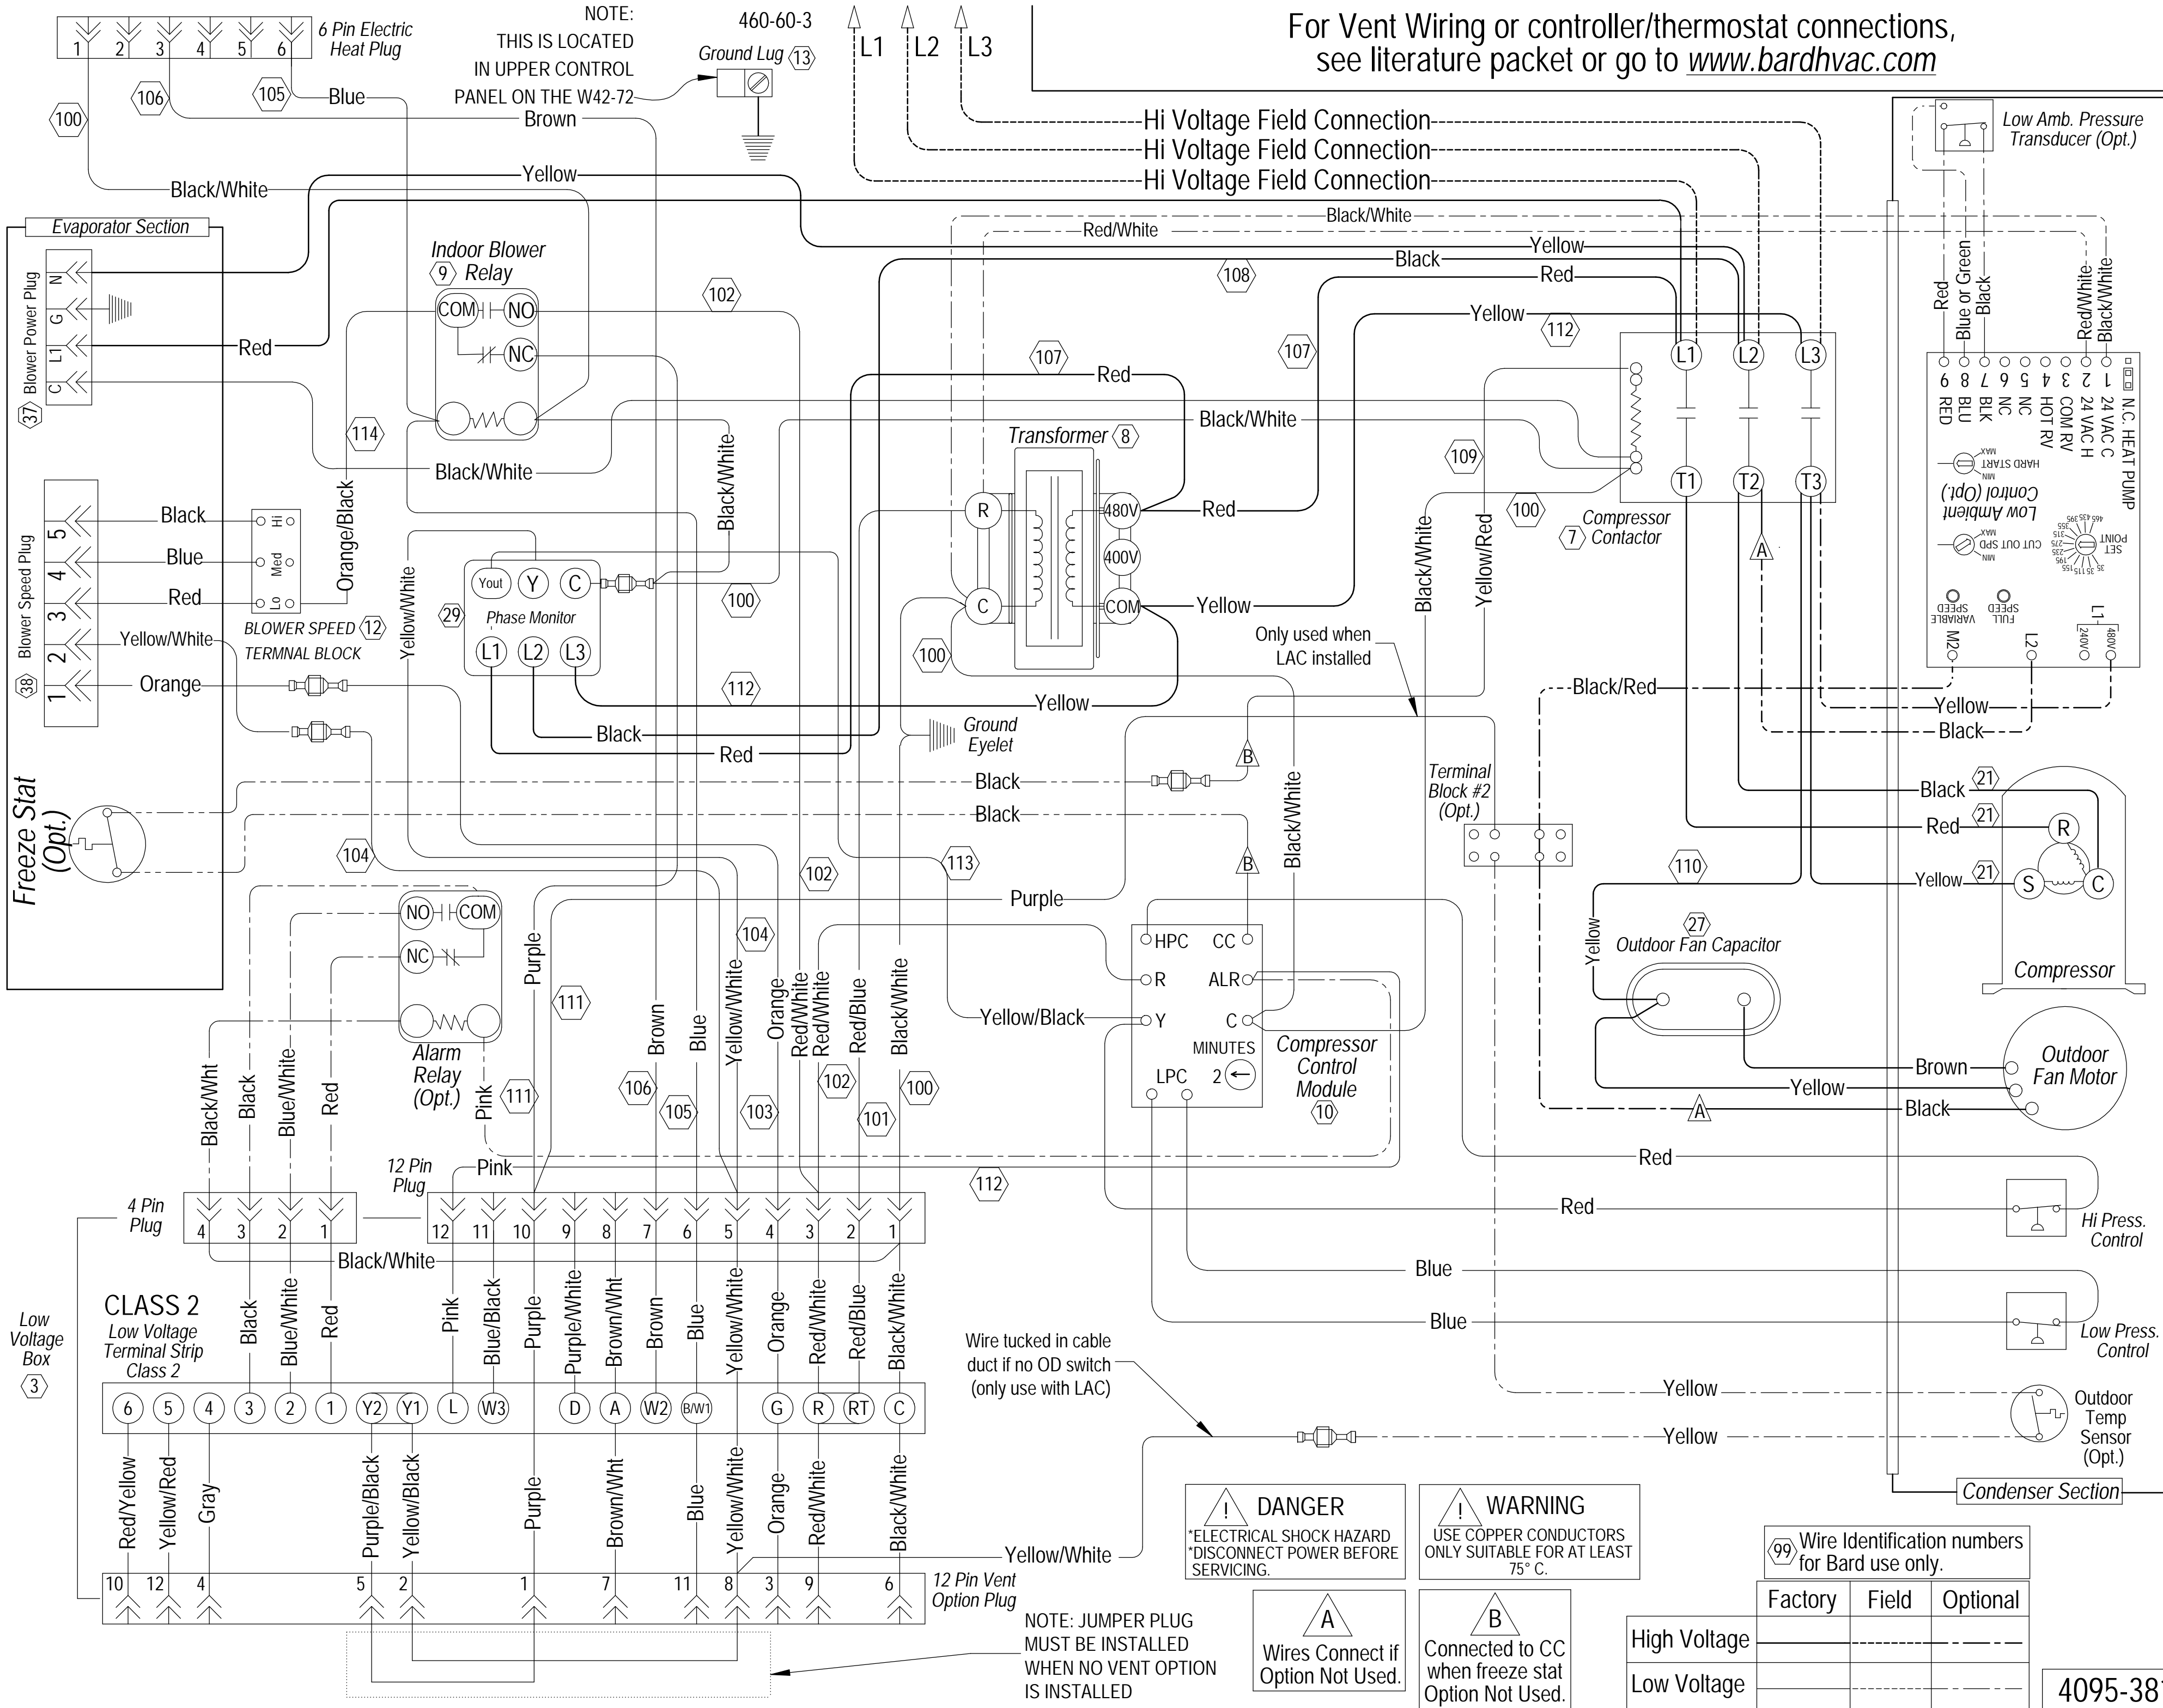

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL ON THE W42-72

460-60-3 Ground Lug

6 Pin Electric Heat Plug

Evaporator Section

Blower Power Plug

Blower Speed Plug

Freeze Stat (Opt.)

Indoor Blower Relay

Phase Monitor

Transformer

Compressor Contactor

Compressor Control Module

Low Amb. Pressure Transducer (Opt.)

Low Ambient Control (Opt.)

Compressor

Outdoor Fan Motor

Outdoor Fan Capacitor

Hi Press. Control

Low Press. Control

Outdoor Temp Sensor (Opt.)

Condenser Section

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

A
Wires Connect if Option Not Used.

B
Connected to CC when freeze stat Option Not Used.

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED