


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

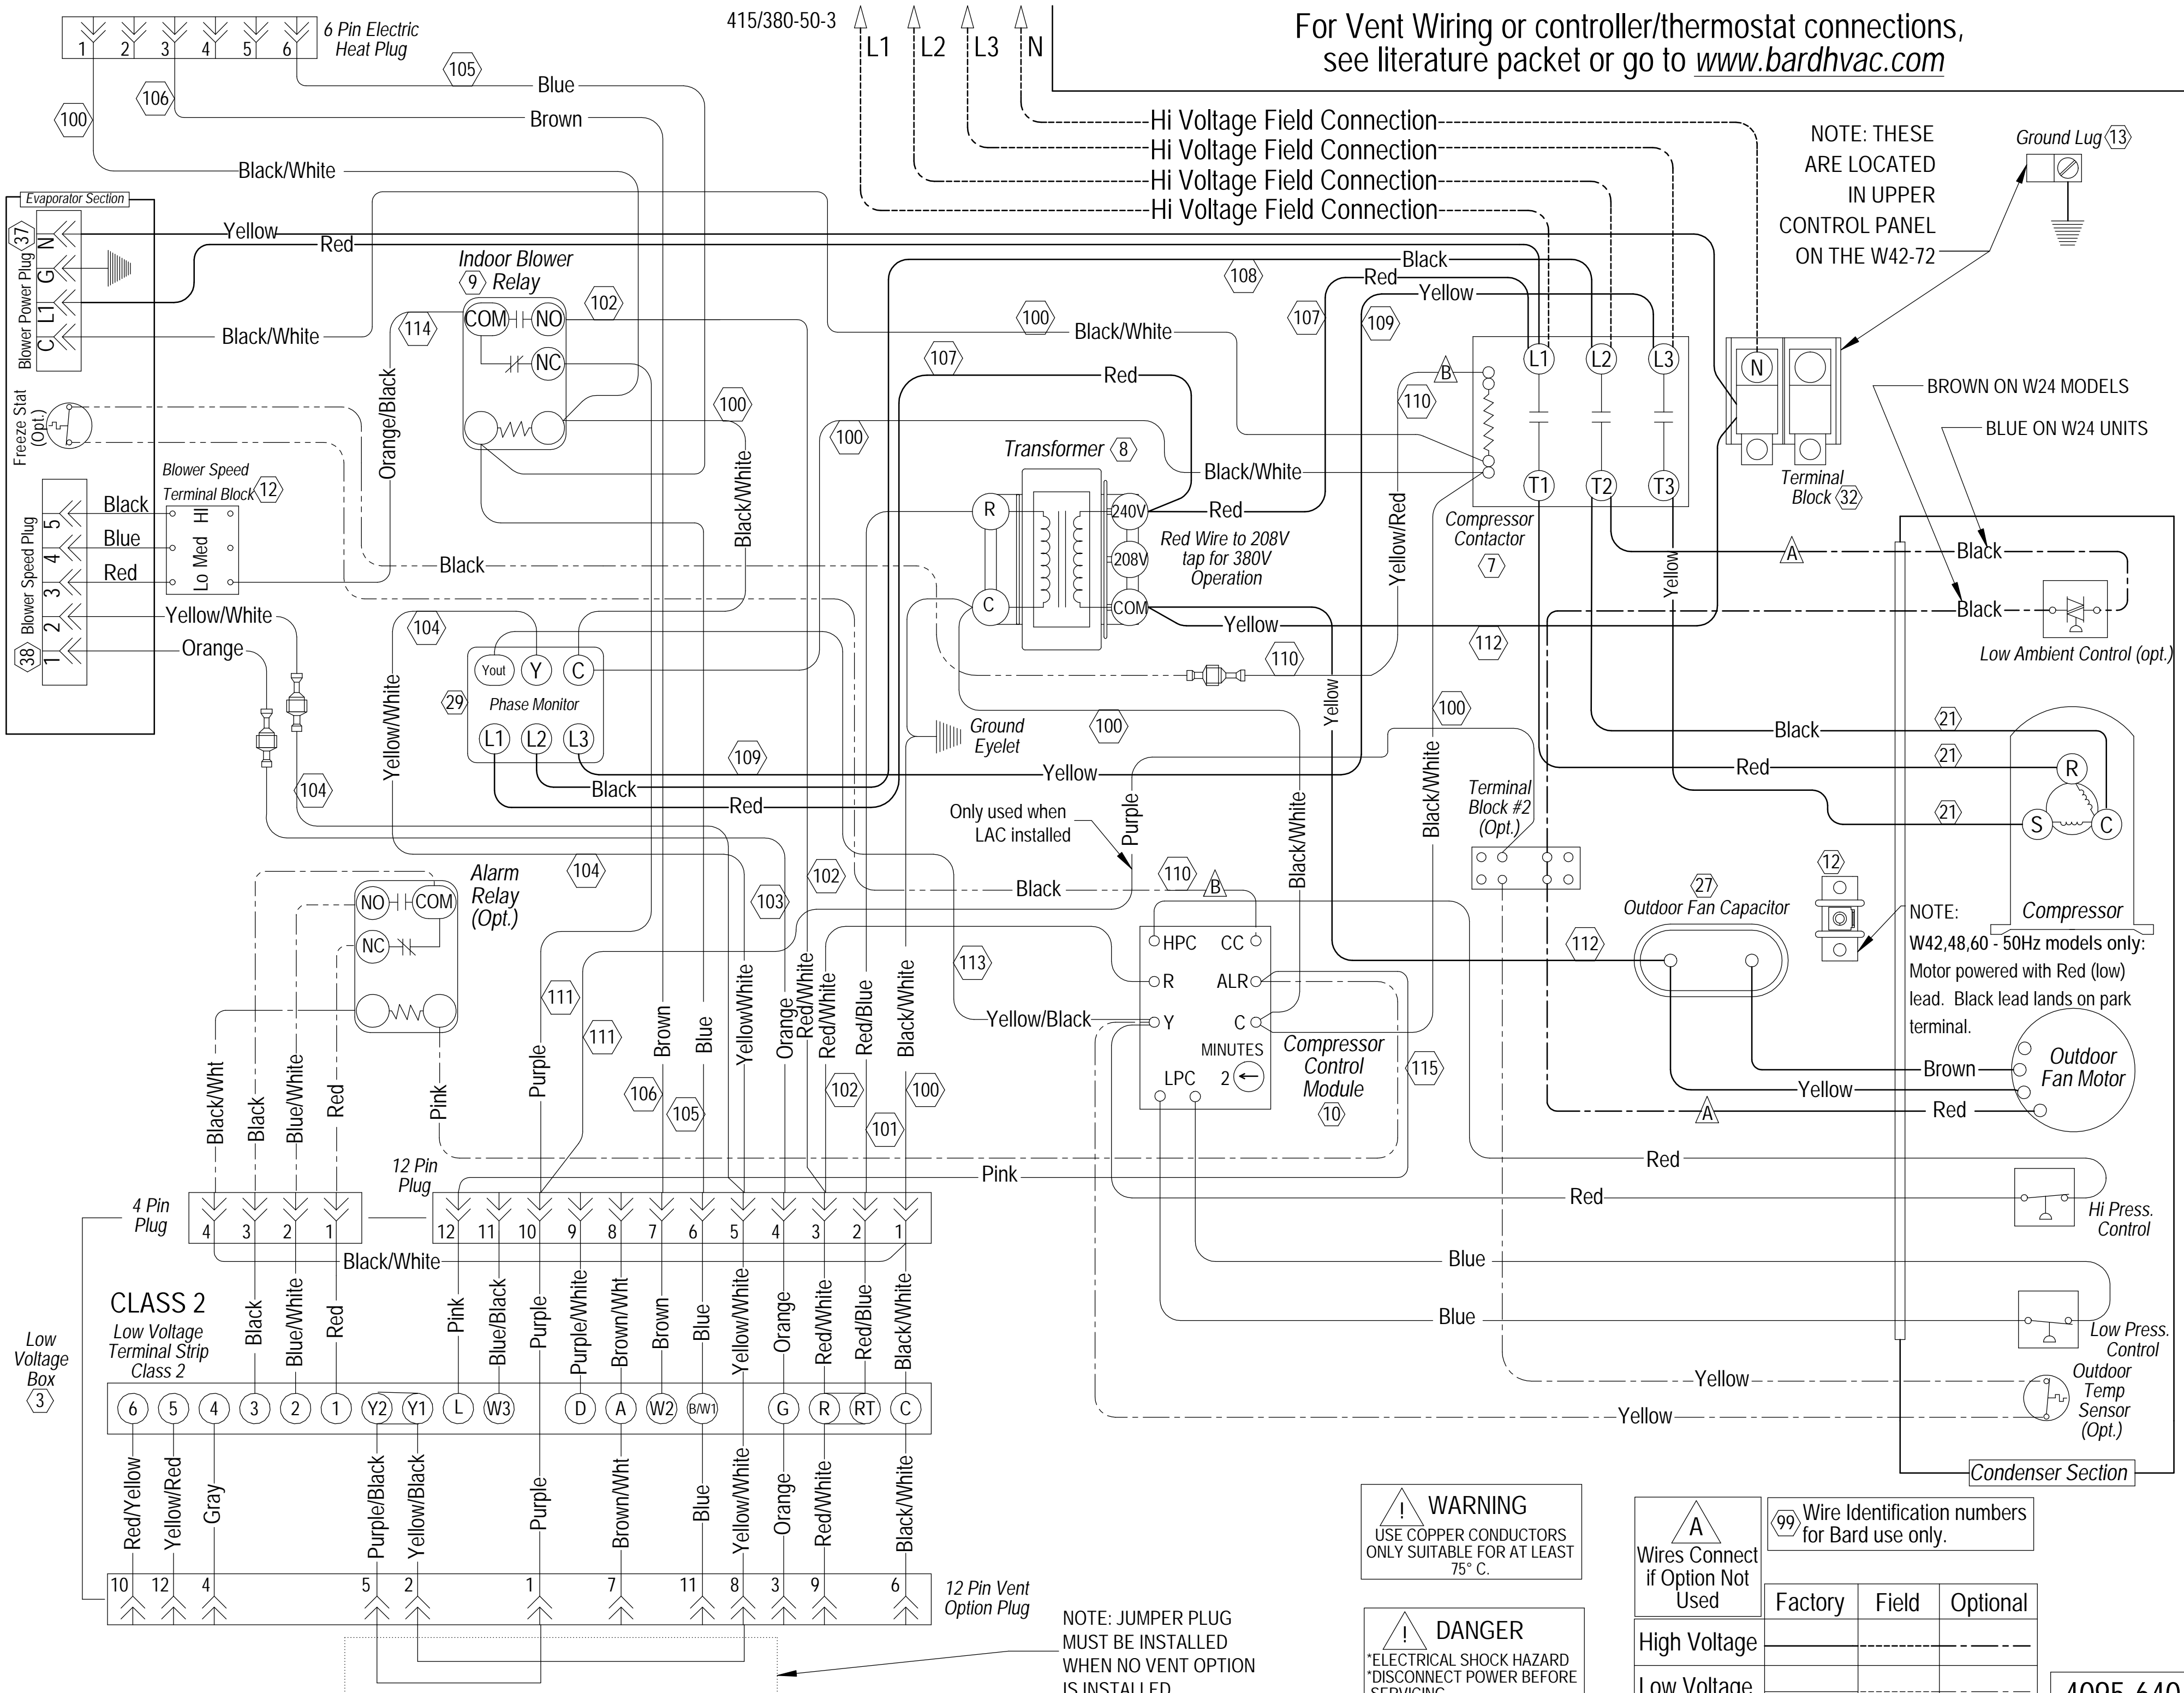

NOTE: THESE ARE LOCATED IN UPPER CONTROL PANEL ON THE W42-72

BROWN ON W24 MODELS
BLUE ON W24 UNITS

NOTE: W42,48,60 - 50Hz models only: Motor powered with Red (low) lead. Black lead lands on park terminal.

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

A
Wires Connect if Option Not Used

⁹⁹ Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4095-640 C