



1 FOR ANTIFREEZE LOOP APPLICATIONS, CHANGE LOW PRESSURE SWITCH TO YELLOW LEADS ON LPC TERMINALS OF GEOTHERMAL LOGIC CONTROL BOARD

2 H.P.S = Green fault light illuminated when fault indicated.
 3 L.P.S = Orange fault light illuminated when fault indicated.
 4 F.S. = Red fault light illuminated when fault indicated.

5 COND. = Yellow fault light illuminated when fault indicated.
 6 Status = Green Status LED will blink in normal operation.

WARNING
 USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75°C.

DANGER
 ELECTRICAL SHOCK HAZARD
 DISCONNECT POWER BEFORE SERVICING.

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4117-101 E