


WIRES TO VENTILATION MODULE

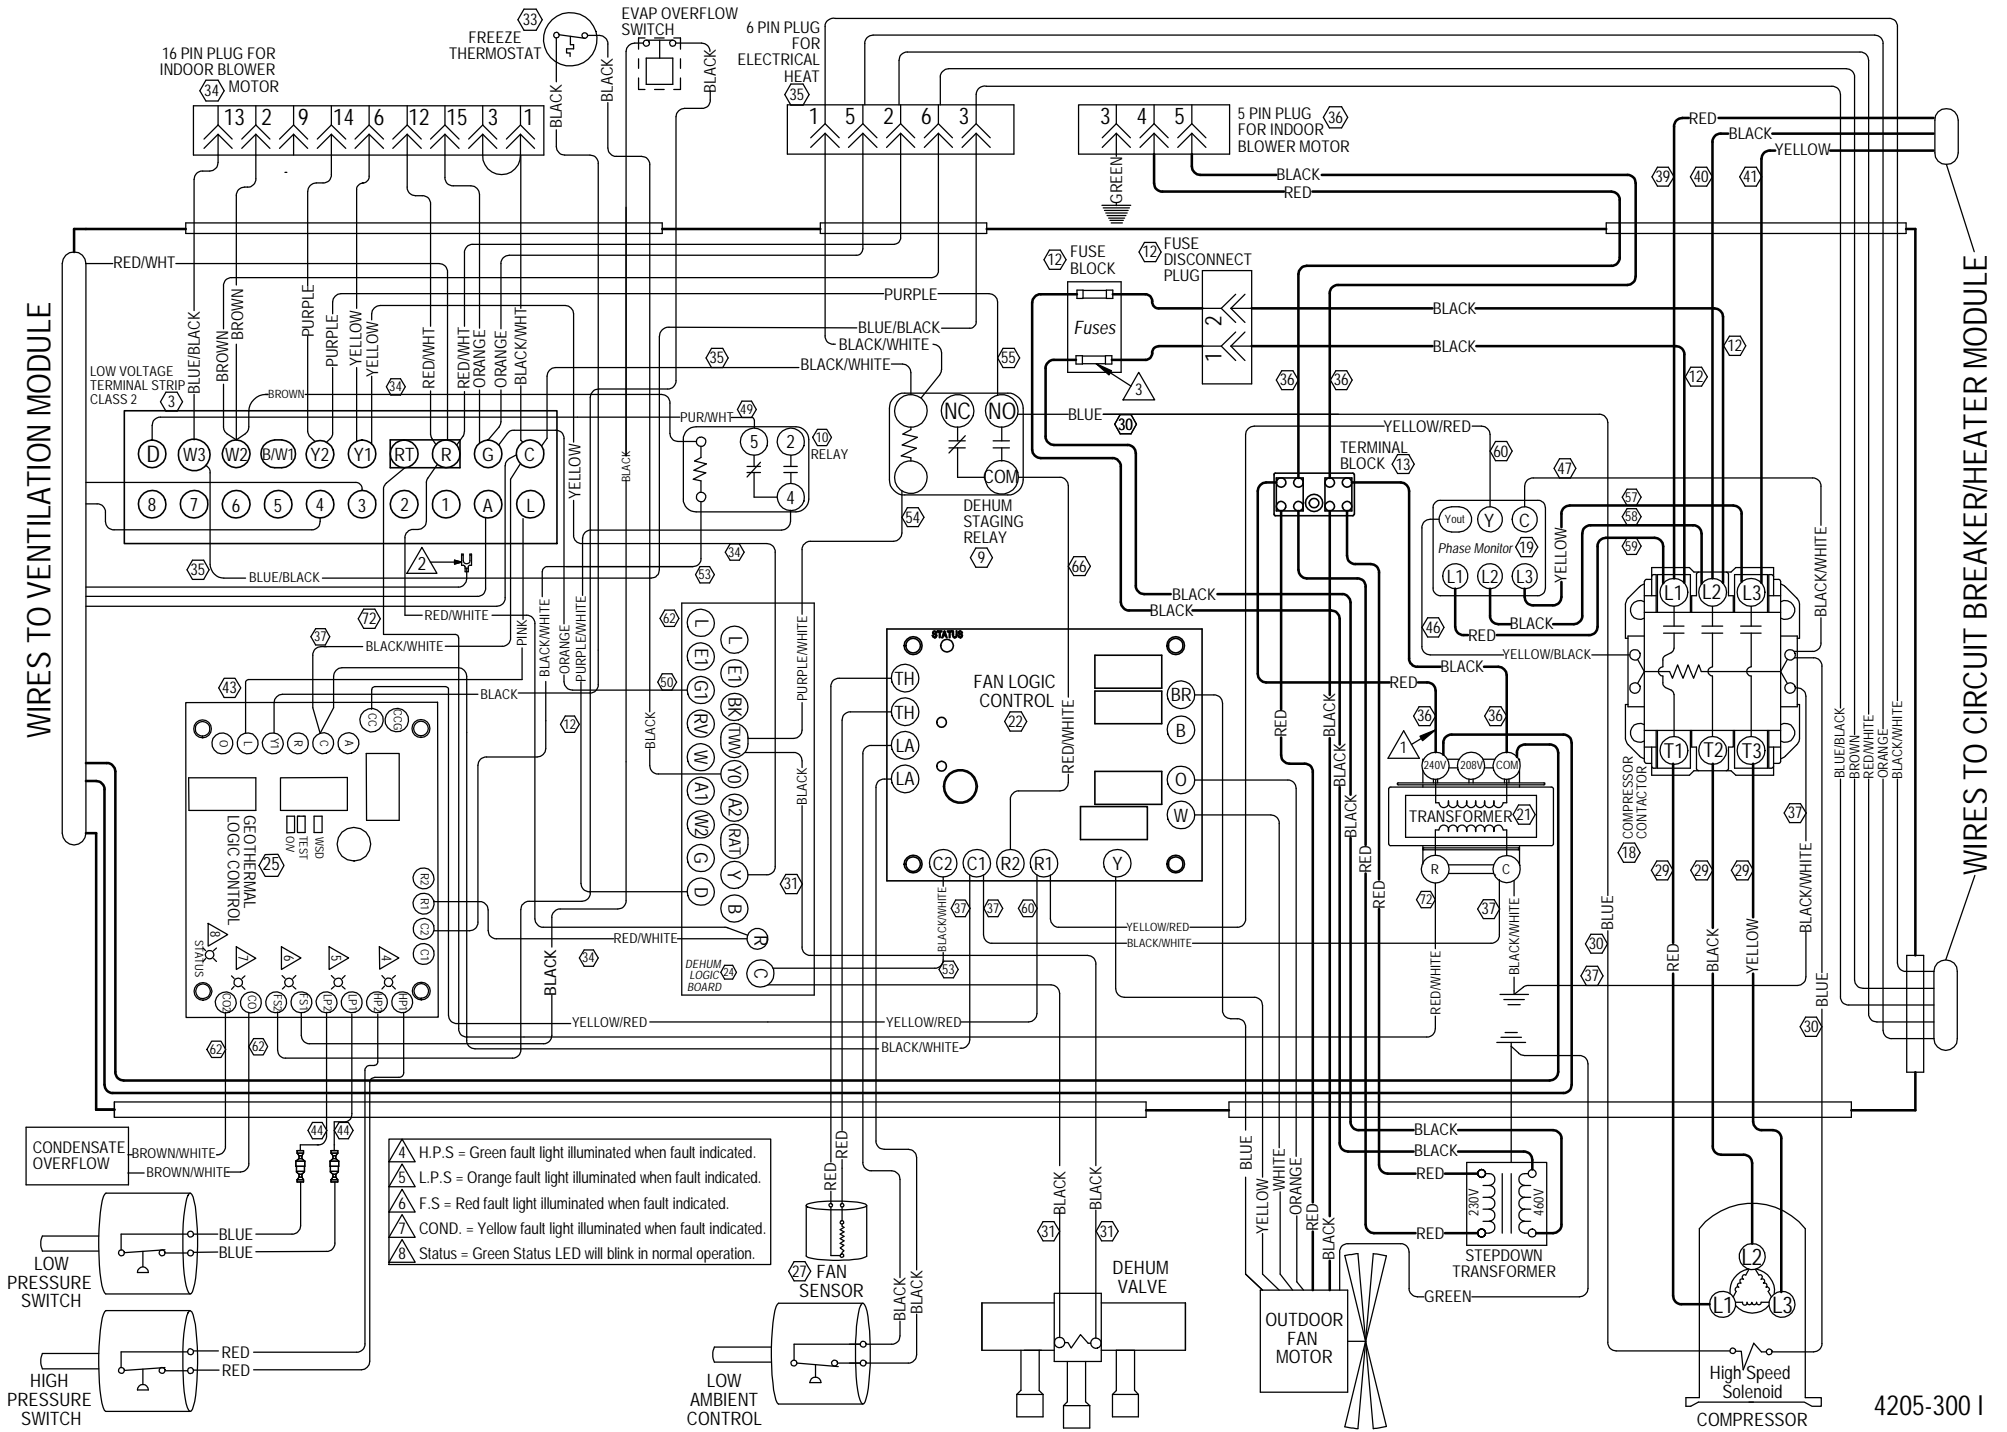

WIRES TO CIRCUIT BREAKER/HEATER MODULE

- ▲ H.P.S = Green fault light illuminated when fault indicated.
- ▲ L.P.S = Orange fault light illuminated when fault indicated.
- ▲ F.S = Red fault light illuminated when fault indicated.
- ▲ COND. = Yellow fault light illuminated when fault indicated.
- ▲ Status = Green Status LED will blink in normal operation.