

INSTALLATION INSTRUCTIONS



MODELS


B18EHQ1

B24EHQ1

BLOWER - EVAPORATOR UNITS

BARD MANUFACTURING COMPANY
P. O. Box 607 Bryan, Ohio 43506
(419) 636-1194

MOUNTING POSITIONS AND RETURN AIR OPTIONS

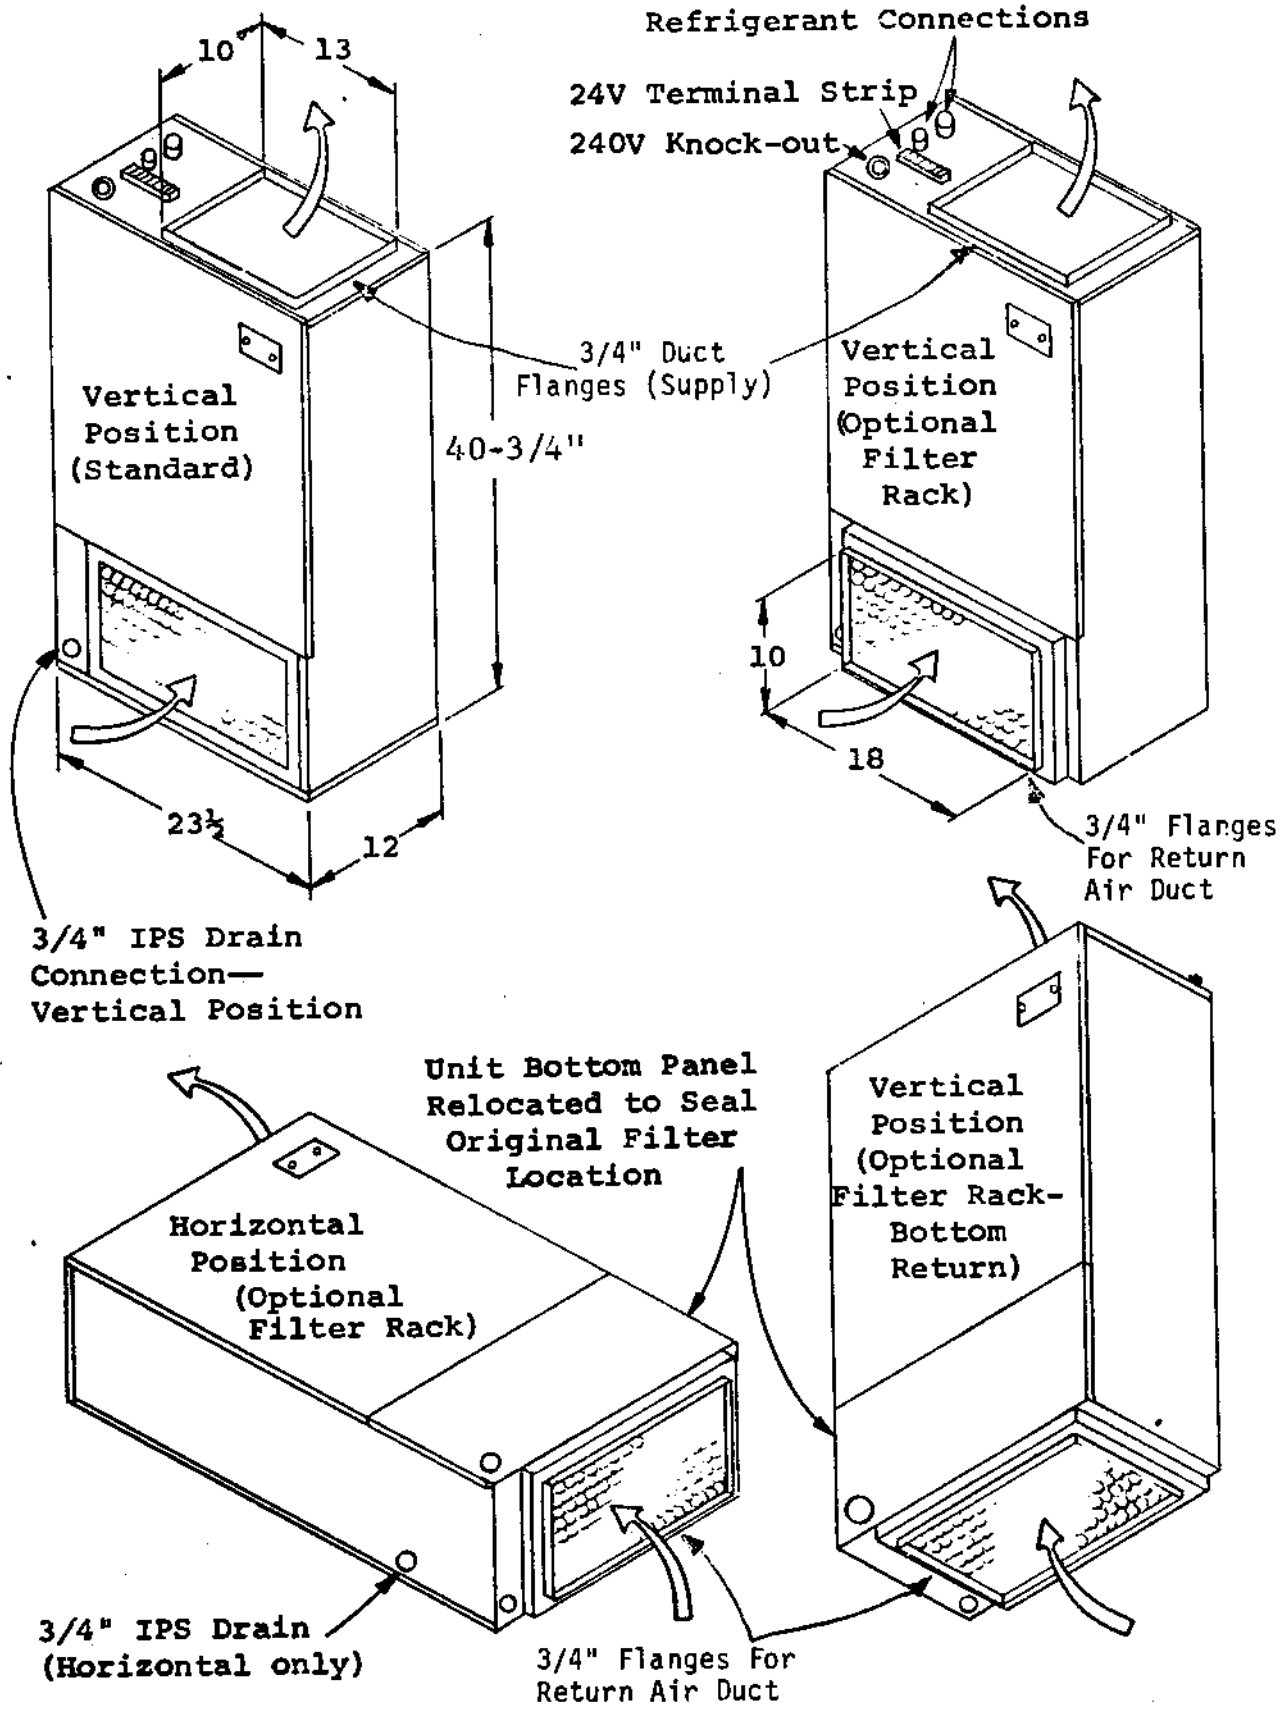

NOTE: If no return air duct is used, applicable installation codes may limit this cabinet to installation only in a single story structure.

GENERAL

Units are shipped completely assembled and internally wired, requiring only duct connections, thermostat wiring and external 220-240 volt AC power supply.

New models require an external fuse panel, Model RFF-15, comply with installation requirements. Refer to "Electrical Specifications" and "Field Wiring Data" for complete information.

The approved matching combinations of indoor and outdoor sections are:

Type	Indoor Section	Outdoor Section
A/C	B18EQ2	18ECQ2
A/C	B24EQ2	24ECQ2
H/P	B18EHQ1	18HPQ2
H/P	B24EHQ1	24HPQ2
H/P	B18EHQ1	24HPQ2
H/P	B24EHQ1	18HPQ2

UNPACKING

Upon receipt of equipment, carton should be checked for external signs of damage. If damage is found, request for inspection by carrier's agent should be made in writing immediately.

INSTALLATION

Size of unit for a proposed installation should be based on heat loss calculation made according to methods of Air Conditioning Contractors Association. The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

DUCTWORK

Sign the ductwork according to methods given by the National Warm Air Heating and Air Conditioning Association. When duct runs through unheated spaces, it should be insulated with a minimum of two inches of insulation. Use insulation with a vapor barrier on the outside of the insulation. Flexible joints should be used to connect the ductwork to the equipment in order to keep the noise transmission to a minimum.

FILTER

This unit must not be operated without a filter. It comes equipped with a disposable 12x20x1 filter installed for free return application. An optional 12x20 filter rack is available for ducted return applications and can be used for both vertical and horizontal installations.

LOCATION AND CLEARANCES

All access to the equipment is from one side, and at least 24 inches should be provided from this side for service access.

Unit casing is suitable for 0 inch clearance. The first two (2) feet of ductwork attached to the outlet (supply air) connections of the unit are to have a minimum of 1 inch clearance, with 0 inch clearance for any remaining ductwork.

Unit may be installed in utility room, closet, basement, attic, or closed crawl space in either upflow or horizontal position.

When installed horizontal in an attic installation, a platform should be made for the unit to sit on. This platform can be made from 3/4 inch plywood or boards. An auxiliary drain pan should always be used when equipment is installed over a finished living area, to provide protection from water damage in case of plugging of the primary drain line from the unit condensate collection pan.

Secure four pieces of cork or live rubber, 4" x 4", of sufficient thickness to allow primary drain to clear edge of auxiliary drain pan, under each corner of the unit.

CONDENSATE DRAIN

Determine where the drain line will run. This drain line contains cold water and must be insulated to avoid drops of water from dripping on ceiling, etc. A trap must be installed in the primary drain line below the bottom of the drain pan.

There is a separate drain connection for vertical and horizontal applications. Refer to drawings on page 2 for locations.

For horizontal installations with auxiliary drain pan, a separate drain line should be run from the auxiliary drain pan and terminated where the home owner can see it. Be certain to show the homeowner the location of the drain line and to explain its purpose. In the event of overflow of primary drain, water will collect in auxiliary pan and run out through the auxiliary drain line.

It is not recommended that any condensate drain lines be connected to a sewer main. Drain lines must be installed in accordance with local codes.

INTERCONNECTING TUBING

It is recommended that the interconnecting tubing be the RW-series charged tubing sets. This is a precharged tubing set with an insulated suction line. Both suction and liquid line are equipped with the correct quick connect fittings for proper match up to the indoor and outdoor sections. The RW-series is available in standard tubing lengths of 15, 25, 35 and 45 feet.

THERMOSTAT LOW-VOLTAGE WIRING

A 24V terminal block is mounted on the top (vertical position) of the unit. There is also a 24V terminal block located in the outdoor section of remote heat pumps and two tagged 24V wires in the outdoor section of remote air conditioners.

Specific control circuit wiring diagrams for the various applications are referenced in the sections titled AIR CONDITIONING WITH ELECTRIC HEAT AND HEAT PUMP WITH ELECTRIC HEAT. These diagrams detail the recommended controls and wiring to allow the best possible operation of the different types of systems with respect to energy conservation while still maintaining close comfort levels for the occupant.

TWO SPEED BLOWER MOTOR

THE BLOWER COIL is supplied with a multiple speed blower motor, using two speed taps to provide airflow variation for the different basic capacity ratings of the outdoor sections.

MOTOR SPEED IDENTIFICATION

Common	-	Yellow
High	-	Black
Low	-	Red
Capacitor	-	Brown

The HEATING-COOLING BLOWER RELAY provides for single blower speed operation of the motor. A manual changeover can be made by changing the motor speed tap that is connected to the blower relay.

All unused speed taps must be taped securely and individually from one another so as not to short out the motor. Refer to unit wiring diagram for correct identification of relay terminals.

Models B18EQ2 and B18EHQ1 are shipped wired on low speed, and B24EQ2 and B24EHQ1 wired on high speed. Refer to "Blower Performance Data" for information in airflow capabilities at different speeds and external static pressures.

FIELD WIRING DATA												
MODEL	KW	NO. OF CIRCUITS	AMPACITY		POWER WIRING				GROUND			
			Ckt. A	Ckt. B	Ckt. A		Ckt. B		Ckt. A		Ckt. B	
					CU	AL	CU	AL	CU	AL	CU	AL
All	0 5 10 15	1 1 1 2*	15 28 54 54*	26*	14 10 6 6	12 8 4 4		10 8	14 10 10 10	12 8 8 8		10 8

*Two (2) circuits with ampacities as shown required between blower coil unit and RFP-15 Remote Fuse Panel. Single circuit ampacity input to RFP-15 is 80. Recommended power wiring is #3 CU or #1 AL, and ground wire #8 CU or #6 AL.

BLOWER COIL ELECTRICAL SPECIFICATIONS						
MODEL	RATED KW	AMPS*	AMPACITY		MAIN FUSE	
			Ckt. A	Ckt. B	Ckt. A	Ckt. B
All	0 5 10 15	1.7 22.5 43.3 64.1	15 28 54 54**	26**	15 30 60 80***	

*Total unit amps including blower motor.
**See above note for Field Wiring Data.
***Main fuse supplying RFP-15. Internal fuses of RFP-15 are 60A and 30A.

UNIT OPERATION

The controls in these blower coil units provide for manual/auto operation of the blower motor in addition to the staging of the installed electric heat. Staging is accomplished in basic 10Kw increments, that is, each heat contactor controls up to two 5Kw elements.

HEATER ELEMENT STAGING	
Heater Kw	Stages
5 or 10 15	1 2

Heater stage designations are as follows on the 24V terminal blocks:

Models B18EQ2 and B24EQ2 - 1st Stage, W1 - 2nd Stage, W2

Models B18EHQ1 and B24EHQ1 - 1st Stage, W2 - 2nd Stage, DH

AIR CONDITIONING WITH ELECTRIC HEAT

Typical applications would be to use a 1-stage cool, 1-stage heat wall thermostat for 5 and 10Kw installations, and a 1-stage cool, 2-stage heat wall thermostat for 15Kw installations. Listed below are the appropriate control circuit wiring diagrams based on Kw rating.

Models B18EQ2 or B24EQ2/0Kw	CCD-1
Models B18EQ2 or B24EQ2/5 or 10Kw	CCD-2
Models B18EQ2 or B24EQ2/15Kw	CCD-3

HEAT PUMP WITH ELECTRIC HEAT

The system and its safety controls are designed in such a manner that the heat pump and up to 10Kw of the resistance electric strip heaters can operate at the same time, being brought on in stages. If there is 15Kw installed in the blower coil unit, the remaining 5Kw is utilized as heat pump "replacement" heat. The "replacement" heat is brought on automatically if the wall thermostat is switched to "Emergency Heat" position, or if the compressor is de-energized by a compressor cut-off at extreme outdoor temperatures. This allows for total heating capability in the event of a compressor shutdown for the above reasons.

Listed below are the appropriate control circuit wiring diagrams based on Kw rating.

Models B18EHQ1 or B24EHQ1/0Kw	CCD-4
Models B18EHQ1 or B24EHQ1/5 or 10Kw	CCD-5
Models B18EHQ1 or B24EHQ1/15Kw	CCD-6

WALL THERMOSTATS

The following wall thermostats and subbases should be used as indicated, depending on the application.

Appli- cation	KW	THERMOSTAT		SUBBASE	
		Brand Part No.	Descrip- tion	Brand Part No.	Descrip- tion
A/C	5, 10	8403-002	T87F3111	8404-003	Q539A1220
A/C	15, 20	8403-019	T874C1000	8404-012	Q674A1001
A/C	25, 30	8403-019	T874C1000	8404-012	Q674A1001
H/P	All Δ	8403-017	T874R1129	8404-009	Q674L1118
H/P	All Δ	8403-018	T874N1024	8404-010	Q674F126

Δ No automatic changeover position—must manually place in heat or cool. Reversing valve remains energized at all times system switch is in heat position (except during defrost cycle). No pressure equalization noise when thermostat is satisfied on either heating or cooling.


Δ Allows thermostat to control both heating and cooling operation when set in "AUTO" position. Reversing valve de-energizes at end of each "ON" heating cycle.

IMPORTANT NOTE: Both thermostat and subbase combinations shown above incorporate the following features; Man-Auto fan switch, Off-Heat-Cool-Em. Heat Switch, and two (2) indicator lamps—one for emergency heat and one for compressor malfunction.


BLOWER PERFORMANCE DATA

CFM — DRY COIL WITH FILTER		
E.S.P. Inches H ₂ O	B18EHQ1-B24EHQ1	
	Low/High 230V	Low/High 208V
.00	720/910	585/820
.10	700/880	575/800
.20	670/840	554/765
.30	650/800	535/730
.40	625/755	520/720
.50	590/710	500/705


CCD-1 A/C w/0Kw

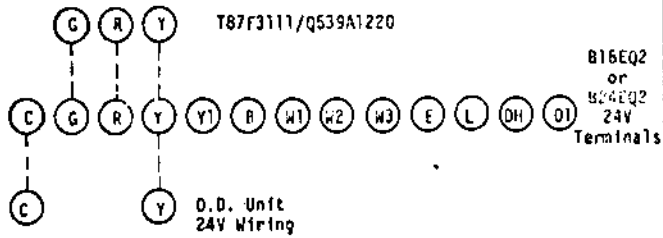


CCD-2 A/C w/5 or 10Kw

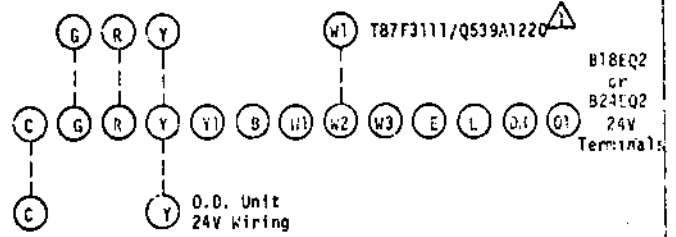


CCD-3 A/C w/15Kw

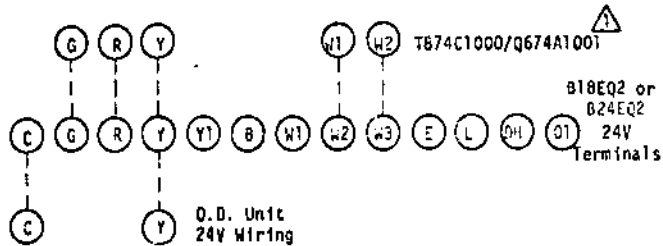


CCD-4 H/P w/0Kw

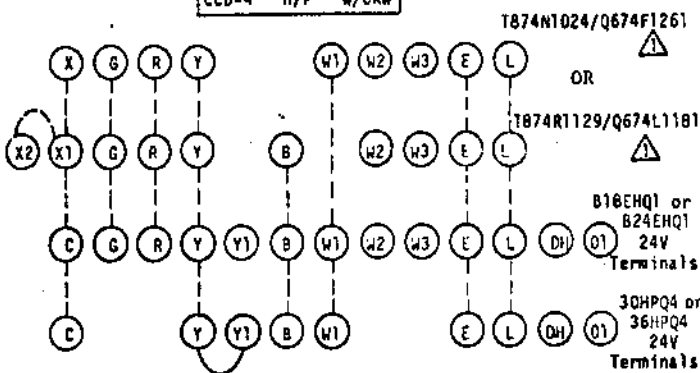

CCD-5 H/P w/5 or 10Kw

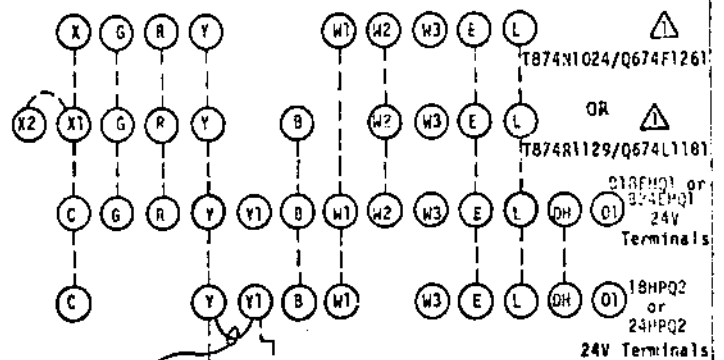


CCD-6 H/P w/15 Kw

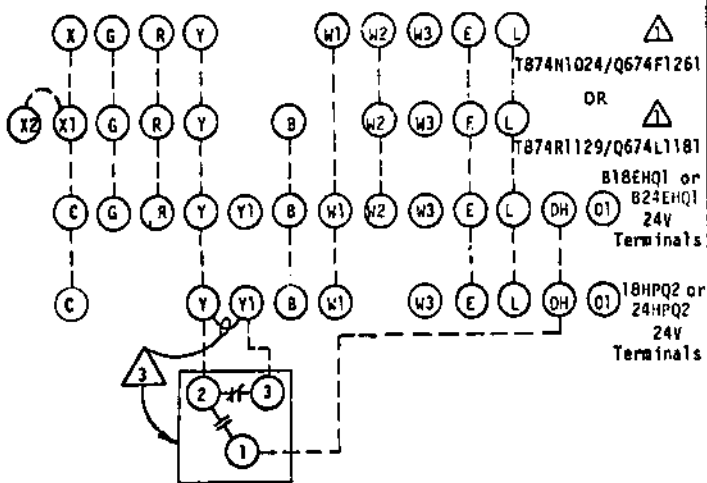

⚠ Set adjustable heat anticipator at .40A.


⚠ If optional compressor cutoff is installed, remove jumper Y - Y1.

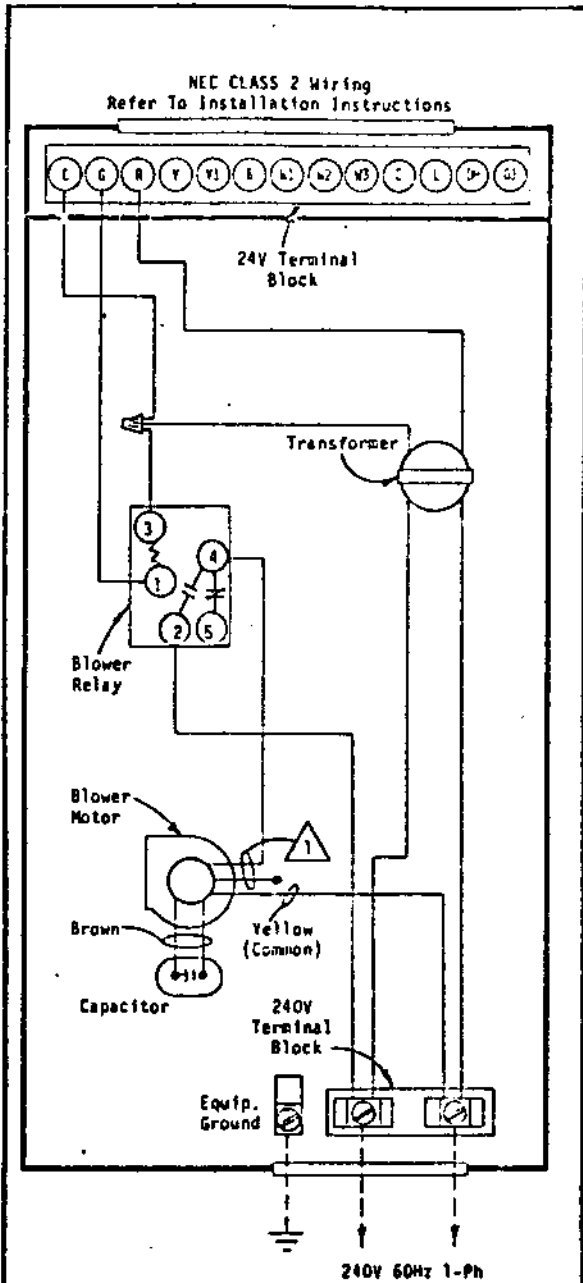

Factory Wiring -----
Field Wiring - - - - -

0Kw Model



⚠ All models factory connected on high speed (Black). 1-1/2 ton models only may be reconnected to low speed (Red) by installer if matched with 18HPQ2 outdoor unit. 4031-1108

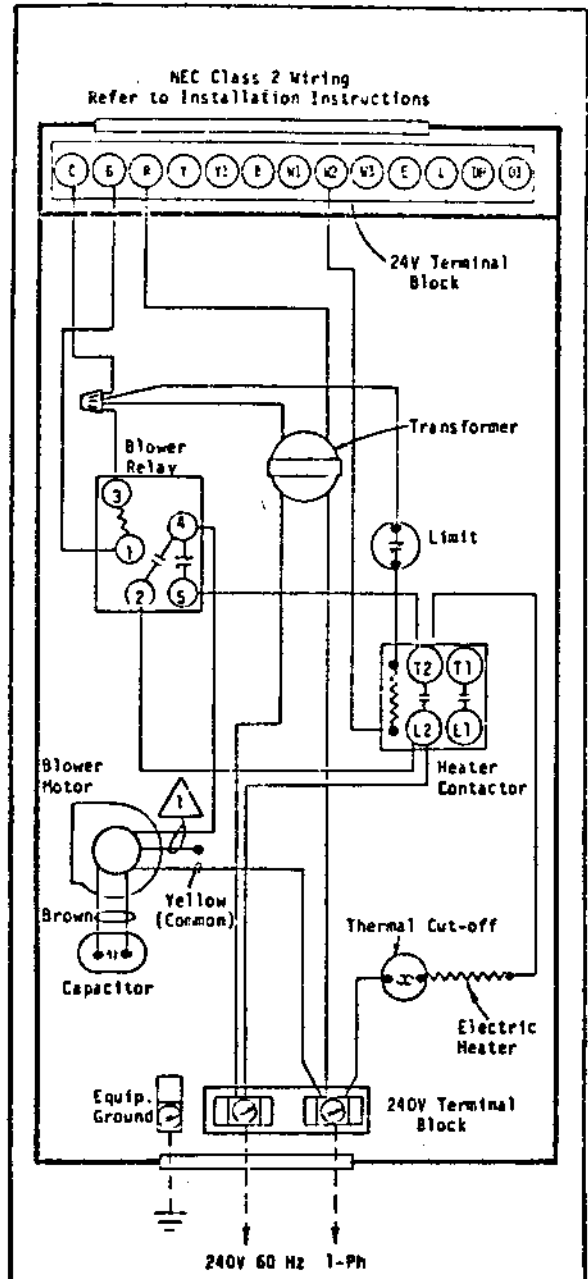

Factory Wiring -----
Field Wiring - - - - -

4Kw & 5Kw Models

⚠ All models factory connected on high speed (Black). 1-1/2 ton models only may be reconnected to low speed (Red) by installer if matched with 18HPQ2 outdoor unit. 4031-120 B

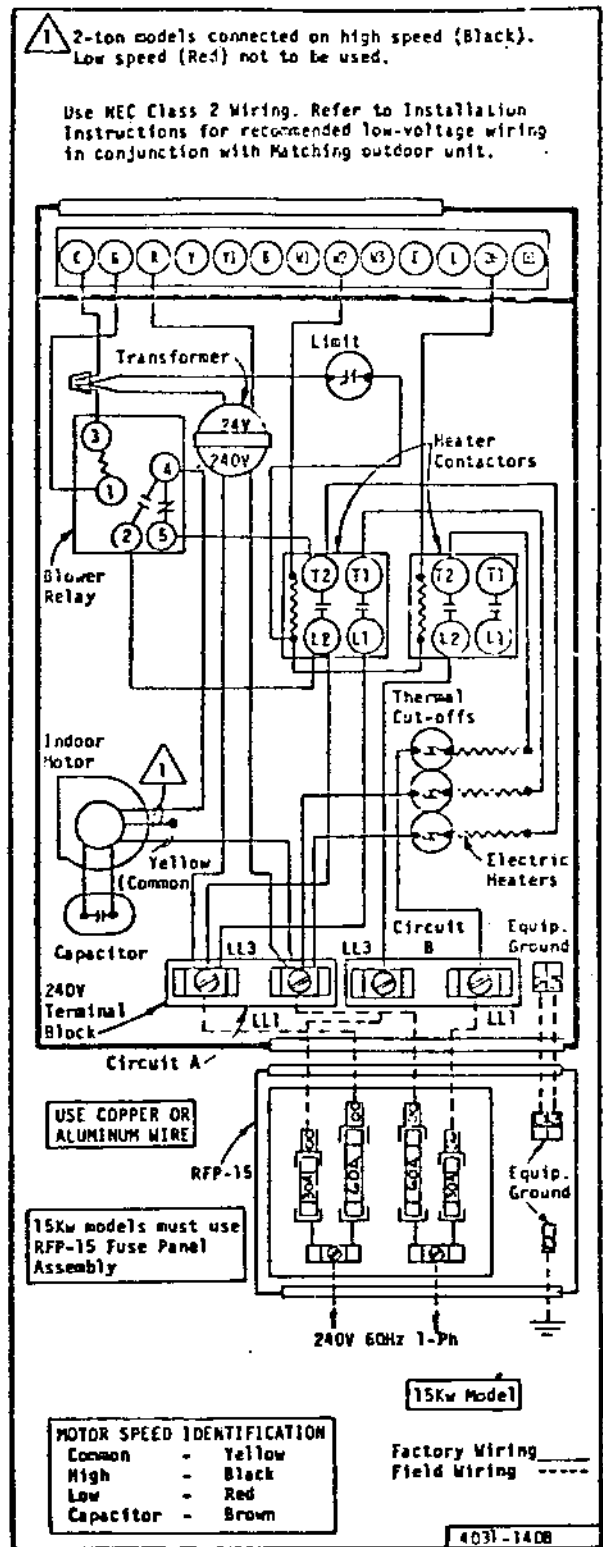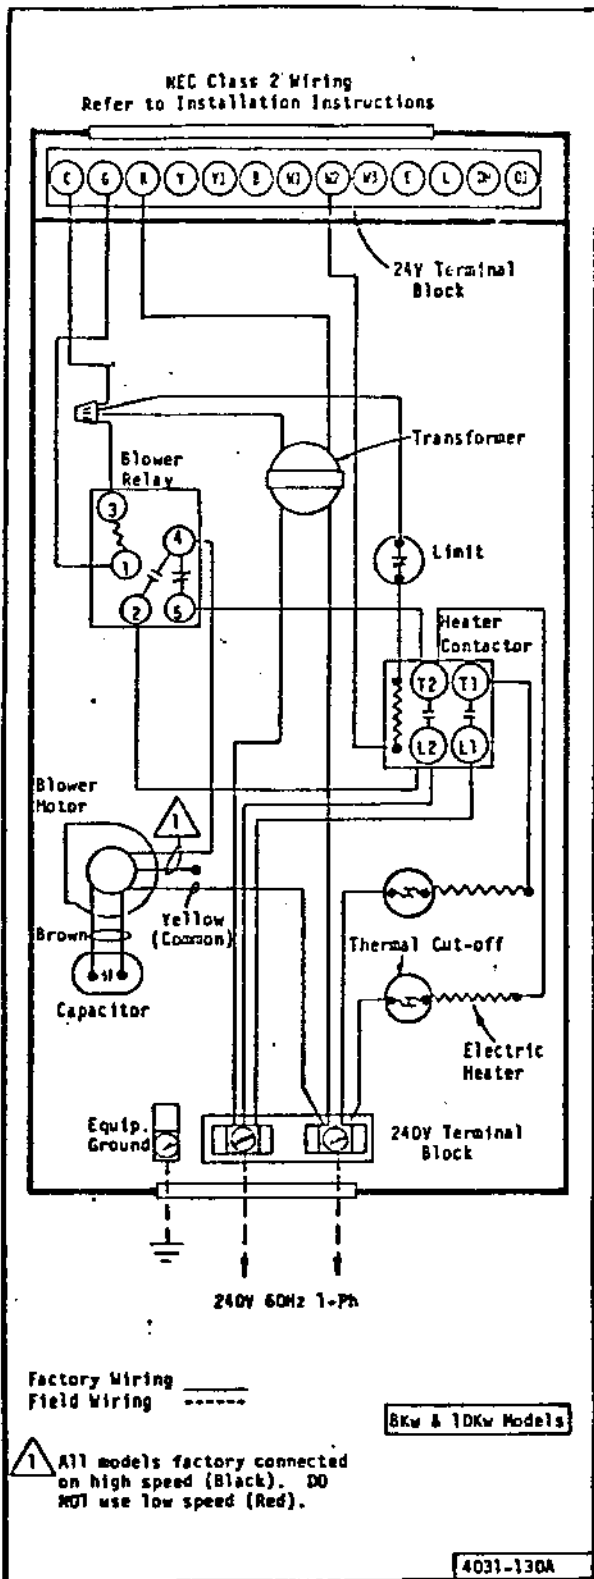

PARTS LIST
SPLIT SYSTEM BLOWER COILS

Effective 1/1/82
Supersedes 1/1/80

PART NO.	DESCRIPTION	B18EQ1	B24EQ1	B10EHQ1	B24EHQ1	B36EHQ1	B48EHQ1	B60EHQ1
*	Blower Housing 10-4	x	x	x	x			
*	Blower Housing 10-9							
*	Blower Housing 10-10							
5152-043	Blower Housing 12-7							
5152-008	Blower Wheel D010-4A	x	x	x	x			
5152-014	Blower Wheel D010-9A							
5152-015	Blower Wheel 10-10							
5152-044	Blower Wheel	x	x					
8552-001	Capacitor 4/370V							
8552-002	Capacitor 5/370V							
8552-025	Capacitor 7-1/2 -440V							
8552-005	Capacitor 10/370V							
8811-004	Capillary tube	(3)	(3)	(3)	(3)			
8811-001	Capillary Tube							
8811-035	Capillary Tube							
8811-010	Capillary Tube							
8811-009	Capillary Tube							
5651-006	Check Valve					(3)	(4)	(4)
5651-036	Check Valve							
8401-006	Contact - Heater 20A	x	x	x	x			
8401-010	Contact - Heat 3-Ph							
8401-001	Contact - Heat 3-Ph							
5060-003	Evaporator Coil	x	x					
5060-013	Evaporator Coil							
5060-016	Evaporator Coil							
5060-028	Evaporator Coil							
5060-012	Evaporator Coil							
5060-020	Evaporator Coil							
7004-001	Filter 12x20	x	x	x	x			
7004-017	Filter 22x22							
7004-015	Filter 24x24							
8614-006	Fuse - Heater 30A							
8614-007	Fuse - Heater 60A							
8614-035	Fuse - Heater 35A 3-Ph							
8614-033	Fuse - Heater 45A 3-Ph							
8614-032	Fuse - Heater 40A 3-Ph							
8614-017	Fuse Block 15Kw							
8614-014	Fuse Block 25Kw							
8614-019	Fuse Block 30Kw							
8614-018	Fuse Block 20Kw							
8614-020	Fuse Block 30Kw 3-Ph							
8614-021	Fuse Block 4Kw 3-Ph							
8604-027	Heat Strip 4Kw	x	x	x	x			
8604-023	Heat Strip 5Kw							

PARTS LIST
SPLIT SYSTEM BLOWER COILS

Effective 1/1/82
Supersedes 1/1/80

PART NO.	DESCRIPTION	B18EQ1	B24EQ1	B10EHQ1	B24EHQ1	B36EHQ1	B48EHQ1	B60EHQ1
8604-026	Heat Strip 8Kw	x	x	x	x			
8604-024	Heat Strip 10Kw	x	x	x	x			
8604-025	Heat Strip 15Kw	x	x	x	x			
8604-035	Heat Strip 9Kw							
8604-036	Heat Strip 12Kw							
8604-032	Heat Strip 9Kw 460v							
8402-029	Limit Switch L160-2.5	x	x					
8402-028	Limit Switch L150-2.5							
8402-022	Limit Switch L145-2.5							
8402-033	Limit Switch L140-2.5							
8402-012	Limit Switch L130-1.5							
8102-004	Motor - Blower 1/6							
8103-012	Motor - Blower 1/5							
8105-022	Motor - Blower 1/3							
8106-013	Motor - Blower 1/2							
8107-003	Motor - Blower 3/4							
8200-003	Motor Mount	x	x	x	x			
8200-021	Motor Mount							
5431-011	Motor Mounting Parts	x	x	x	x			
8201-009	Relay - Blower	x	x	x	x			
8201-014	Relay - Blower							
8201-013	Relay - Emergency Heat							
5210-003	Strainer	x	x	x	x			
5210-006	Strainer							
8607-006	Terminal Board 24V	x	x	x	x			
8607-001	Terminal Block 230V							
8607-002	Terminal Block 3-Ph							
8607-010	Terminal Block							
8607-003	Terminal Block 15Kw							
8402-025	Thermal Cut-off							
8402-027	Thermal Cut-off							
8407-007	Transformer	x	x	x	x			
8407-015	Transformer	x	x	x	x			
8407-022	Transformer							
8407-003	Transformer 9Kw 3-Ph 460v							

Minimum Net Billing \$15.00. Supersedes all previous lists.
Subject to change without notice. F.O.B. Bryan, Ohio.