

INSTALLATION INSTRUCTIONS

SPLIT AIR CONDITIONER OUTDOOR SECTION

MODELS

18ECQ4	31ECQ2	42ECQ1
24ECQ5	36ECQ5	48ECQ2
30ECQ5	37ECQ1	60ECQ1

**FOR USE WITH:
MATCHING INDOOR BLOWER
COIL UNITS AND MATCHING
ADD ON COIL UNITS ONLY**

**COPYRIGHT FEBRUARY, 1989
BARD MANUFACTURING COMPANY
BRYAN, OHIO**

INDEX

I. Application and Installation Instructions	1
General	1
Shipping Damage	1
Installation	1
Location	1
Mounting Unit Outside On Slab	2
Wiring	2
Pressure Service Ports	2
Crankcase Heaters	2
Fan Blade Setting Dimensions	3
Important Installer Note	4
Refrigerant Charge	6
 II. Installing Refrigerant Tubing	 7

INDEX OF FIGURES AND TABLES

Figure 1	1
Figure 2	3
Figure 3	4
Figure 4	8
Table 1	4
Table 2	5
Table 3	6
Table 4	9
Table 5	10
Table 6	10
Table 7	11
Table 8	12
Table 9	13
Table 10	14
Table 11	15
Table 12	16
Table 13	17
Table 14	18
Table 15	19

APPLICATION AND INSTALLATION INSTRUCTIONS

GENERAL

These instructions explain the recommended method to install the precharged air cooled remote type condensing unit, the interconnecting refrigerant tubing and the electrical wiring connections to the unit.

The condensing units are to be used in conjunction with the matching evaporator coil for comfort cooling applications as shown in the specification sheet.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

INSTALLATION


Size of unit for a proposed installed should be based on heat loss calculation made according to methods of National Warm Air Heating and Air Conditioning Association. The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning System, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

For applications in Canada, the installation of the system must be made in accordance with CSA Standards C22.1, Canadian Electrical Code, Part I; and B52, Mechanical Refrigeration Code.

LOCATION

The condensing unit (outdoor unit) must be located in an area having good air circulation and set where the hot discharge air from the unit will not be recirculated into the condensing coil. Figure 1 illustrates the recommended clearances for unrestricted airflow and service access.

FIGURE 1

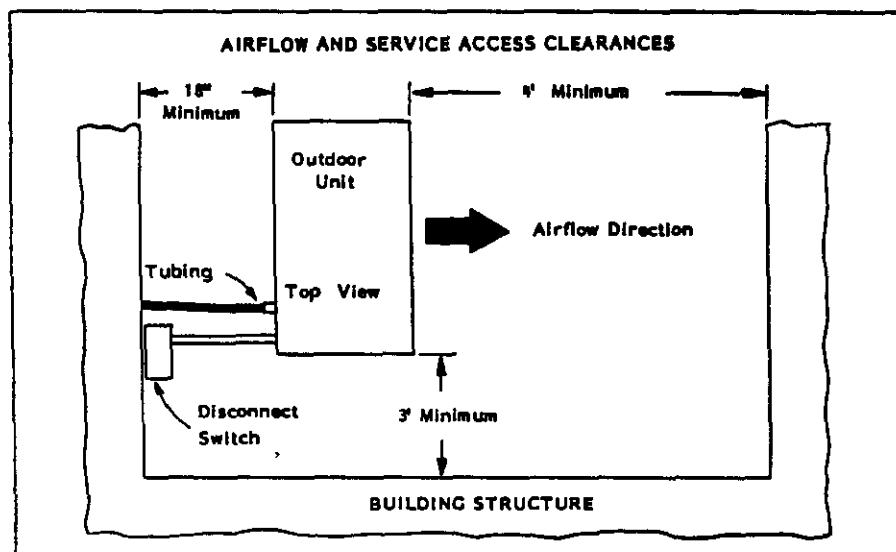

MOUNTING UNIT OUTSIDE ON SLAB

A solid level base or platform, capable to support the unit's weight, must be set at the outdoor unit predetermined location. The base should be at least two inches larger than the base dimensions of the unit and at least two inches higher than the surrounding grade level. The required unit minimum installed clearances must be maintained as called out in Figure 1 when locating and setting the base.

Remove the unit from its shipping carton and position the unit on the prepared base or platform.

Do not attach the unit or its base to the building structure to avoid the transmission of noise into the occupied area.

NOTE: These units employ internally sprung compressors; therefore, it is not necessary to remove or loosen the base mounting bolts on the compressor prior to operation.

Consideration should be given to the electrical and tubing connections when placing the unit to avoid unnecessary bends or length of material.

WIRING

All wiring must be installed in accordance with the National Electrical Code and local codes. Power supply voltage must conform to the voltage shown on the unit serial plate. A wiring diagram of the unit is attached to the inside of the electrical cover. The power supply shall be sized and fused according to the specifications supplied. A ground lug is supplied in the control compartment for equipment ground.

The control circuit is a 24 volt circuit. "Typical" wiring diagrams illustrating some of the various circuits which could be encountered can be found later in the manual.

The unit rating plate lists a "Maximum Time Delay Fuse" or "HACR Type" circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

When matching with a B-model blower coil unit, refer to the installation instructions with that indoor unit for 24V wiring information.

PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure tables can be found later in the manual covering all models. It is imperative to match the correct pressure table to the unit by model number.

The pressure service ports on the split system air conditioners are located on the interconnecting tubing quick connect fittings or base valves.

CRANKCASE HEATERS

All units are provided with some form of compressor crankcase heat. Some single phase units utilize the compressor motor start winding in series with a portion of the run capacitor to generate heat within the compressor shell to prevent liquid refrigerant migration.

Some three phase units utilize a wraparound type of crankcase heater that warms the compressor oil from the outside.

Some single and three phase models have an insertion well-type heater located in the lower section of the compressor housing. This is a self-regulating type heater that draws only enough power to maintain the compressor at a safe temperature.


Some form of crankcase heat is essential to prevent liquid refrigerant from migrating to the compressor, causing oil pump out on compressor start-up and possible valve failure due to compressing a liquid.

Refer to unit wiring diagram to find exact type of crankcase heater used.

The following decal is affixed to all outdoor units detailing start-up procedure. This is very important. Please read carefully.

If this unit is operated in cooling below a 65 degree outdoor ambient temperature, the installed of low ambient control (LAC-1) to unit is required.

FIGURE 2

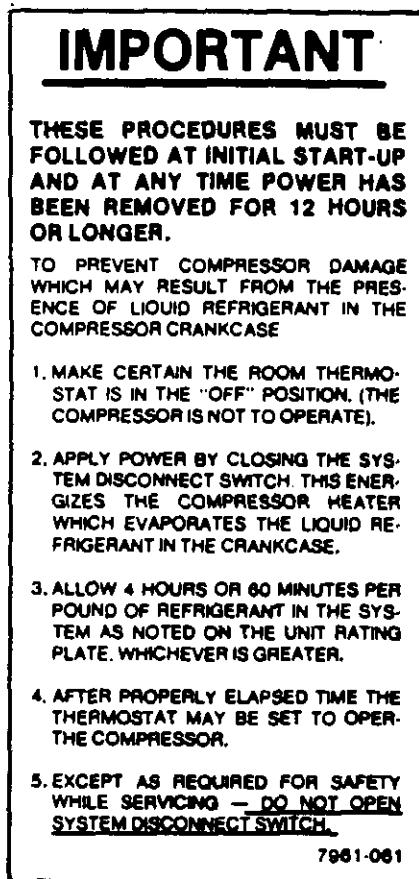


FAN BLADE SETTING DIMENSIONS

Shown in the drawing below are the correct fan blade setting dimensions for proper air delivery across the outdoor coil.

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions below be checked and blade adjusted in or out on the motor shaft accordingly.

FIGURE 3

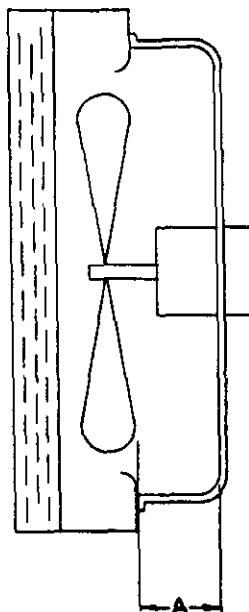

Model	Dimension A
All	1/2"

IMPORTANT INSTALLER NOTE

For improved start-up performance, wash the indoor coil with a dishwater detergent.

TABLE I

Model	Electrical Rating	Operating Voltage Range	Total Unit (1) Amps	Minimum Circuit Ampacity	ELECTRICAL DATA		60 degree C Copper Wire Size	Copper Ground Wire Size
					Maximum (2) Overcurrent Protection USA	Maximum Overcurrent Protection CANADA		
18BC04	230/208-60-1	197-253	10.5	12.8	20	15	20	#14
24BC05	230/208-60-1	197-253	14.5	17.8	30	20	25	#12
30BC05	230/208-60-1	197-253	16.6	20.4	35	30	40	#10
31BC02	230/208-60-1	197-253	15	20	30	--	--	#12
36BC05	230/208-60-1	197-253	22	29	50	30	45	#10
37BCQ1	230/208-60-1	197-253	19	26	40	--	--	#10
	230/208-60-3	187-253	13	18	30	--	--	#12
	460-60-3	414-506	7.7	15	20	--	--	#14
42BCQ1	230/208-60-1	197-253	24.3	30	50	--	--	#10
	230/208-60-3	187-253	16.8	21	30	--	--	#10
	460-60-3	414-506	9.3	10	15	--	--	#14
48BCQ2	230/208-60-1	197-253	25.8	32	50	--	--	#8
	230/208-60-3	187-253	19.3	24	35	--	--	#10
	460-60-3	414-506	11.3	11	15	--	--	#12
60BCQ1	230/208-60-1	197-253	31.8	39	60	--	--	#8
	230/208-60-3	187-253	22.8	28	45	--	--	#10
	460-60-3	414-506	9.1	12	15	--	--	#14

(1) Compressor and outdoor motor.

(2) Time delay fuse or HACR type circuit breaker.

(3) Time Delay Fuse

TABLE 2

RATED CPM AND AIRFLOW DATA (Wet Coil--Cooling)						
Outdoor Unit Model	Indoor Coil Model	Rated CPM	Pressure Drop in H ₂ O (1)	Rated(2) B.S.P.	Recommended Air Flow Range	System Orifice Required
18BCQ4	2ACQ2	650	.20		550 - 700	--
	24QS1	650	.30		550 - 700	--
	BC24B	650		.10	550 - 700	.052*
24BCQ6	2ACQ2	800	.30		720 - 950	--
	24QS1	775	.30		700 - 850	--
	BC24B	800		.30	720 - 880	.059
30BCQ5	3ACQ3	1075	.30		975 - 1225	--
	3HCQ1	1025	.27		925 - 1175	--
	BC30B	825		.10	750 - 900	.063
	BC35B	1050		.30	950 - 1200	--
	BC36B	1050		.40	950 - 1200	.072
31BCQ2	3ACQ3	1050	.25		940 - 1160	--
	3HCQ1	1035	.30		900 - 1150	--
	BC36B	1050		.20	950 - 1200	.072
	BC35B	1000		.55 3	900 - 1150	--
	BC30B	800		.10	720 - 880	.063
36BCQ5	3ACQ3	1180	.30		1060 - 1300	--
	3HCQ1	1000	.30		900 - 1100	--
	BC36B	1200		.18	1080 - 1320	.072
	BC35B	1275		.40	1150 - 1400	--
37BCQ1	3ACQ3	1180	.30		1060 - 1300	--
	3HCQ1	1000	.30		900 - 1100	--
	BC36B	1200		.18	1080 - 1320	.072
	BC35B	1200		.50	1080 - 1320	--
42BCQ1	4ACQ2	1450	.25		1300 - 1600	--
	5ACQ1	1600	.14		1440 - 1760	--
	4HCQ	1500	.30		1350 - 1650	--
	BC48A	1575		.40	1420 - 1730	--
	A42AS-A	1450	.30		1300 - 1600	.078
48BCQ2	4ACQ2	1690	.30		1520 - 1860	--
	5ACQ1	1800	.18		1620 - 1980	--
	4HCQ	1600	.30		1440 - 1760	--
	BC48A	1725		.30	1550 - 1900	--
	A48AS-A	1500	.25		1350 - 1650	.081
	5ACQ2	1600	.15		1440 - 1760	--
60BCQ1	5ACQ1	1990	.28		1790 - 2190	--
	5HCQ	1650	.30		1485 - 1815	--
	BC48A	1625		.30	1460 - 1790	--
	BC60A	1800		.30	1590 - 1950	--
	A60AS-A	1920	.30		1720 - 2120	.092
	5ACQ2	1900	.20		1720 - 2120	--

(1) Measured across the evaporator coil assembly, including drain pan.

(2) External static pressure available for the duct system--supply and return.

All blower coil models have multi-speed motors, and value shown is at recommended speed. Consult specification airflow charts for complete information as to other speeds available.

(3) Rated external static pressure on low speed.

***IMPORTANT**

Proper sized orifice is not factory installed in indoor section. Proper orifice size is shipped with outdoor unit packaged with its installation instructions. The orifice must be replaced with the proper system orifice shown above in Table 2.

Refrigerant Charge

To obtain maximum rated capacity and efficiency, the system charge may have to be adjusted at installation to obtain a suction line temperature (6° from compressor) as shown in the following table.

TABLE 3

Outdoor Unit	Indoor Unit	95 degree F O.D. Temp.	82 degree F O.D. Temp.
18BCQ4	2ACQ2	57 - 59	64 - 66
	24QS1	48 - 50	63 - 65
	BC24B	56 - 58	67 - 69
24BCQ5	2ACQ2	53 - 55	64 - 66
	24QS1	47 - 49	64 - 66
	BC24B	55 - 57	65 - 67
30BCQ5	3ACQ3	57 - 59	62 - 64
	3HCQ1	50 - 52	62 - 64
	BC30B	50 - 52	58 - 60
	BC35B	55 - 57	62 - 64
	BC36B	61 - 63	65 - 67
31BCQ2	3ACQ3	47 - 49	58 - 60
	3HCQ1	54 - 56	67 - 69
	BC30B	54 - 56	63 - 65
	BC35B	50 - 52	61 - 63
	BC36B	52 - 54	60 - 62
	B30EHO	46 - 48	57 - 59
36BCQ5	3ACQ3	52 - 54	60 - 62
	3HCQ1	56 - 58	63 - 65
	BC36B	52 - 54	62 - 64
	BC35B	52 - 54	63 - 65
37BCQ1	3ACQ3	45 - 47	55 - 57
	3HCQ1	55 - 57	65 - 67
	BC36B	50 - 52	59 - 61
	BC35B	52 - 54	63 - 65
	A36AS-A	55 - 57	61 - 63
42BCQ1	4ACQ2	47 - 49	59 - 61
	5ACQ1	50 - 52	53 - 55
	BC48A	51 - 53	55 - 57
	A42AS-A	46 - 48	56 - 58
	A48AS-A	47 - 49	58 - 60
48BCQ2	4ACQ2	52 - 54	62 - 64
	5ACQ1	50 - 52	52 - 54
	4HCQ	56 - 58	66 - 68
	BC48A	53 - 55	60 - 62
	A48AS-A	55 - 57	62 - 64
	5ACQ2	56 - 58	63 - 66
60BCQ1	5ACQ1	50 - 52	59 - 61
	5HCQ	49 - 51	58 - 60
	BC48A	55 - 57	63 - 65
	BC60A	48 - 50	58 - 60
	A60AS-A	54 - 56	61 - 63
	5ACQ2	56 - 58	61 - 63
The above suction line temperatures are based upon 80 degree F dry bulb/67 degree wet bulb (50% R.H.) temperature and rated airflow across the evaporator during cooling cycle.			

INSTALLING REFRIGERANT TUBING

PRECHARGED TUBING--Examine carefully the two lengths of precharged tubing furnished with the unit. The larger is the suction line. The smaller is the liquid line. The end of the tubing with the hex nut and gauge port is to be attached to the condensing unit.

Unroll the tubing, being careful not to kink, and install it between the condensing unit and the evaporator unit.

CAUTION: Be careful not to tear the insulation when pushing it through holes in masonry or frame walls.

When sealing tube opening in house wall use a soft material to prevent tube damage and vibration transmission.

Before fastening either end, use a tubing bender to make any necessary bends in the tubing. AVOID EXCESSIVE BENDING IN ANY ONE PLACE TO AVOID KINKING.

Start connecting the tubing at the evaporator coil end, first remove the protective caps and plugs from the quick-connect fittings on the evaporator coil and the precharged tubing. Inspect fittings and clean if necessary, making sure they are clear of foreign materials. If you clean the fittings, lubricate them with refrigeration oil. Connect both tubes to the fittings on the coil and draw up by hand.

When necessary to bend the insulated tube, suction line, cut the insulation around its circumference at a distance far enough beyond the point of the bend so as to clear the tubing bender.

Slip the insulation back together and vapor seal the joint with tape.

NOTE: The maximum distance for precharged tubing between the condenser and the evaporator is 45 feet.

CAUTION: Prior to connecting the precharged tubing to the evaporator coil or condensing unit, be sure all bends have been made, then coil any excess tubing in a horizontal plane, with the slope of the tubing toward the condensing unit.

CAUTION: Be sure to hold the coupling firmly to prevent movement of the coupling and tubing. Failure to do so could tear out the diaphragm causing a blockage of the system.

CAUTION: After starting to tighten up the fitting, never try to back it off or take it apart.

For connecting the tubing at the condensing unit end, first remove the protective caps and plugs from the quick-connect fittings on the condensing unit and the precharged tubing. Inspect fittings and clean if necessary, making sure they are clear of foreign materials. If you clean the fittings, lubricate them with refrigeration oil. Connect both tubes to the fittings on the coil and draw up by hand.

Locate the gauge port in a 45 degree angle from a vertical up position so as to be accessible for gauge connections.


Use a wrench on the hex nut of the female fitting backing up the fitting with another wrench to keep tube from turning. Tighten the fittings together until they bottom out then tighten for an additional 1/4 turn so that coupling will seat properly.

Check the gauge port cap to make sure it is tight. If loose, tighten, being careful not to tighten too much as it will damage the valve in the gauge port.

Leak test all connections using an Electronic Leak Detector or a Halide Torch.

When tubing is installed in attics or drop ceiling, insulate the quick connect fitting on the larger tube thoroughly with 3/8" wall thickness, closed cell sponge tube insulation or equivalent. Failure to insulate will result in water damage to ceiling since the fitting will "sweat" and drop water on the ceiling.

FIGURE 4

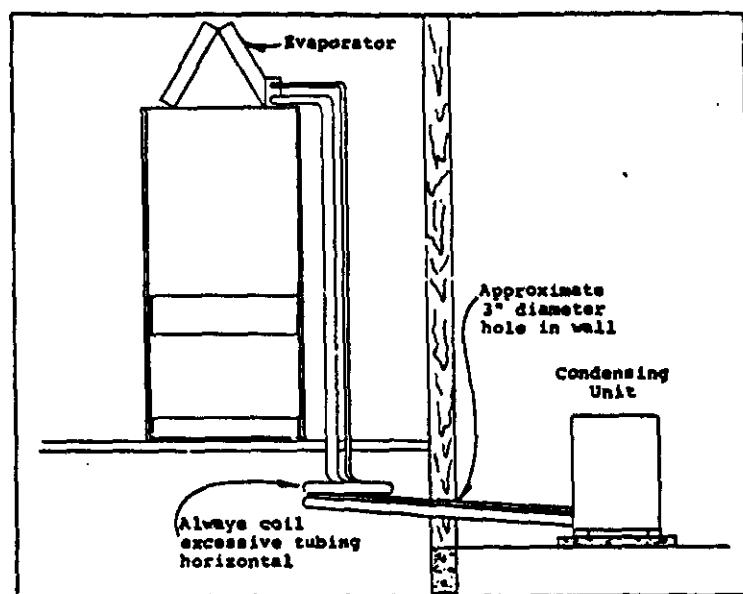

INSTALLER NOTE: Stamp or mark the Total System Charge on the outdoor unit serial plate. See TOTAL SYSTEM CHARGE table located on inside of outdoor unit access panel.

R22 TOTAL SYSTEM CHARGE FOR
SPLIT AIR CONDITIONING AND HEAT PUMP SYSTEMS

The following tables are used to determine the operating charge for split air conditioning and heat pump systems. The values shown are the total amount of refrigerant received in the precharged system components, which include the outdoor unit, indoor unit, and inter-connecting tubing. This is also the amount of refrigerant required for a system recharge following any refrigeration system repairs.

Find the outdoor section and matching indoor section (Table 4) and connecting tubing set (Table 6) for system being used. Add the ounces of charge for each of the system components together. This value is the TOTAL SYSTEM CHARGE.

Ozs OUTDOOR UNIT (Table 6)	+ Ozs INDOOR UNIT (Table 6)	+ Ozs TUBING SET (Table 4)	=	Ozs TOTAL SYSTEM CHARGE
----------------------------------	--------------------------------------	-------------------------------------	---	----------------------------

To change total charge to lbs. and ozs., divide by 16.

EXAMPLE: 37ECQ1 with 3ACQ3 and CT35 tubing set.

$$\begin{array}{r} \underline{63} \quad \text{Ozs} \quad + \quad \underline{5} \quad \text{Ozs} \quad + \quad \underline{14} \quad \text{Ozs} \quad = \quad \underline{\underline{82}} \quad \text{Ozs} \\ \text{or} \quad \underline{\underline{82}} \quad = \quad 5 \text{ lbs. } 2 \text{ ozs.} \\ \quad \quad \quad \underline{16} \end{array}$$

TABLE 4 CHARGED TUBING SETS				
Model	Charge	Length in Ft.	Liquid Line	Suction Line
FOR USE WITH: 18EC04, 24EC05, 18HP05, 24HP05				
CT15	2 oz.	15	1/4"	5/8"
RW25	3 oz.	25	1/4"	5/8"
RW35	7 oz.	35	1/4"	5/8"
RW45	11 oz.	45	1/4"	5/8"
FOR USE WITH: 30EC05, 31EC02, 36EC05, 37ECQ1, MOS30, MOS36, MOSD30, MOSD36				
CT0	None*	0	3/8"	3/4"
CT15	2 oz.	15	1/4"	5/8"
CT25	3 oz.	25	1/4"	3/4"
CT35	14 oz.	35	3/8"	3/4"
CT45	20 oz.	45	3/8"	3/4"
FOR USE WITH: 30HP06, 36HP07				
CT0	None*	0	3/8"	3/4"
CT15	2 oz.	15	1/4"	5/8"
CT25A	8 oz.	25	3/8"	3/4"
CT35	14 oz.	35	3/8"	3/4"
CT45	20 oz.	45	3/8"	3/4"
FOR USE WITH: 42ECQ1, 48EC02, 60EC01, 42HP04, 48HP05, 60HP05 MOS50, MOSD50				
CT0-12	None*	0	3/8"	7/8"
CT15-12	2 oz.	15	3/8"	7/8"
CT25-12	8 oz.	25	3/8"	7/8"
CT35-12	14 oz.	35	3/8"	7/8"
CT45-12	20 oz.	45	3/8"	7/8"

*CT0 and CTO-12 for field installed tubing. (See Table 6 for charging).

TABLE 5

Model	Outdoor Unit Factory Charge	For Use With Indoor Unit	Indoor Unit Factory Charge
18BCQ4	29 oz.	2ACQ2	2 oz.
		24QS1	4 oz.
		BC24B	5 oz.
24BCQ5	40 oz.	2ACQ2	2 oz.
		24QS1	4 oz.
		BC24B	5 oz.
		3ACQ3	5 oz.
		3BCQ1	7 oz.
30BCQ5	50 oz.	BC30B	5 oz.
		BC35B	8 oz.
		BC36B	13 oz.
		3BCQ1	7 oz.
		3ACQ3	5 oz.
31BCQ2	54 oz.	BC30B	5 oz.
		BC35B	8 oz.
		BC36B	13 oz.
		3BCQ1	7 oz.
		3ACQ3	5 oz.
36BCQ5	58 oz.	BC35B	8 oz.
		BC36B	13 oz.
		3BCQ1	7 oz.
		3ACQ3	5 oz.
		BC36B	13 oz.
37BCQ1	63 oz.	BC35B	8 oz.
		BC36B	13 oz.
		3BCQ1	7 oz.
		3ACQ3	5 oz.
		BC36B	13 oz.
42BCQ2	48 oz.	4BCQ	12 oz.
		4ACQ2	2.5 oz.
		BC48A	23 oz.
		4BCQ	12 oz.
		4ACQ2	2.5 oz.
48BCQ2	86.5 oz.	5ACQ1	7 oz.
		BC48A	23 oz.
		5BCQ	7 oz.
		5ACQ1	7 oz.
		BC48A	23 oz.
60BCQ1	101 oz.	5BCQ	7 oz.
		5ACQ1	7 oz.
		BC48A	23 oz.
		BC60A	43 oz.

In the event that the installer is running his own tubing by using a CTO kit or is modifying a precharged tubing set by adding or subtracting a few feet of tubing length, the tubing set should be evacuated and charged before being connected to the outdoor and indoor section. To determine TUBING SET ONLY charges, use the following table:

TABLE 6
(Shows Charge in Ozs.)

	Tubing Set Length in Ft.	10	15	20	25	30	35	40	45	50	55	60
RW Series	1/4" O.D. Liquid Line	2	2	3	3	5	7	9	11	--	--	--
CT Series	3/8" O.D. Liquid Line	2	2	5	8	11	14	17	20	23	26	29

To determine a TOTAL SYSTEM CHARGE for a system that is connected with a non-standard tubing length, the outdoor basic charge (from Table 5) plus the indoor unit basic charge (from Table 5), is added to the tube set based on liquid line O.D. size (Table 6). This value is the TOTAL SYSTEM CHARGE.

NOTE: If your tubing length is between the sizes shown in the table, use a charge value appropriately between the values shown for the tubing length shorter and longer than actual length.

TABLE 7

COOLING

Air Temperature Entering Outdoor Coil Degree F

Indoor Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115
2ACQ2 Rated CFM 650	75 deg. DB	Low Side	67	70	73	75	77	79	80	81	81
	62 deg. WB	High Side	232	234	238	245	255	267	283	300	321
	80 deg. DB	Low Side	72	75	78	80	82	84	85	86	87
	67 deg. WB	High Side	237	239	244	252	262	275	291	309	330
	85 deg. DB	Low Side	76	80	83	86	88	90	91	92	93
	72 deg. WB	High Side	245	247	252	260	271	284	301	319	341
24QS1 Rated CFM 650	75 deg. DB	Low Side	67	69	71	73	75	76	78	78	79
	62 deg. WB	High Side	235	237	241	248	257	269	284	302	322
	80 deg. DB	Low Side	72	74	76	78	80	82	83	84	85
	67 deg. WB	High Side	241	243	247	254	264	277	292	310	331
	85 deg. DB	Low Side	76	79	82	84	86	88	89	90	91
	72 deg. WB	High Side	248	250	255	263	273	286	302	321	342
BC24B Rated CFM 650	75 deg. DB	Low Side	76	77	79	81	82	83	85	86	87
	62 deg. WB	High Side	208	222	237	252	267	283	299	316	333
	80 deg. DB	Low Side	82	83	85	87	88	89	91	92	93
	67 deg. WB	High Side	214	228	243	258	274	290	307	324	342
	85 deg. DB	Low Side	87	89	91	93	95	96	98	98	99
	72 deg. WB	High Side	221	236	251	267	283	300	317	335	354

Low side pressure + 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure + 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 8

COOLING			Air Temperature Entering Outdoor Coil Degree F									
Indoor Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115	
2ACQ2 Rated CFM 800	75 deg. DB	Low Side	64	66	68	70	72	74	75	77	78	
	62 deg. WB	High Side	209	225	240	256	272	288	304	319	335	
	80 deg. DB	Low Side	69	71	73	75	77	79	81	82	84	
	67 deg. WB	High Side	214	231	247	263	279	295	311	328	344	
	85 deg. DB	Low Side	73	76	78	81	83	85	87	89	90	
	72 deg. WB	High Side	222	238	255	271	288	305	322	339	356	
24QS1 Rated CFM 775	75 deg. DB	Low Side	62	63	65	67	68	69	71	72	73	
	62 deg. WB	High Side	215	230	245	260	276	292	308	325	342	
	80 deg. DB	Low Side	67	68	70	72	73	74	76	77	78	
	67 deg. WB	High Side	221	236	251	267	283	299	316	333	351	
	85 deg. DB	Low Side	72	73	75	76	78	80	81	83	84	
	72 deg. WB	High Side	228	244	260	276	293	310	327	345	363	
BC24B Rated CFM 800	75 deg. DB	Low Side	72	74	75	76	77	78	79	81	82	
	62 deg. WB	High Side	189	210	230	249	268	286	303	319	334	
	80 deg. DB	Low Side	77	78	80	82	83	84	86	87	88	
	67 deg. WB	High Side	194	216	236	256	275	293	311	327	343	
	85 deg. DB	Low Side	83	84	86	87	89	91	92	94	95	
	72 deg. WB	High Side	202	224	244	265	284	303	321	338	355	

Low side pressure + 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure + 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 9

COOLING			Air Temperature Entering Outdoor Coil Degree F									
Indoor Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115	
3ACQ3 Rated CPM 1075	75 deg. DB	Low Side	65	68	71	73	75	77	78	79	79	
	62 deg. WB	High Side	186	202	218	234	250	266	283	300	317	
	80 deg. DB	Low Side	70	73	76	78	80	82	83	84	85	
	67 deg. WB	High Side	190	207	239	239	256	273	290	307	325	
	85 deg. DB	Low Side	74	78	81	84	86	88	89	90	91	
	72 deg. WB	High Side	196	213	230	248	265	283	300	318	336	
3HCQ1 Rated CPM 1025	75 deg. DB	Low Side	66	68	70	72	74	75	77	77	78	
	62 deg. WB	High Side	192	208	223	239	255	271	287	304	320	
	80 deg. DB	Low Side	71	73	75	77	79	81	82	83	84	
	67 deg. WB	High Side	198	214	230	246	262	278	295	312	329	
	85 deg. DB	Low Side	75	78	81	83	85	87	88	89	90	
	72 deg. WB	High Side	204	220	237	254	271	288	306	323	341	
BC30B Rated CPM 825	75 deg. DB	Low Side	67	69	70	71	72	73	74	76	77	
	62 deg. WB	High Side	190	206	222	238	254	270	287	304	321	
	80 deg. DB	Low Side	72	73	75	77	78	79	81	82	83	
	67 deg. WB	High Side	195	212	228	244	261	278	295	312	330	
	85 deg. DB	Low Side	76	78	80	82	84	86	87	88	89	
	72 deg. WB	High Side	203	219	236	253	270	287	305	323	341	
BC35B Rated CPM 1050	75 deg. DB	Low Side	67	69	71	73	75	76	78	78	79	
	62 deg. WB	High Side	196	210	225	240	256	272	289	306	324	
	80 deg. DB	Low Side	72	74	76	78	80	82	83	84	85	
	67 deg. WB	High Side	201	216	231	247	263	280	297	315	333	
	85 deg. DB	Low Side	76	79	82	84	86	88	89	90	91	
	72 deg. WB	High Side	209	224	239	255	272	289	307	325	344	
BC36B Rated CPM 1050	75 deg. DB	Low Side	69	71	73	75	77	79	80	81	82	
	62 deg. WB	High Side	191	205	220	235	251	268	285	303	322	
	80 deg. DB	Low Side	74	76	78	80	82	84	85	87	88	
	67 deg. WB	High Side	195	210	225	241	258	275	293	312	331	
	85 deg. DB	Low Side	80	82	84	86	88	90	91	93	94	
	72 deg. WB	High Side	201	217	233	250	267	285	303	322	342	

Low side pressure \pm 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure \pm 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 10

COOLING			Air Temperature Entering Outdoor Coil Degree F										
Indoor Model	Return Air Temperature	Pressure	0°	0°	0°	0°	0°	0°	0°	0°	0°	0°	0°
3ACQ3 Rated CFM 1050	75 deg. DB	Low Side	67	69	71	73	75	77	79	81	83		
	62 deg. WB	High Side	186	200	215	229	243	257	271	286	300		
	80 deg. DB	Low Side	72	74	76	78	80	82	84	86	88		
	67 deg. WB	High Side	190	205	220	235	250	265	280	295	310		
	85 deg. DB	Low Side	78	80	82	84	86	88	90	92	94		
	72 deg. WB	High Side	196	212	227	243	259	275	291	306	322		
	75 deg. DB	Low Side	64	66	68	70	72	74	76	78	80		
3HCQ1 Rated CFM 1035	62 deg. WB	High Side	197	213	228	244	259	274	290	305	321		
	80 deg. DB	Low Side	69	71	73	75	77	79	81	83	85		
	67 deg. WB	High Side	203	219	234	250	266	282	298	313	329		
	85 deg. DB	Low Side	74	76	78	81	83	85	88	90	92		
	72 deg. WB	High Side	209	225	242	258	275	292	308	325	341		
	75 deg. DB	Low Side	65	67	68	69	71	72	74	75	76		
	62 deg. WB	High Side	185	201	218	234	250	266	282	297	313		
BC30B Rated CFM 800	80 deg. DB	Low Side	70	71	73	75	76	77	79	80	81		
	67 deg. WB	High Side	192	208	224	240	256	272	289	305	322		
	85 deg. DB	Low Side	74	77	78	80	82	84	85	86	87		
	72 deg. WB	High Side	197	214	231	248	265	282	299	316	333		
	75 deg. DB	Low Side	64	65	67	68	70	72	73	75	76		
	62 deg. WB	High Side	182	198	215	231	248	265	281	298	314		
	80 deg. DB	Low Side	67	69	71	73	75	77	79	81	83		
BC35B Rated CFM 1000	67 deg. WB	High Side	186	203	220	237	254	271	288	305	322		
	85 deg. DB	Low Side	72	74	76	79	81	83	86	88	90		
	72 deg. WB	High Side	193	210	227	245	262	279	297	314	331		
	75 deg. DB	Low Side	71	73	75	77	78	79	80	81	82		
	62 deg. WB	High Side	181	198	214	230	246	262	278	294	310		
	80 deg. DB	Low Side	76	78	80	82	84	85	87	88			
	67 deg. WB	High Side	188	204	220	236	252	268	285	301	318		
BC36B Rated CFM 1050	85 deg. DB	Low Side	82	84	86	88	90	92	93	94	95		
	72 deg. WB	High Side	193	210	227	244	261	278	295	312	329		

Low side pressure + 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure + 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 11

COOLING			Air Temperature Entering Outdoor Coil Degree F									
Indoor Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115	
3ACQ3	75 deg. DB	Low Side	55	57	59	61	63	65	67	69	71	
	62 deg. WB	High Side	218	235	252	269	286	303	320	337	354	
	80 deg. DB	Low Side	59	61	63	66	68	70	73	75	77	
	67 deg. WB	High Side	223	241	259	276	294	312	329	347	365	
	1180	85 deg. DB	Low Side	64	66	68	71	73	75	78	80	82
		72 deg. WB	232	250	268	286	304	322	340	358	376	
	75 deg. DB	Low Side	54	56	58	61	63	65	68	70	72	
	62 deg. WB	High Side	214	231	248	265	282	299	316	333	350	
	80 deg. DB	Low Side	58	60	62	65	67	69	72	74	76	
	67 deg. WB	High Side	220	237	254	272	289	306	324	341	358	
3HCQ1	85 deg. DB	Low Side	63	65	67	70	72	74	77	79	81	
	72 deg. WB	High Side	227	245	263	281	299	317	335	353	371	
	75 deg. DB	Low Side	54	56	58	61	63	65	68	70	72	
	62 deg. WB	High Side	212	228	243	259	275	291	307	322	338	
	80 deg. DB	Low Side	58	60	62	65	67	69	72	74	76	
	67 deg. WB	High Side	217	233	250	266	283	300	316	333	349	
	1275	85 deg. DB	Low Side	57	60	63	65	68	71	73	76	79
		72 deg. WB	228	242	257	271	285	299	313	328	342	
	75 deg. DB	Low Side	65	67	68	69	70	71	73	74	75	
	62 deg. WB	High Side	228	241	256	271	287	304	322	341	361	
BC35B	80 deg. DB	Low Side	70	72	73	74	75	76	77	79	80	
	67 deg. WB	High Side	235	248	269	281	295	313	331	351	371	
	85 deg. DB	Low Side	75	76	78	80	81	82	84	85	86	
	72 deg. WB	High Side	241	256	271	288	305	323	342	362	383	

Low side pressure \pm 2 PSIG (suction line @ outdoor unit quick connect)
 High side pressure \pm 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 12

COOLING

Indoor Model	Return Air Temperature	Pressure	Air Temperature Entering Outdoor Coil Degree F									
			75	80	85	90	95	100	105	110	115	
3ACQ3	75 deg. DB	Low Side	60	43	63	64	65	66	67	68	70	
	62 deg. WB	High Side	202	218	233	249	265	281	297	312	328	
Rated CPM 1180	80 deg. DB	Low Side	62	64	66	68	70	72	74	76	78	
	67 deg. WB	High Side	207	224	240	256	272	288	304	320	337	
3RCQ1	85 deg. DB	Low Side	67	69	71	73	75	77	79	81	83	
	72 deg. WB	High Side	215	631	248	264	281	298	314	331	347	
Rated CPM 1000	75 deg. DB	Low Side	53	55	57	60	62	64	67	69	71	
	62 deg. WB	High Side	194	210	225	241	256	271	287	302	318	
BC35B	80 deg. DB	Low Side	57	59	61	64	66	68	71	73	75	
	67 deg. WB	High Side	200	216	231	247	263	279	295	310	326	
Rated CPM 1200	85 deg. DB	Low Side	62	64	66	69	71	73	76	78	80	
	72 deg. WB	High Side	207	224	240	256	272	288	304	320	337	
A36AS-A	75 deg. DB	Low Side	55	57	59	62	64	66	69	71	73	
	62 deg. WB	High Side	196	213	230	247	264	281	298	315	332	
Rated CPM 1200	80 deg. DB	Low Side	59	61	63	66	68	70	73	75	77	
	67 deg. WB	High Side	202	219	236	254	271	288	306	323	340	
BC36B	85 deg. DB	Low Side	64	66	68	71	73	75	78	80	82	
	72 deg. WB	High Side	209	227	245	262	280	298	315	333	351	
Rated CPM 1200	75 deg. DB	Low Side	59	62	65	67	70	73	75	78	81	
	62 deg. WB	High Side	189	210	230	251	271	291	312	332	353	
BC36B	80 deg. DB	Low Side	64	67	70	72	75	78	80	83	86	
	67 deg. WB	High Side	195	216	236	257	278	299	320	340	361	
Rated CPM 1200	85 deg. DB	Low Side	69	72	75	77	80	83	85	88	91	
	72 deg. WB	High Side	202	224	245	266	287	308	329	350	372	
BC36B	75 deg. DB	Low Side	65	67	69	71	72	73	74	75	76	
	62 deg. WB	High Side	204	220	236	252	268	284	301	318	335	
Rated CPM 1200	80 deg. DB	Low Side	71	72	74	76	77	78	80	81	82	
	67 deg. WB	High Side	209	226	242	258	275	292	309	326	344	
BC36B	85 deg. DB	Low Side	75	77	79	81	83	85	86	87	88	
	72 deg. WB	High Side	212	227	243	259	277	295	315	335	356	

Low side pressure \pm 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure \pm 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CPM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 13

COOLING			Air Temperature Entering Outdoor Coil Degree F									
Indoor Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115	
4ACQ2 Rated CFM 1450	75 deg. DB	Low Side	63	64	66	67	69	71	72	74	75	
	62 deg. WB	High Side	193	208	223	238	253	268	283	298	313	
	80 deg. DB	Low Side	66	68	70	72	74	76	78	80	82	
	67 deg. WB	High Side	198	214	229	245	260	275	291	306	322	
	85 deg. DB	Low Side	71	73	75	77	79	81	83	85	87	
	72 deg. WB	High Side	206	222	237	253	269	285	301	316	332	
5ACQ1 Rated CFM 1600	75 deg. DB	Low Side	71	73	74	75	76	77	78	79	81	
	62 deg. WB	High Side	178	192	207	221	236	251	265	280	294	
	80 deg. DB	Low Side	76	77	79	80	82	84	85	87	88	
	67 deg. WB	High Side	182	197	212	227	242	257	272	287	302	
	85 deg. DB	Low Side	82	83	85	86	88	90	91	93	94	
	72 deg. WB	High Side	188	204	219	235	250	265	281	296	312	
4BCQ Rated CFM 1500	75 deg. DB	Low Side	63	65	67	69	71	73	75	77	79	
	62 deg. WB	High Side	191	207	222	238	254	270	286	301	317	
	80 deg. DB	Low Side	68	70	72	74	76	78	80	82	84	
	67 deg. WB	High Side	196	213	229	245	261	277	293	309	326	
	85 deg. DB	Low Side	73	75	77	80	82	84	87	89	91	
	72 deg. WB	High Side	204	220	237	253	270	287	303	320	336	
BC48A Rated CFM 1575	75 deg. DB	Low Side	72	74	75	76	77	78	79	80	82	
	62 deg. WB	High Side	188	201	215	229	243	257	271	285	298	
	80 deg. DB	Low Side	77	79	80	81	82	83	84	85	87	
	67 deg. WB	High Side	192	206	221	235	250	265	279	294	308	
	85 deg. DB	Low Side	83	85	86	87	88	89	90	91	93	
	72 deg. WB	High Side	197	213	228	244	259	274	290	305	321	
A42AS-A Rated CFM 1450	75 deg. DB	Low Side	64	65	67	68	70	72	73	75	76	
	62 deg. WB	High Side	183	199	214	230	245	260	276	291	307	
	80 deg. DB	Low Side	67	69	71	73	75	77	79	81	83	
	67 deg. WB	High Side	189	205	220	236	251	266	282	297	313	
	85 deg. DB	Low Side	72	74	76	79	81	83	86	88	90	
	72 deg. WB	High Side	195	212	228	244	260	276	292	308	325	
A48AS-A Rated CFM 1450	75 deg. DB	Low Side	65	67	69	71	73	75	77	79	81	
	62 deg. WB	High Side	191	207	222	238	254	270	286	301	317	
	80 deg. DB	Low Side	70	72	74	76	78	80	82	84	86	
	67 deg. WB	High Side	196	213	229	245	261	277	293	309	326	
	85 deg. DB	Low Side	75	77	79	82	84	86	89	91	93	
	72 deg. WB	High Side	204	220	237	253	270	287	303	320	336	

Low side pressure \pm 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure \pm 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

TABLE 14

COOLING		Air Temperature Entering Outdoor Coil Degree F									
Indoor Model	Return Air Temperature	Pressure	0	0	0	0	0	0	0	0	0
4ACQ2 Rated CFM 1690	75 deg. DB	Low Side	58	60	62	64	66	68	70	72	74
	62 deg. WB	High Side	202	218	233	249	265	281	297	312	328
	80 deg. DB	Low Side	62	64	66	69	71	73	76	78	80
	67 deg. WB	High Side	207	224	240	256	272	288	304	320	337
	85 deg. DB	Low Side	67	69	71	74	76	78	89	83	85
	72 deg. WB	High Side	215	231	248	264	281	298	314	331	347
5ACQ1 Rated CFM 1800	75 deg. DB	Low Side	66	68	70	72	74	76	78	80	82
	62 deg. WB	High Side	188	204	219	235	250	265	281	296	312
	80 deg. DB	Low Side	71	73	75	77	79	81	83	85	87
	67 deg. WB	High Side	192	209	225	241	257	273	289	305	322
	85 deg. DB	Low Side	77	79	81	83	85	87	89	91	93
	72 deg. WB	High Side	200	216	233	249	266	283	299	316	332
4HCQ Rated CFM 1600	75 deg. DB	Low Side	58	60	62	65	67	69	72	74	76
	62 deg. WB	High Side	202	218	235	251	268	285	301	318	334
	80 deg. DB	Low Side	61	64	67	69	72	75	77	80	83
	67 deg. WB	High Side	207	224	241	258	275	292	309	326	343
	85 deg. DB	Low Side	66	69	72	74	77	80	82	85	88
	72 deg. WB	High Side	214	232	250	267	285	303	320	338	356
BC48A Rated CFM 1725	75 deg. DB	Low Side	69	70	72	73	75	77	78	80	81
	62 deg. WB	High Side	206	220	235	249	263	277	291	306	320
	80 deg. DB	Low Side	74	75	77	78	80	82	83	85	86
	67 deg. WB	High Side	212	226	241	255	270	285	299	314	328
	85 deg. DB	Low Side	80	81	83	84	86	88	89	91	92
	72 deg. WB	High Side	219	234	249	264	279	294	309	324	339
A48AS-A Rated CFM 1500	75 deg. DB	Low Side	66	68	69	70	71	72	73	74	76
	62 deg. WB	High Side	188	204	221	237	254	271	287	304	320
	80 deg. DB	Low Side	71	73	74	75	76	77	78	79	81
	67 deg. WB	High Side	194	210	227	243	260	277	293	310	326
	85 deg. DB	Low Side	76	77	79	80	82	84	85	87	88
	72 deg. WB	High Side	201	218	235	252	269	286	303	320	337
5ACQ2 Rated CFM 1600	75 deg. DB	Low Side	64	66	68	71	73	75	78	80	82
	62 deg. WB	High Side	196	212	227	243	259	275	291	306	322
	80 deg. DB	Low Side	69	71	73	76	78	80	83	85	87
	67 deg. WB	High Side	201	218	234	250	266	282	298	314	331
	85 deg. DB	Low Side	73	76	79	81	84	87	89	92	95
	72 deg. WB	High Side	209	225	242	258	275	292	308	325	341

Low side pressure \pm 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure \pm 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.



TABLE 15

COOLING		Air Temperature Entering Outdoor Coil Degree F										
Indoor Model	Return Air Temperature	Pressure	0°	0°	0°	0°	0°	0°	0°	0°	0°	0°
5ACQ1 Rated CFM 1990	75 deg. DB	Low Side	66	67	69	70	72	74	75	77	78	
	62 deg. WB	High Side	195	211	226	242	258	274	290	305	321	
	80 deg. DB	Low Side	71	72	74	75	77	79	80	82	83	
	67 deg. WB	High Side	200	217	233	249	265	281	297	313	330	
	85 deg. DB	Low Side	75	77	79	81	83	85	87	89	91	
	72 deg. WB	High Side	208	224	241	257	274	291	307	324	340	
5HCQ Rated CFM 1650	75 deg. DB	Low Side	64	65	67	68	70	72	73	75	76	
	62 deg. WB	High Side	192	208	223	239	255	271	287	302	318	
	80 deg. DB	Low Side	67	69	71	73	75	77	79	81	83	
	67 deg. WB	High Side	197	214	230	246	262	278	294	310	327	
	85 deg. DB	Low Side	72	74	76	79	81	83	86	88	90	
	72 deg. WB	High Side	205	221	238	254	271	288	304	321	337	
BC48A Rated CFM 1625	75 deg. DB	Low Side	60	62	64	67	69	71	74	76	78	
	62 deg. WB	High Side	190	206	221	237	253	269	285	300	316	
	80 deg. DB	Low Side	65	67	69	72	74	76	79	81	83	
	67 deg. WB	High Side	194	211	227	243	259	275	291	307	324	
	85 deg. DB	Low Side	69	72	75	77	80	83	85	88	91	
	72 deg. WB	High Side	202	218	235	251	268	285	301	318	334	
BC60A Rated CFM 1800	75 deg. DB	Low Side	69	71	72	73	74	75	76	77	79	
	62 deg. WB	High Side	203	218	233	248	263	278	293	308	323	
	80 deg. DB	Low Side	74	76	77	78	79	80	81	82	84	
	67 deg. WB	High Side	209	224	239	254	269	284	299	314	329	
	85 deg. DB	Low Side	80	82	83	84	85	86	87	88	90	
	72 deg. WB	High Side	216	232	247	263	278	293	309	324	340	
A60AS-A Rated CFM 1920	75 deg. DB	Low Side	63	65	67	69	71	73	75	77	79	
	62 deg. WB	High Side	188	202	217	231	246	261	275	290	304	
	80 deg. DB	Low Side	68	70	72	74	76	78	80	82	84	
	67 deg. WB	High Side	192	207	222	237	252	267	282	297	312	
	85 deg. DB	Low Side	73	75	77	80	82	84	87	89	91	
	72 deg. WB	High Side	198	214	229	245	261	277	293	308	324	
5ACQ2 Rated CFM 1900	75 deg. DB	Low Side	63	65	67	69	71	73	75	77	79	
	62 deg. WB	High Side	204	221	238	255	272	289	306	323	340	
	80 deg. DB	Low Side	68	70	72	74	76	78	80	82	84	
	67 deg. WB	High Side	210	227	244	262	279	296	314	331	348	
	85 deg. DB	Low Side	73	75	77	80	82	84	87	89	91	
	72 deg. WB	High Side	217	235	253	271	289	307	325	343	361	

Low side pressure + 2 PSIG (suction line @ outdoor unit quick connect)

High side pressure + 5 PSIG (liquid line @ outdoor unit quick connect)

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

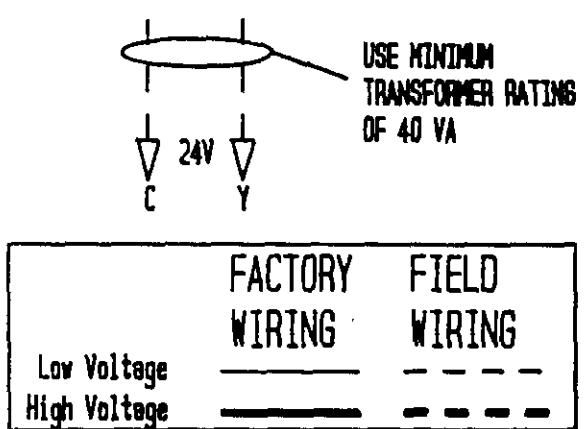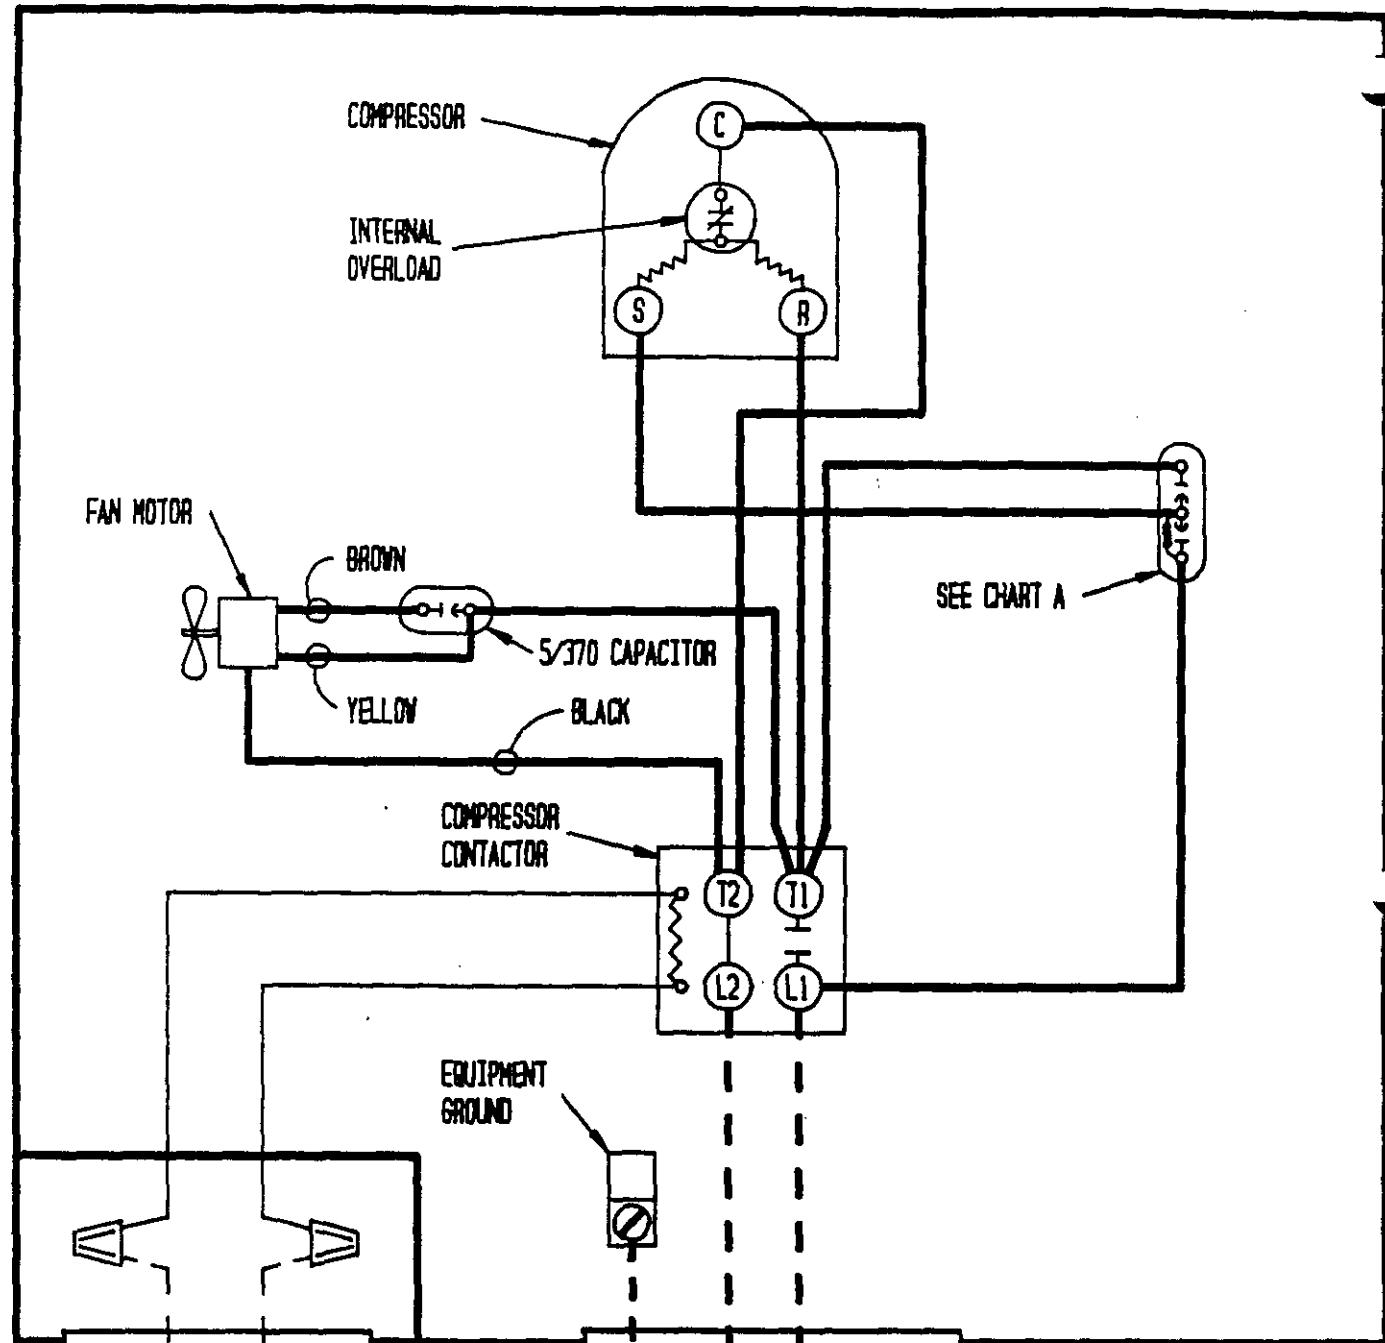


USE MINIMUM
TRANSFORMER RATING
OF 40 VA

230/208-60-1

USE COPPER
CONDUCTORS ONLY
FUSED DISCONNECT
SWITCH

UNIT SIZE	CAP. SIZE
18ECB	15/10-370
24ECB	20/15-370

4021-110F

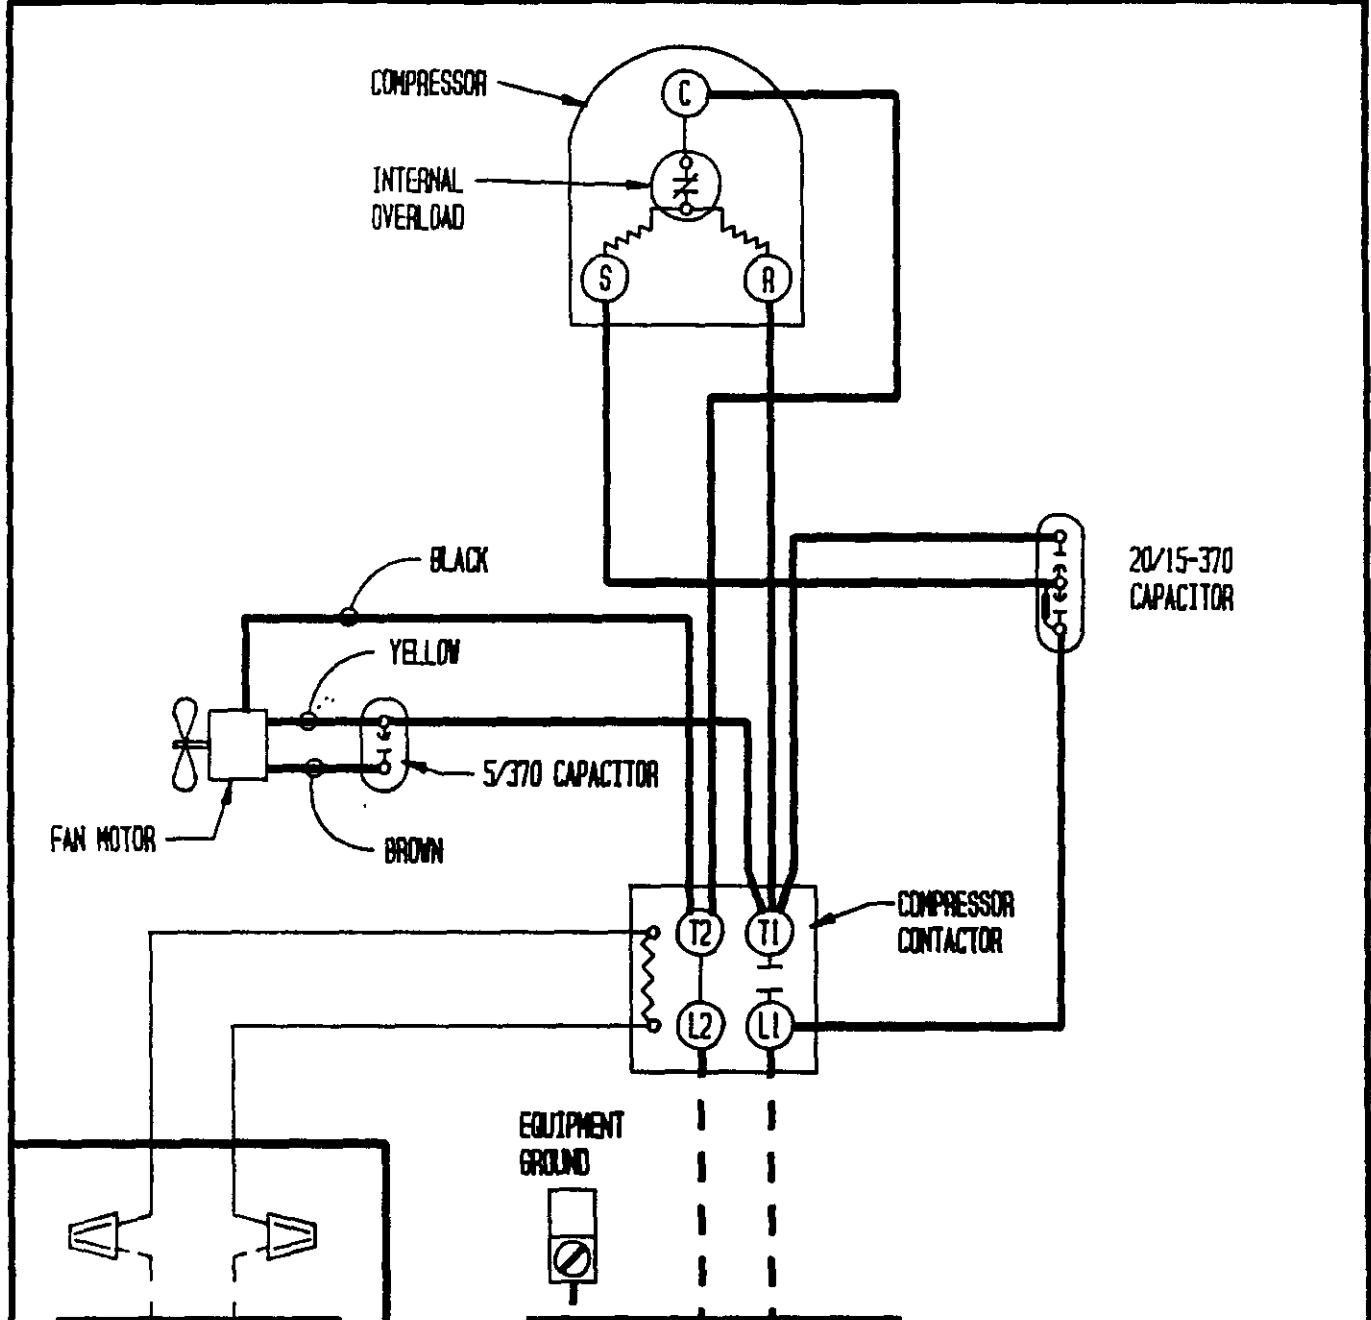

USE MINIMUM
TRANSFORMER
RATING OF 40VA


C
Y
24V

USE COPPER
CONDUCTORS ONLY

FUSED DISCONNECT
SWITCH


230/208-60-1

FACTORY WIRING	FIELD WIRING
Low Voltage	-----
High Voltage	-----

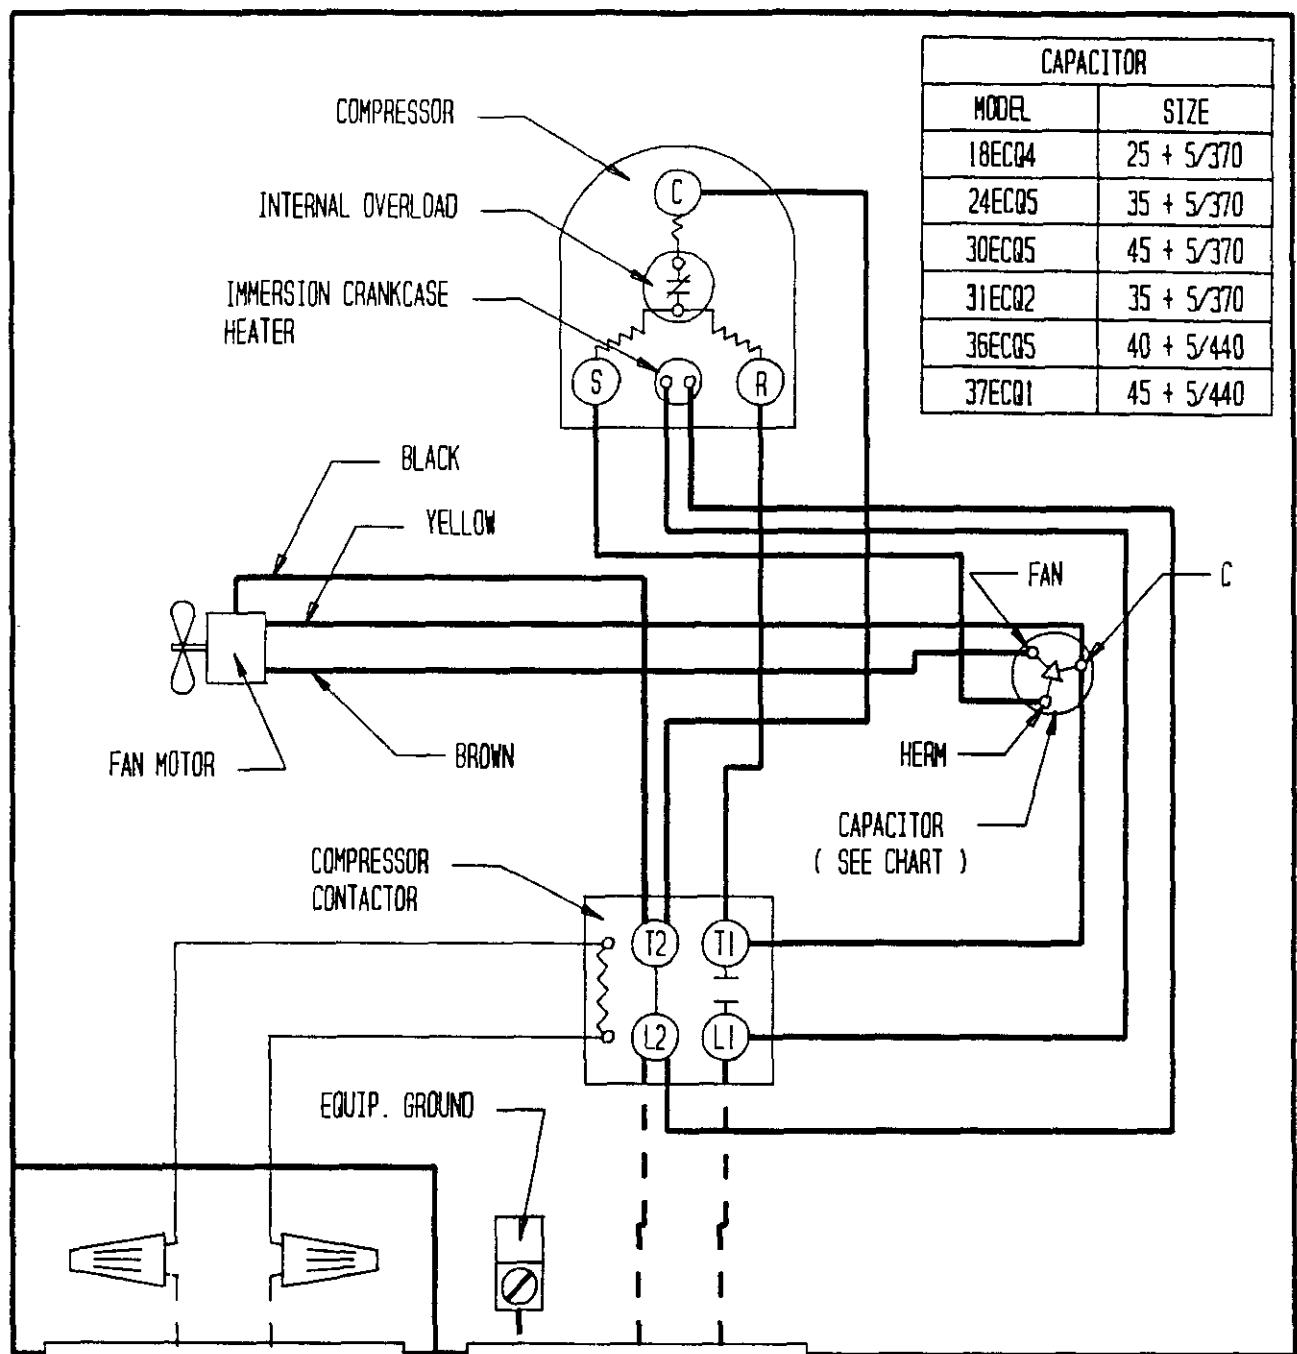


24V
C
Y
V
V

USE MINIMUM
TRANSFORMER
RATING OF 40VA

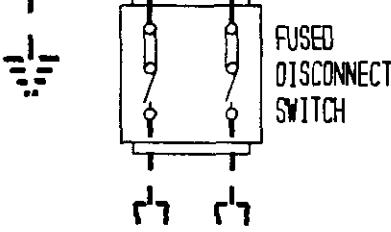

USE COPPER
CONDUCTORS ONLY

FACTORY WIRING	FIELD WIRING
Low Voltage	High Voltage

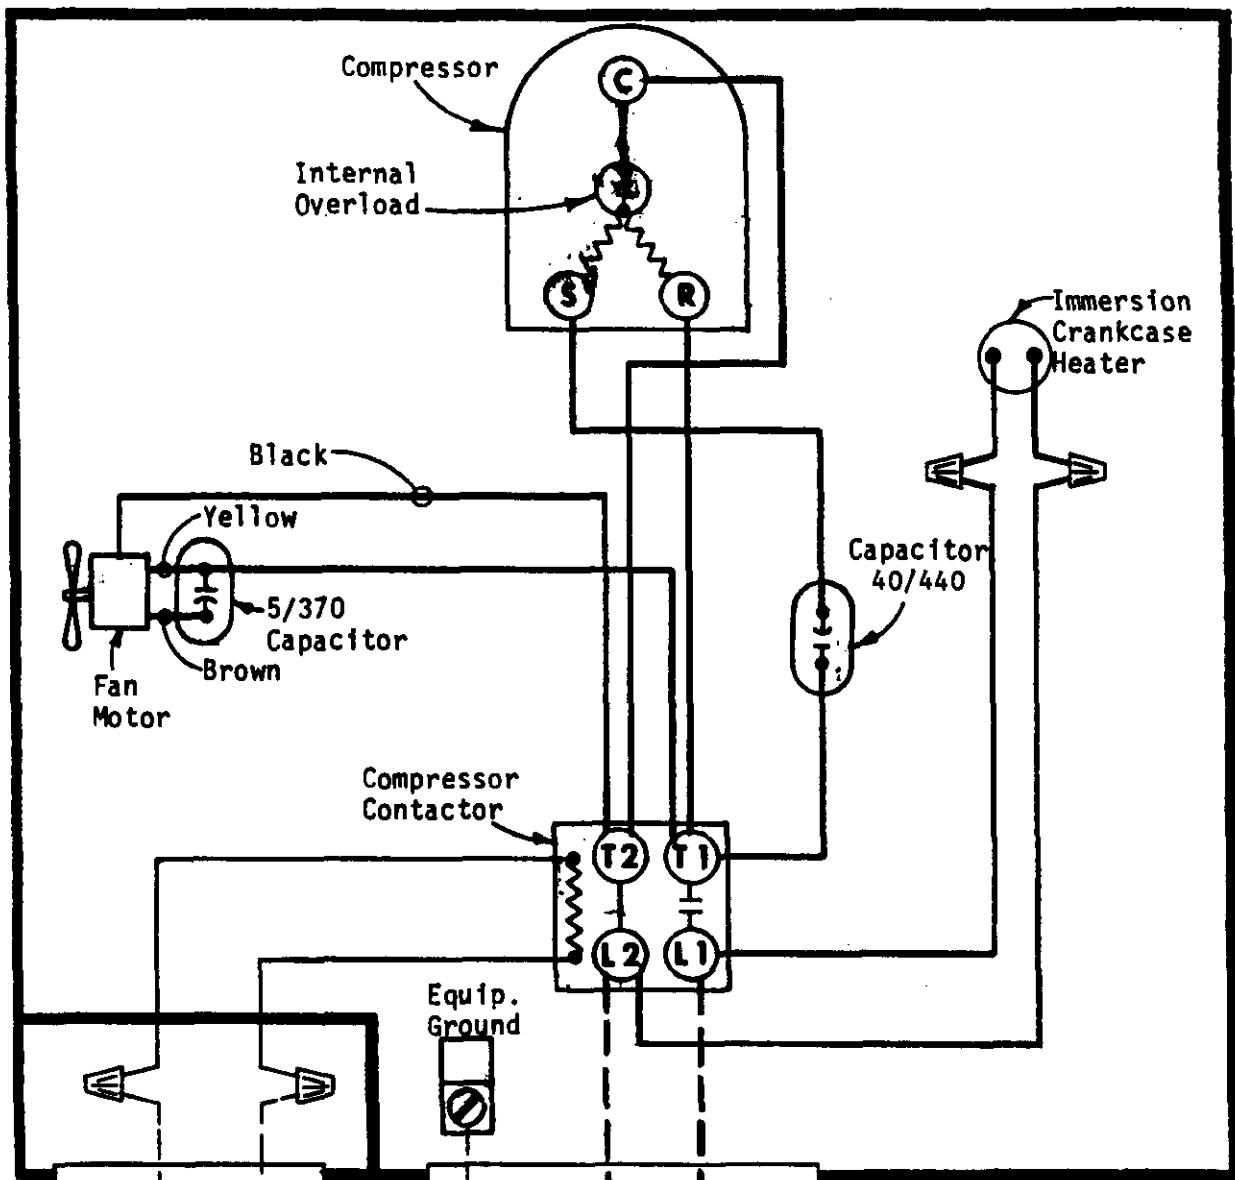

Use Minimum
Transformer
Rating of
40VA

Use Copper
Conductors
Only


Fused
Disconnect
Switch

FACTORY WIRING FIELD WIRING

Low Voltage	—	—	—
High Voltage	—	—	—

230/208-60-1


4062-112

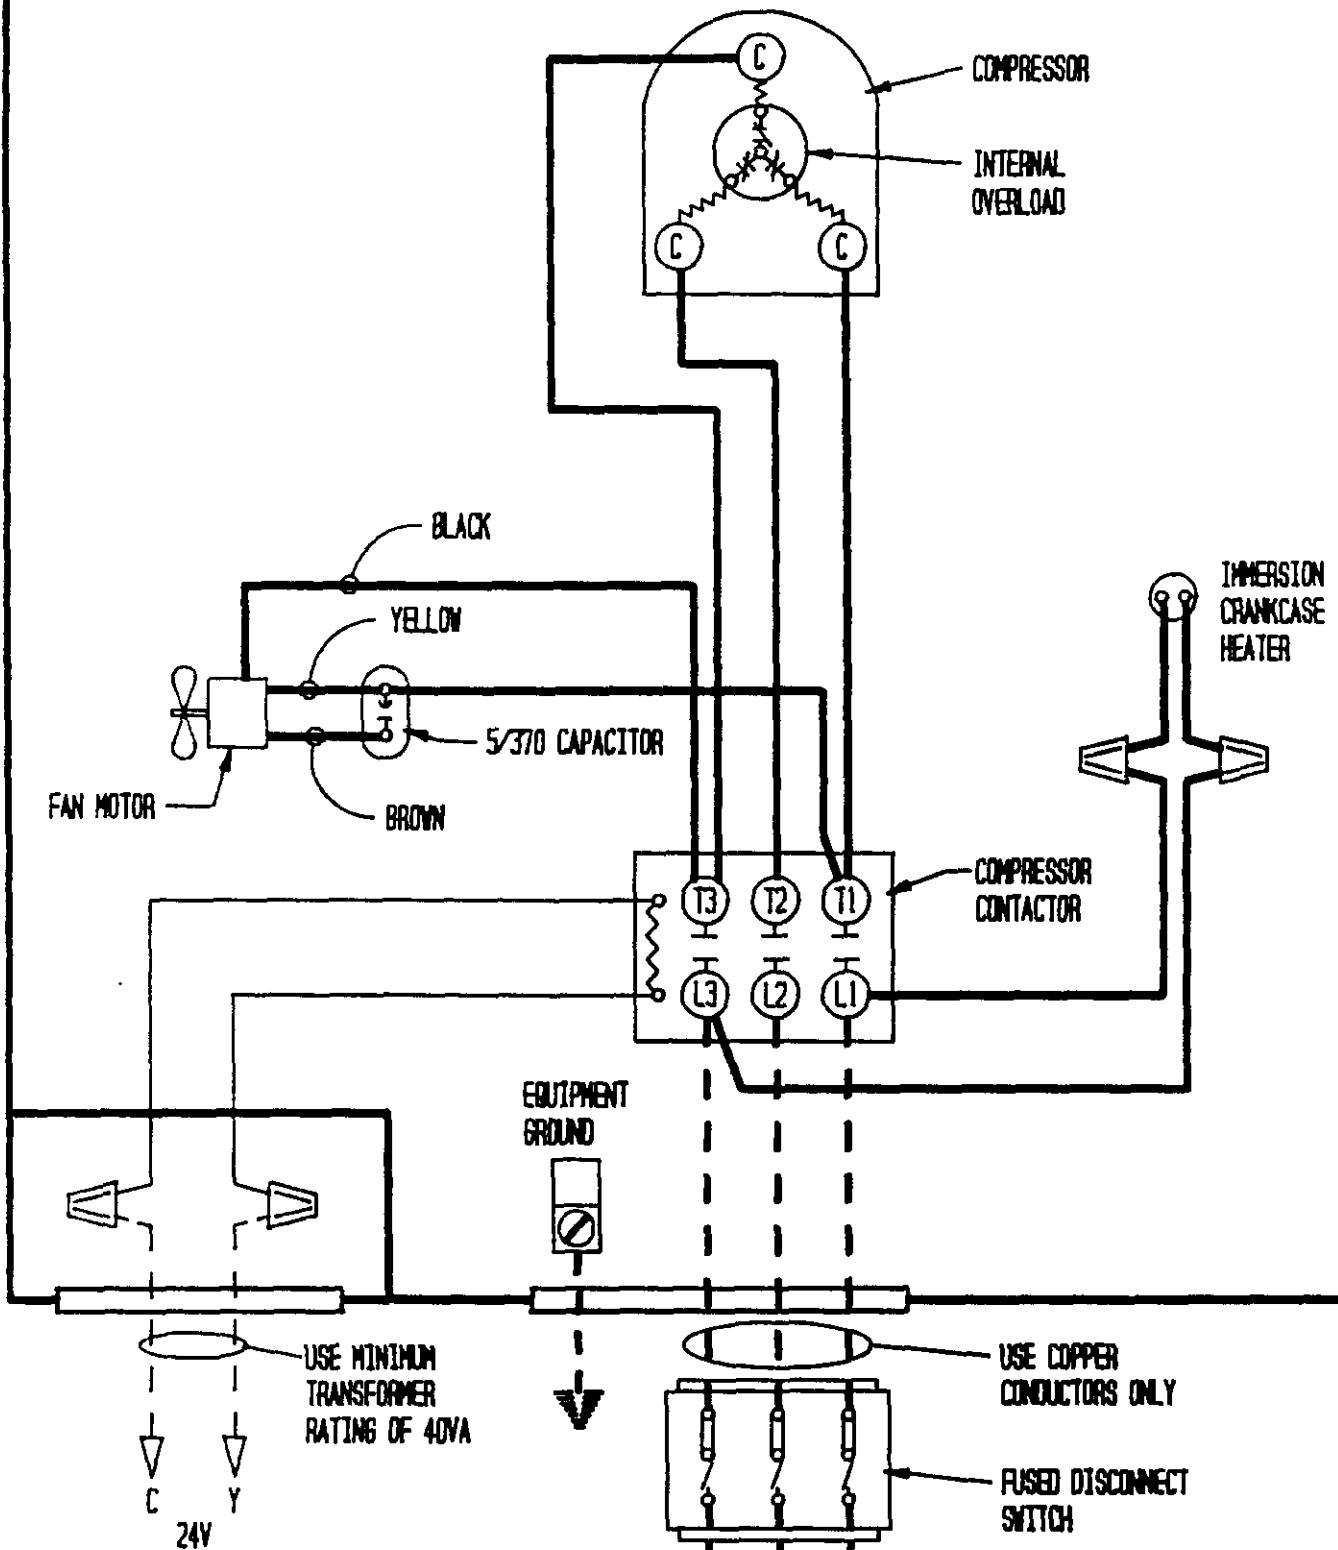


FACTORY	FIELD
WIRING	WIRING

Low Voltage
High Voltage


230/208-60-3
240/200-50-3

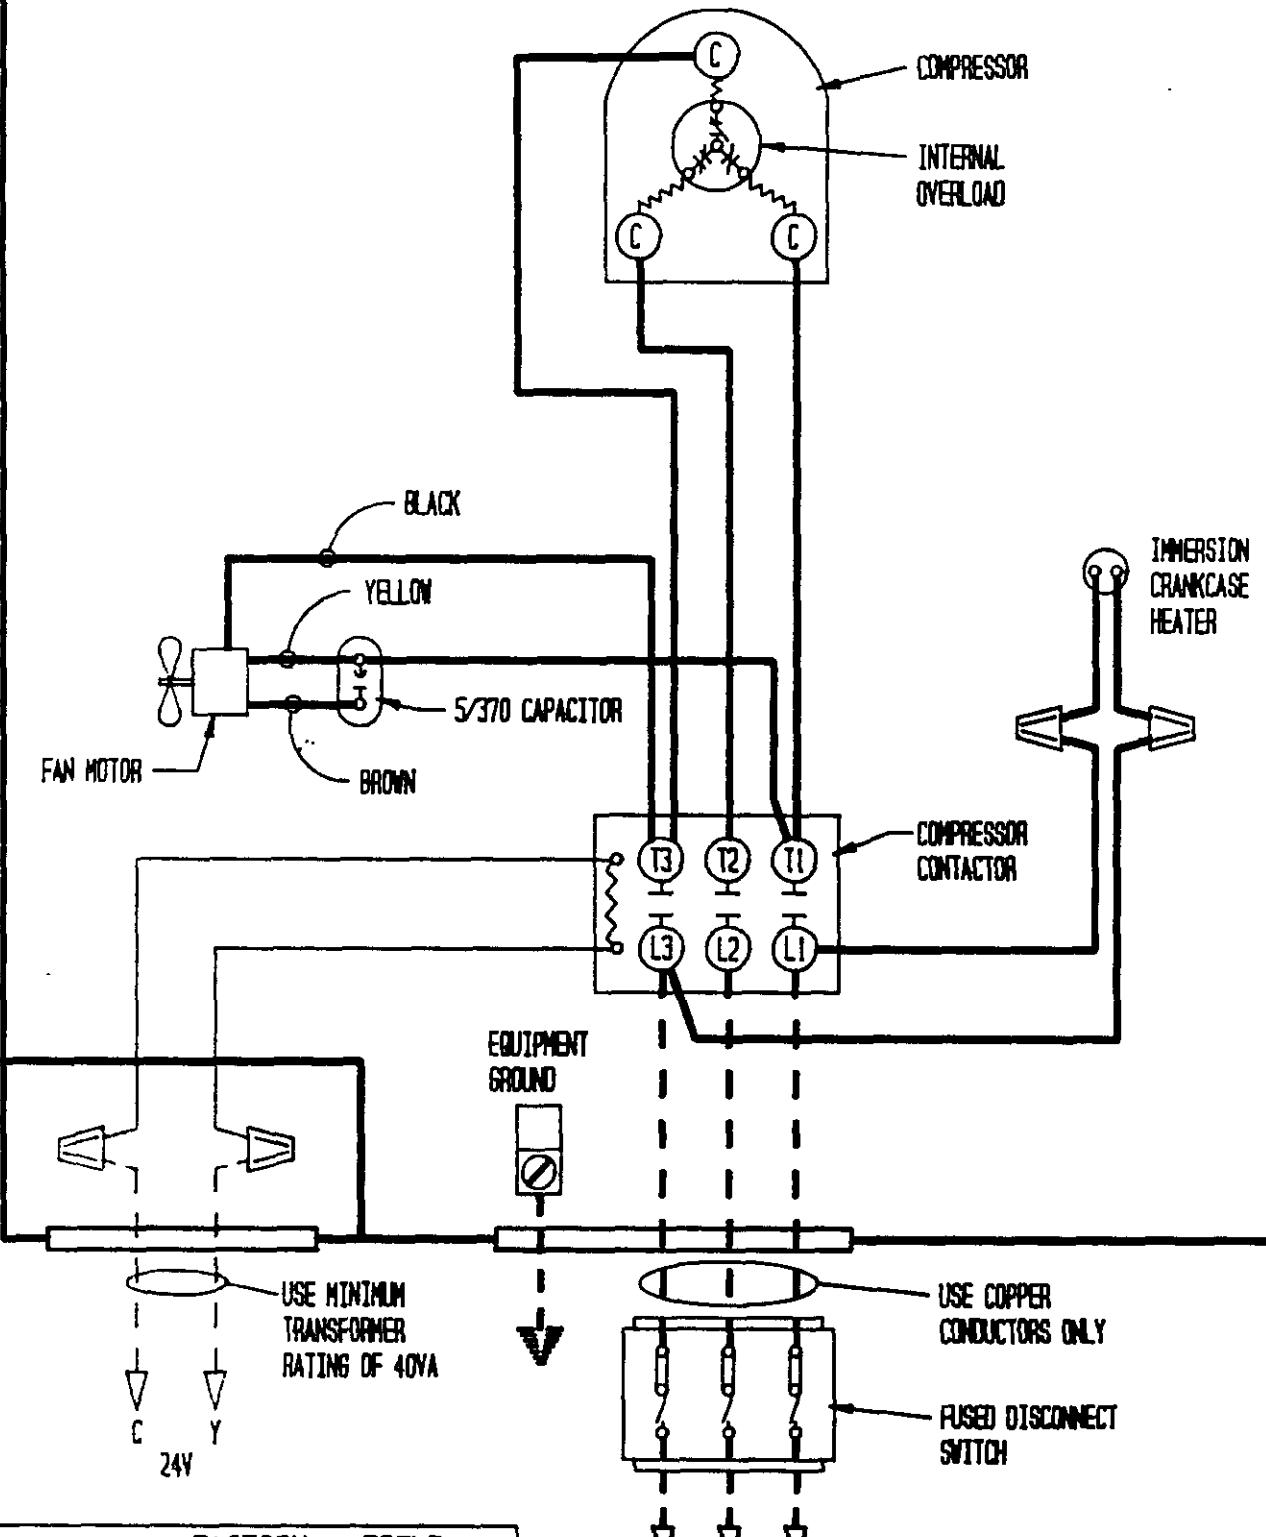

	FACTORY WIRING	FIELD WIRING
Low Voltage	—	—
High Voltage	—	—

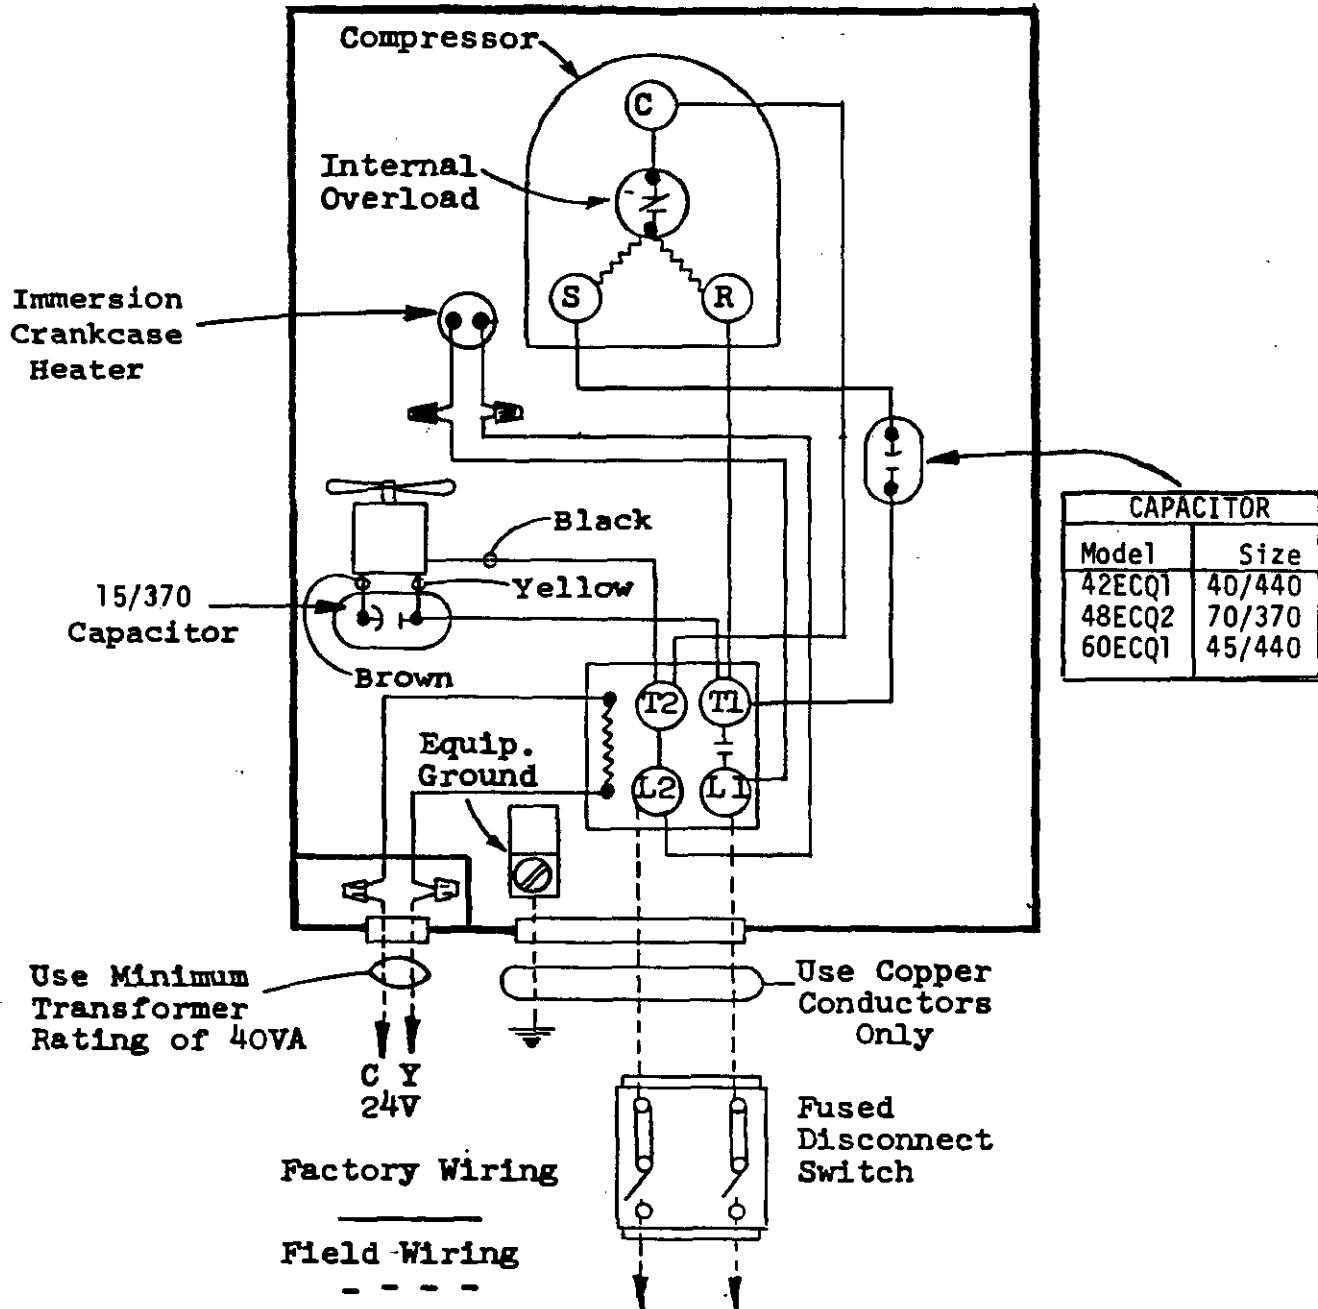


4025-110 pD

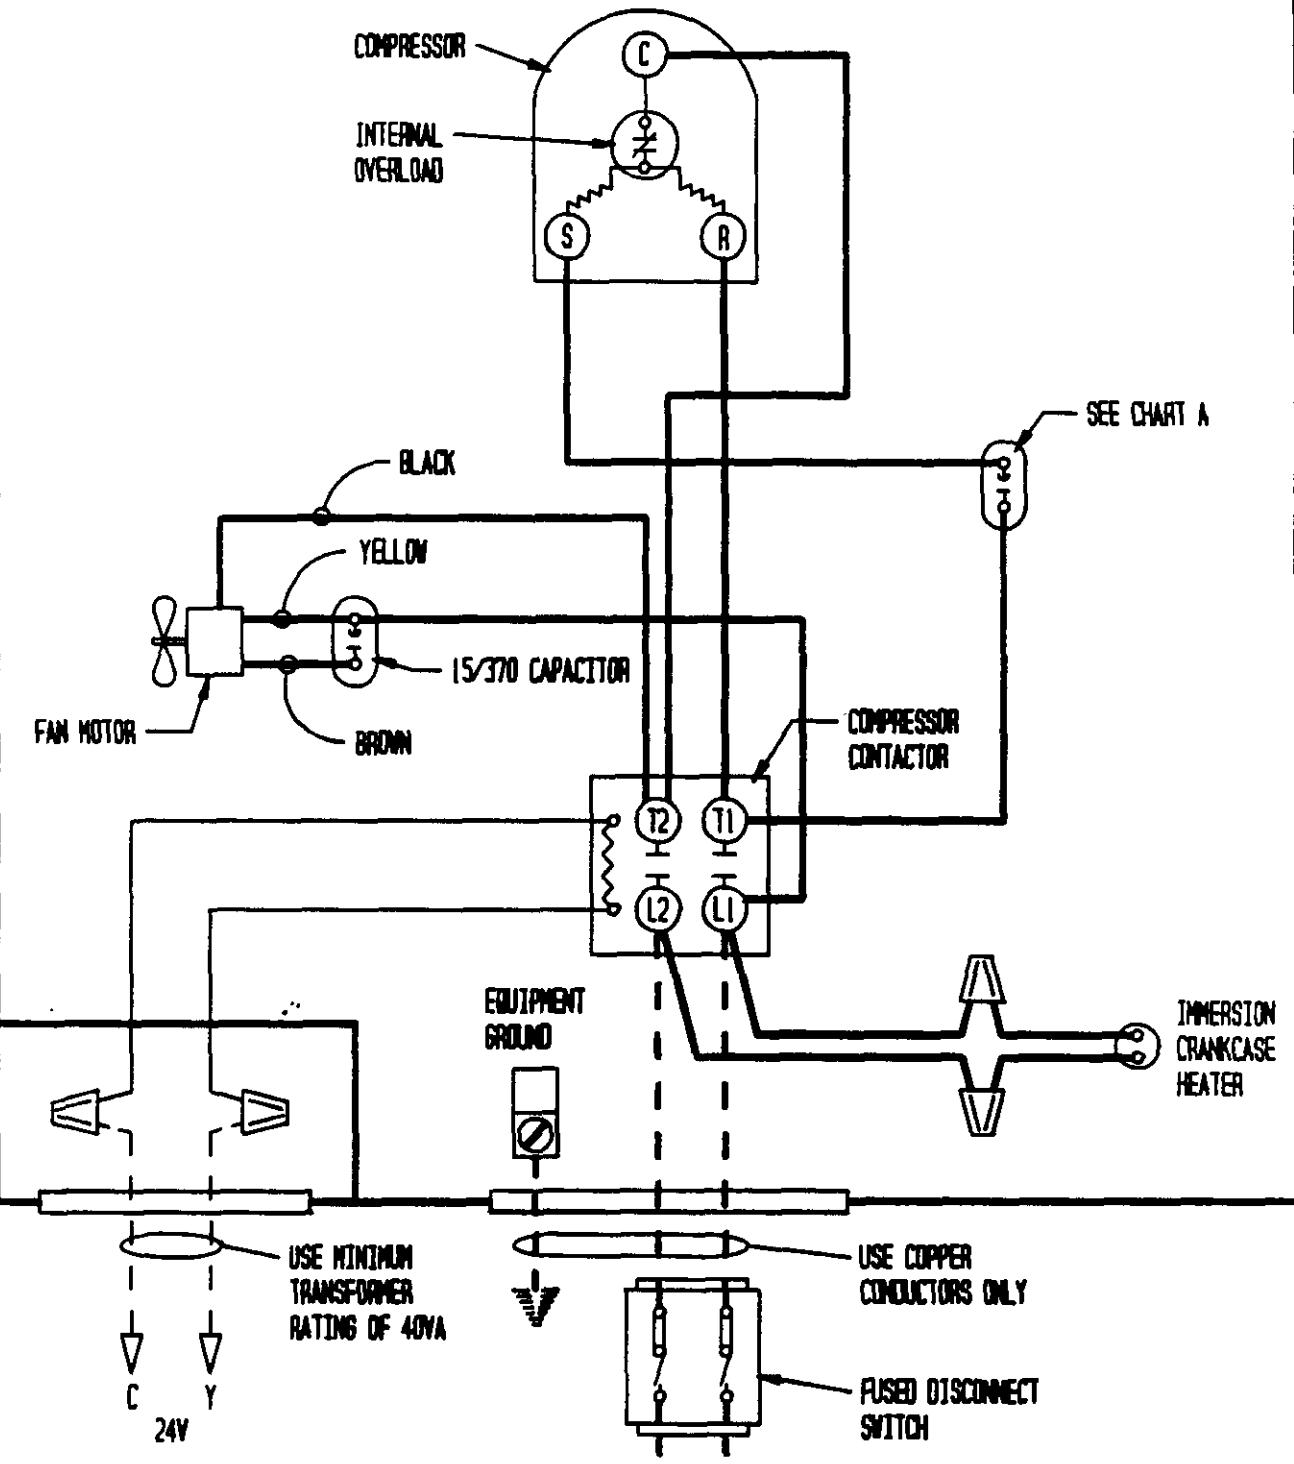


FACTORY WIRING	FIELD WIRING
Low Voltage	-----
High Voltage	-----

CHART A	
UNIT SIZE	CAP. SIZE
3 1/2 TON	40/440
4 TON	70/370
5 TON	45/440

4025-120 8

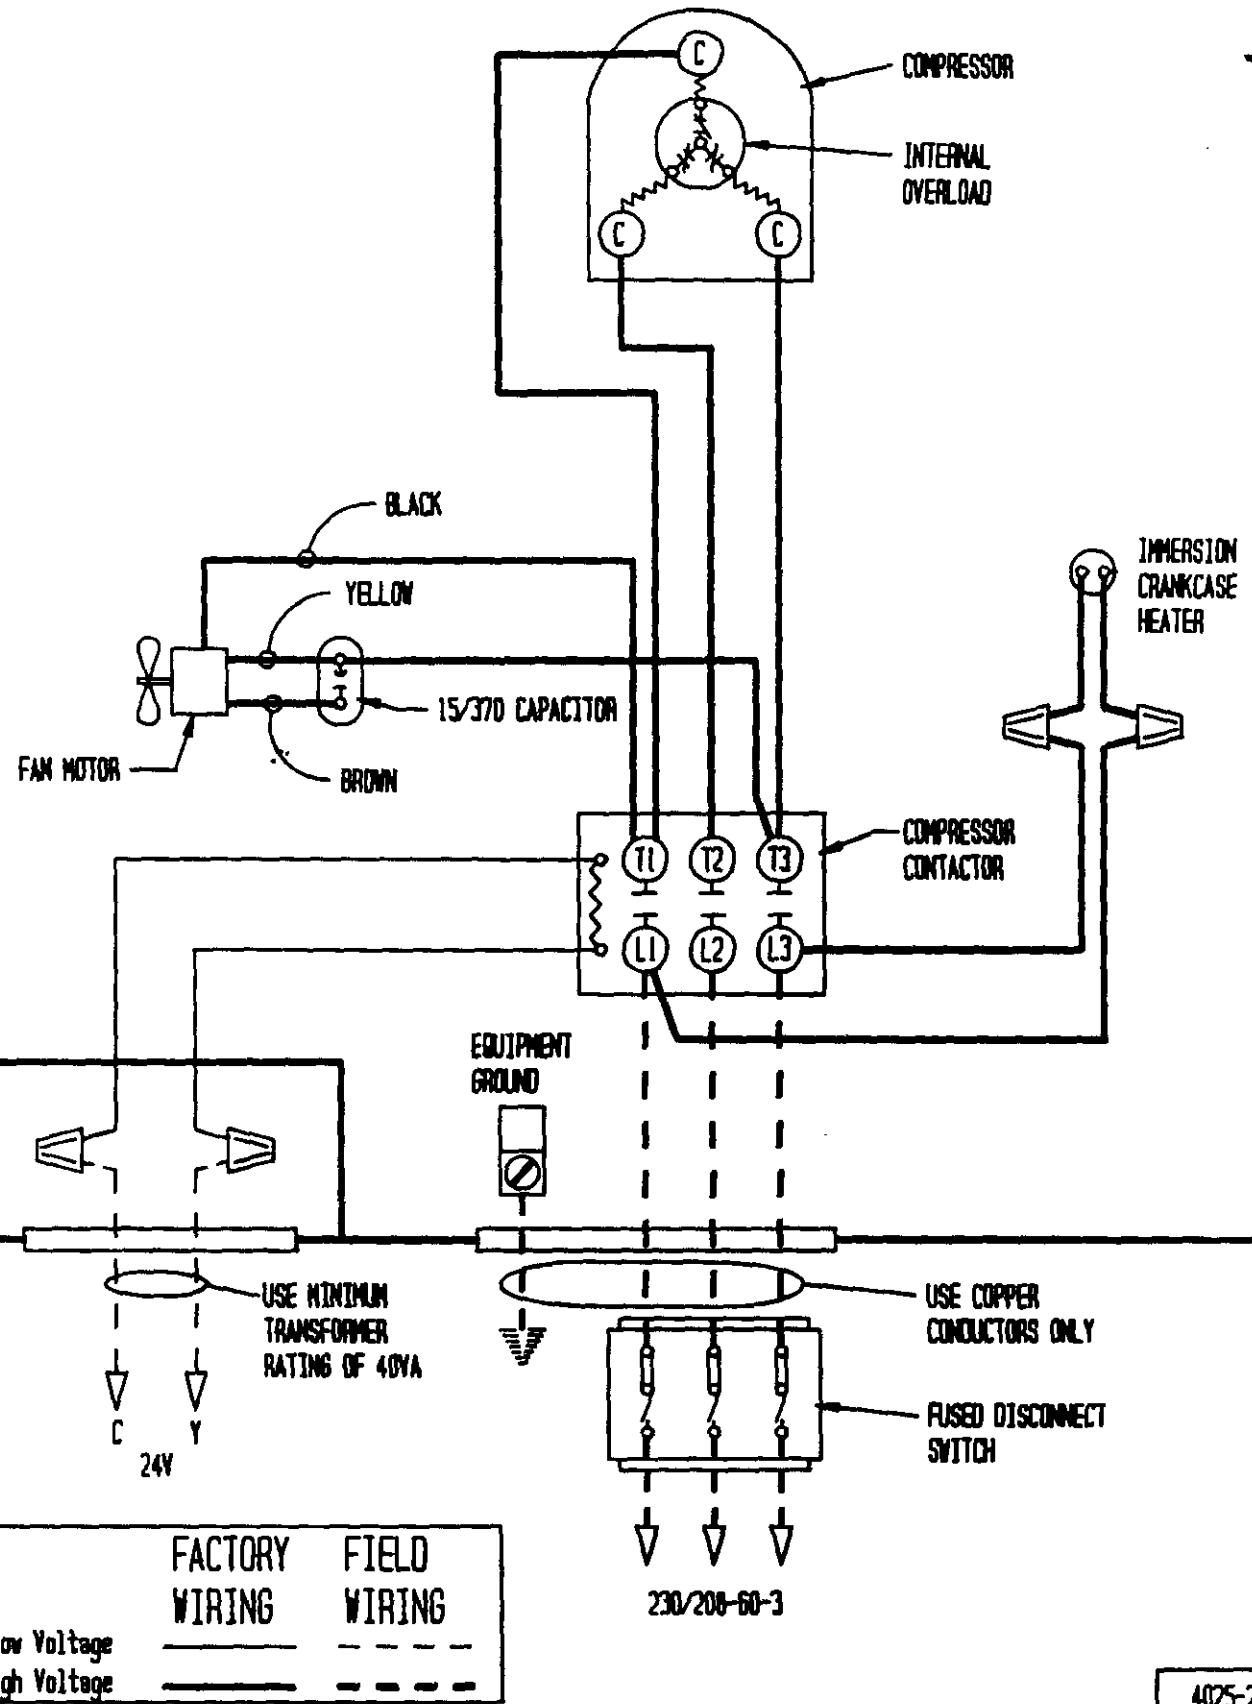

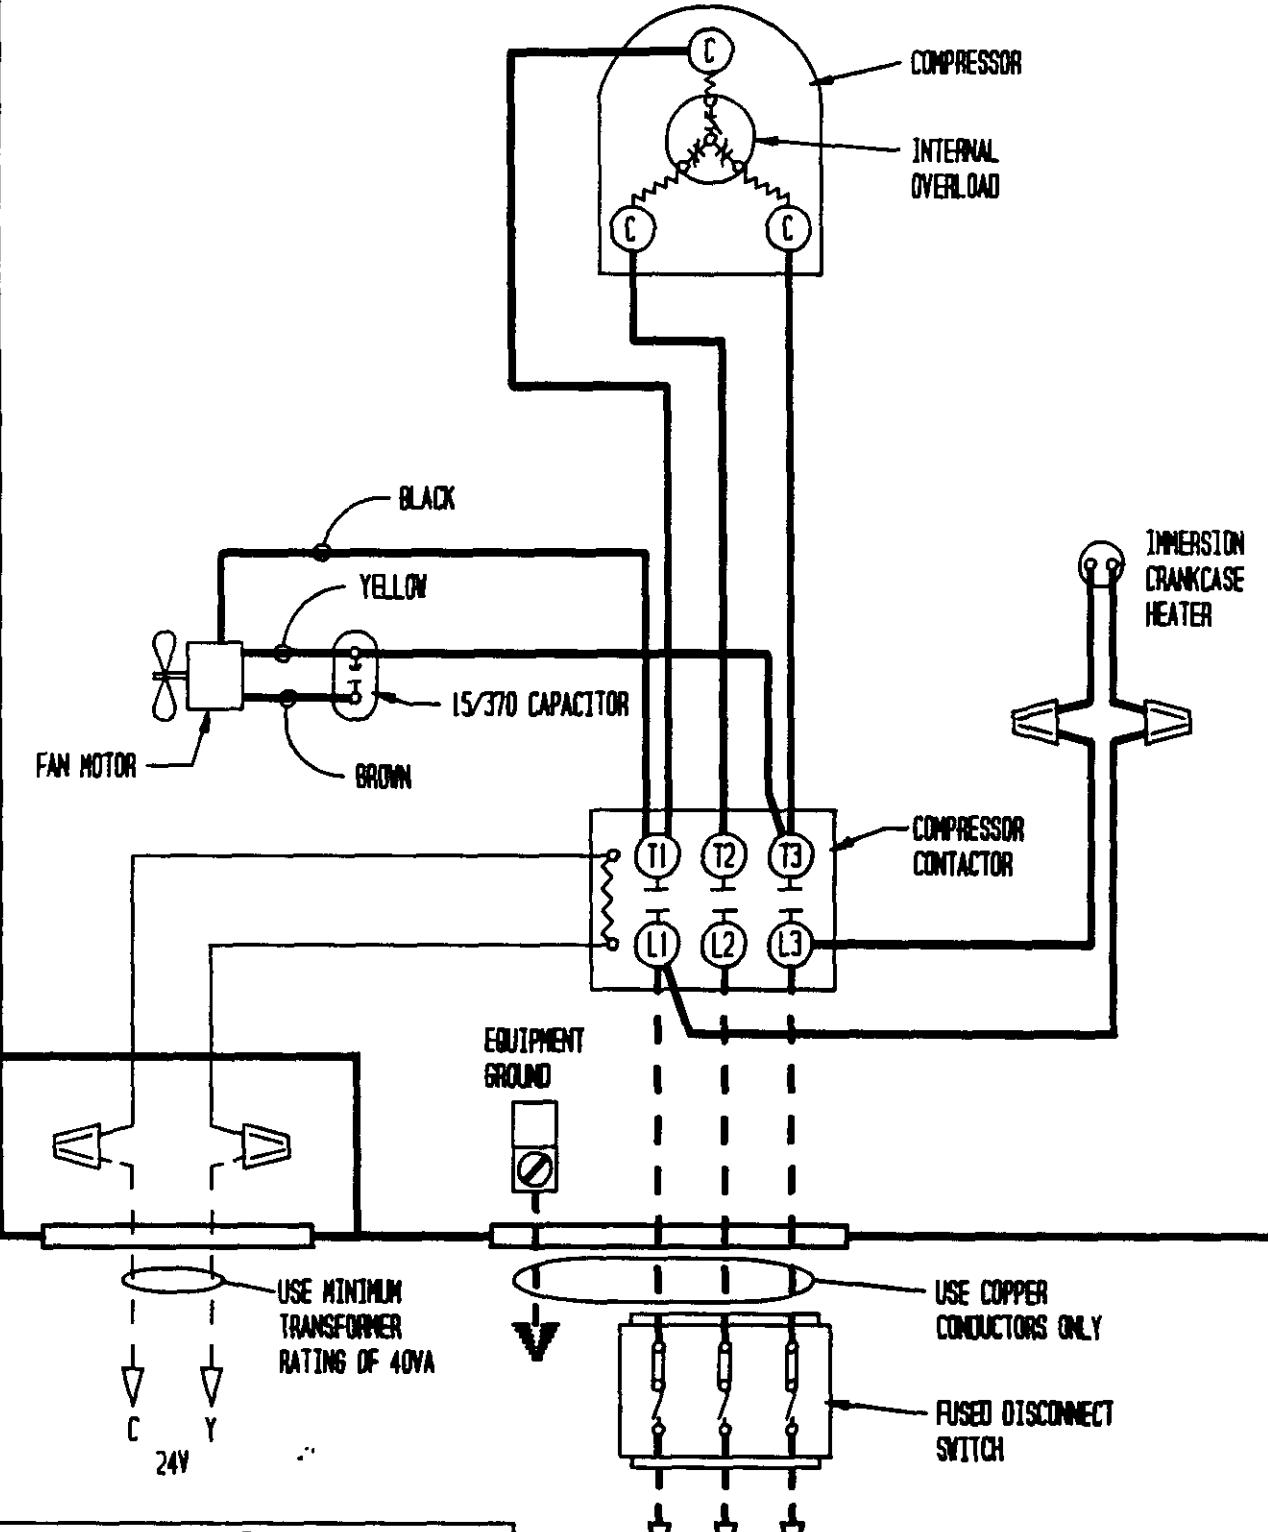

FACTORY WIRING	FIELD WIRING
Low Voltage	-----
High Voltage	-----

