

REPLACEMENT PARTS MANUAL

PACKAGED AIR CONDITIONER AND HEAT PUMP HEATER PACKAGES MODEL EH5PA

Manual 2110-302

Revision --

Date 8-11-89

Supersedes

* GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.
*A complete and current manual consists of pages dated as shown in the following index.


** INDEX **

<u>Page Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Functional Components--A series--Layout	1	8-11-89	
" " --Usage List	2	8-11-89	
Functional Components--B and C series--Layout	3	8-11-89	
" " --Usage List	4	8-11-89	

*** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

FUNCTIONAL COMPONENTS

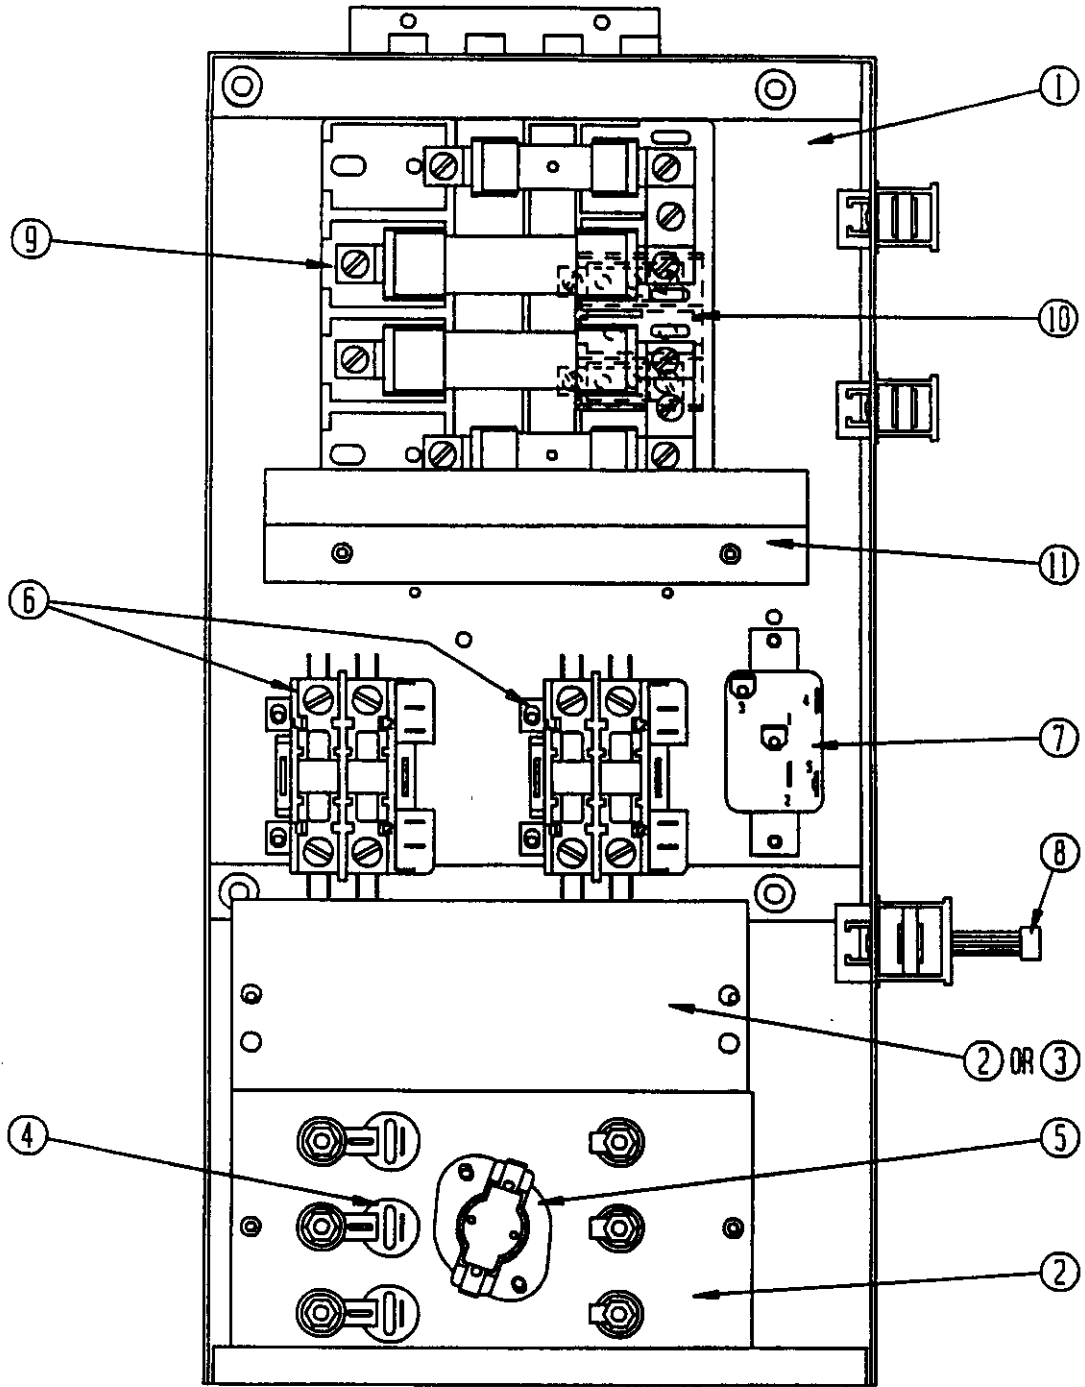


Date: 8-11-89
Supersedes:

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	E	E	E	E
			H	H	H	H
			5	5	5	5
			P	P	P	P
			A	A	A	A
			0	1	1	2
			5	0	5	0
1	117-077	Heater Box Assembly	X	X	X	X
2	8604-089	Heat Strip 5KW 240V	X			
2	8604-091	Heat Strip 10KW 240V		X		2
2	8604-047	Heat Strip 15KW 240V			X	
3	136-091	Fill Plate	X	X	X	
4	8402-025	Thermal Cutoff	1	2	3	4
5	8402-012	Limit Control	X	X	X	X
6	8401-006	Contacto	X	X	2	2
7	8201-008	Blower Relay	X	X	X	X
8	3000-904	Wire Assembly	X	X		
8	3000-903	Wire Assembly			X	X
9	8614-017	Fuse Block			X	
9	8614-018	Fuse Block				X
10	8607-013	Terminal Block	X	X		
11	134-052	Fusing Barrier			X	X
	132-034	Control Panel Cover (not shown)	X	X	X	X
THE FOLLOWING PARTS CONTAINED IN THE PLASTIC BAG						
	8607-013	Terminal Block	X	X	X	X
	8611-006	Ground Terminal	X	X	X	X
	4068-110	Wiring Diagram	X			
	4068-120	Wiring Diagram		X		
	4068-130	Wiring Diagram			X	
	4068-140	Wiring Diagram				X

Date: 8-11-89
Supersedes:

FUNCTIONAL COMPONENTS

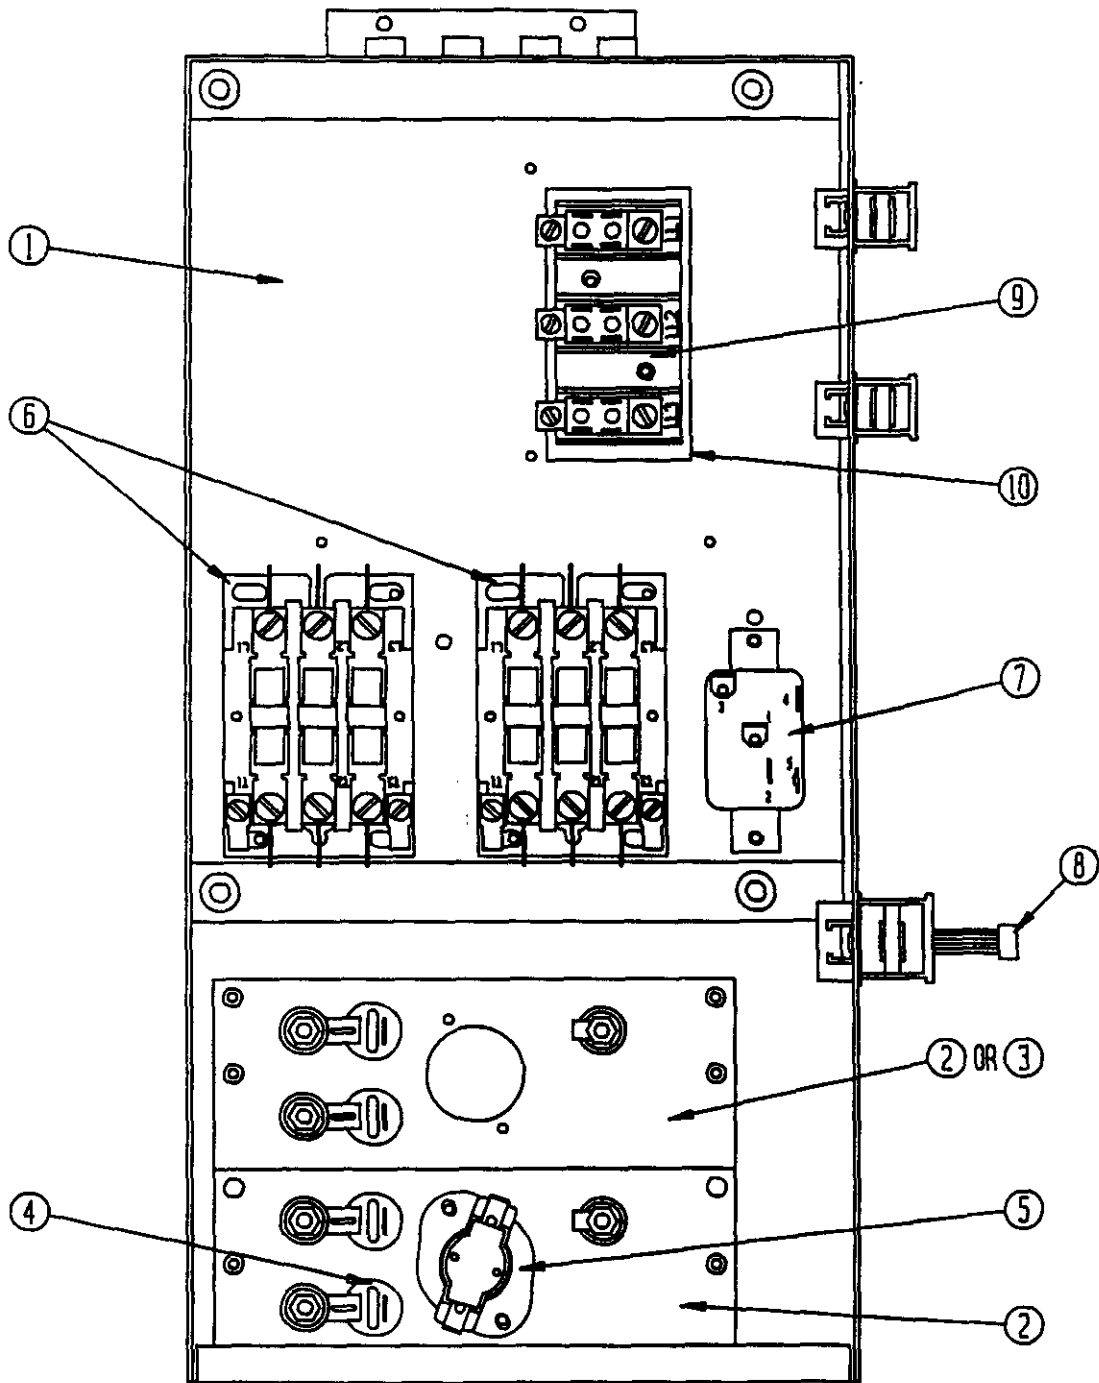

Date: 8-11-89
Supersedes:

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	E	E	E	E	E	E	E	E
			H	H	H	H	H	H	H	H
			5	5	5	5	5	5	5	5
			P	P	P	P	P	P	P	P
			A	A	A	A	A	A	A	A
			B	B	B	B	C	C	C	C
			0	1	1	1	0	1	1	1
			9	2	5	8	9	2	5	8
1	117-077	Heater Box Assembly	X	X	X	X	X	X	X	X
2	8604-048	Heat Strip 9KW 240V	X			2				
2	8604-046	Heat Strip 12KW 240V		X						
2	8604-047	Heat Strip 15KW 240V			X					
2	8604-072	Heat Strip 9KW 480V					X			2
2	8604-051	Heat Strip 12KW 480V						X		
2	8604-052	Heat Strip 15KW 480V							X	
3	136-091	Fill Plate	X	X	X		X	X	X	
4	8402-025	Thermal Cutoff	2	3	3	4	2	3	3	4
5	8402-012	Limit Control	X	X	X	X	X	X	X	X
6	8401-006	Contacto	X	2	2	2				
6	8401-002	Contacto					X	X	X	2
7	8201-008	Blower Relay	X	X	X	X	X	X	X	X
8	3000-904	Wire Assembly	X				X	X	X	
8	3000-903	Wire Assembly		X	X	X				X
9	8607-014	Terminal Block	X	X	X	X	X	X	X	X
10	8607-015	Phenolic Insulator					X	X	X	X
	132-034	Control Panel Cover (not shown)	X	X	X	X	X	X	X	X
THE FOLLOWING PARTS CONTAINED IN THE PLASTIC BAG										
	8607-014	Terminal Block	X	X	X	X	X	X	X	X
	8611-006	Ground Terminal	X	X	X	X	X	X	X	X
	8607-015	Phenolic Insulator					X	X	X	X
	4068-210	Wiring Diagram	X							
	4068-220	Wiring Diagram		X	X					
	4068-230	Wiring Diagram				X				
	4068-310	Wiring Diagram					X			
	4068-320	Wiring Diagram						X	X	
	4068-330	Wiring Diagram								X

Date: 8-11-89
Supersedes:

