REPLACEMENT PARTS MANUAL

HIGH ECONOMY GAS FIRED FURNACES MDDELS IH60D36B, IH85D48B, IH115D48B

Manual 2110-853

£

Revision C Date 3-22-91

Supersedes 5-04-90

***** * GENERAL NOTES * *****

*Revised and/or additional pages may be issued from time to time.

***** ** INDEX *****


Page Description	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Cabinet ComponentsExploded View	1	3-22-91	Z-19-90
n IIUsage List	2	3-22-91	5-04-90
Functional ComponentsExploded View	3	Z-19-90	9-21-89
A IIUsage List	4	Z-19-90	9-21-89

***** *** IMPORTANT *** *****

Contact the Installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BRYAN, OHIO 43506

^{*}A complete and current manual consists of pages dated as shown in the following index.

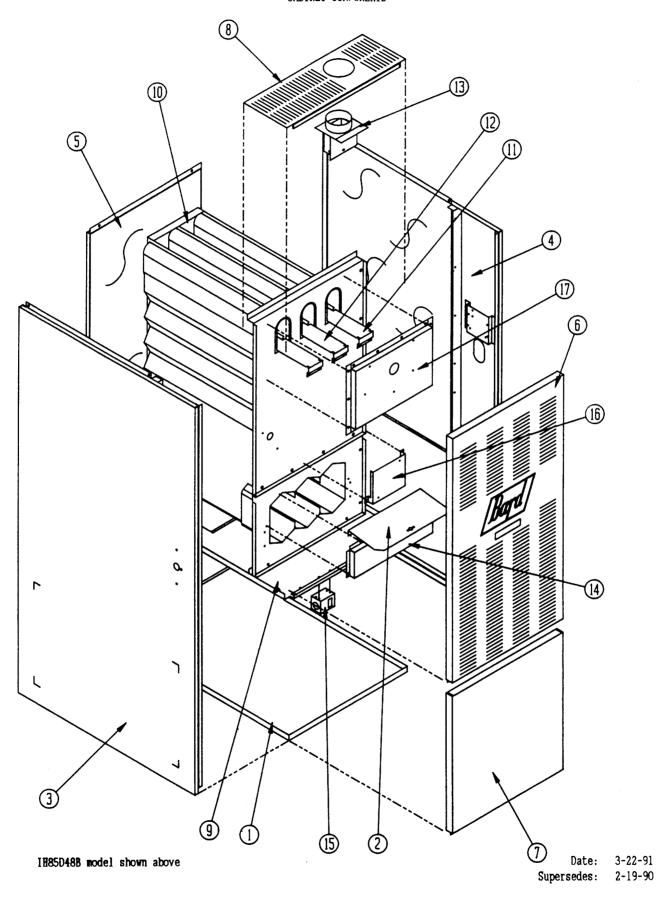

2110-853


Page: 1

CABINET COMPONENTS

Dwg. Part No. Description O S S S S S S S S S						
Dwg		1		I	I	I
Dwg. Part No. Description Descriptio]		H	Ħ	H
No.		}		6	8	1
No.	Dear	Part No	Description	0	5	1
1 127-188	- 1	ruro no.	50001 - F01001	מ	ח	5
1 127-188	140.	İ		-		Ď
1 127-188 Lower Base Assembly				_		
1 127-188						- 1
1 127-188				D	D	- 1
1 127-189 Lower Base Assembly						
1	- 1	1	•	Х		
2	· ·]		•		Х	
2		127-190				Х
2	2	140-159	Switch Support	Х		
3 501-057 Left Side Assembly	2	140-160	Switch Support		Х	
3 501-057 Left Side Assembly	2	140-161	Switch Support			х
4 501-067 Right Side Assembly				Х	X	Х
S 508-017 Back Assembly				Х	Х	Х
S 508-018 Back Assembly S 508-019 Burner Door S S 508-030 Burner Door S S 508-030 Blower Door S S 508-030 Blower Door S S 508-040 Top Fill						
5 508-019 Back Assembly		1			×	
6			<u>-</u>		**	х
6				,		^
6				^ :		
7	_				X	
7						X
7		1		X		
8 106-040 Top Fill x 8 106-041 Top Fill x 9 127-118 Blower Base x 9 127-119 Blower Base x 9 127-120 Blower Base x 10 171-175 Heat Exchanger Assembly x 10 171-138 Heat Exchanger Assembly x 10 171-144 Heat Exchanger Assembly x 11 168-002 Internal Flue Baffle Outside 2 3 12 168-013 Internal Flue Baffle Inside x x 13 913-0002 Flue Stack Assembly x x 14 168-003 Secondary Air Baffle x x 14 168-008 Secondary Air Baffle x x 15 112-031 Door Switch Bracket x x 16 112-099 Ignition Module Bracket x x 17 913-0005 Collector Box Assembly x					X	
8 106-041 Top Fill x 9 127-118 Blower Base x 9 127-119 Blower Base x 9 127-120 Blower Base x 10 171-175 Heat Exchanger Assembly x 10 171-138 Heat Exchanger Assembly x 10 171-144 Heat Exchanger Assembly x 11 168-002 Internal Flue Baffle Outside 2 3 12 168-013 Internal Flue Baffle Inside x x 13 913-0002 Flue Stack Assembly x x 14 168-003 Secondary Air Baffle x x 14 168-008 Secondary Air Baffle x x 15 112-031 Door Switch Bracket x x x 16 112-099 Ignition Module Bracket x x x 17 913-0005 Collector Box Assembly x x	7	152-043				X
8	8	106-040		X		
9 127-118 Blower Base x 9 127-120 Blower Base x 10 171-175 Heat Exchanger Assembly x 10 171-138 Heat Exchanger Assembly x 10 171-144 Heat Exchanger Assembly x 11 168-002 Internal Flue Baffle Outside 2 3 12 168-013 Internal Flue Baffle Inside x x 13 913-0002 Flue Stack Assembly x x 14 168-003 Secondary Air Baffle x x 14 168-008 Secondary Air Baffle x x 15 112-031 Door Switch Bracket x x 16 112-099 Ignition Module Bracket x x 17 913-0005 Collector Box Assembly x 17 913-0006 Collector Box Assembly x	8	106-041	Top Fill		Х	
9 127-119 Blower Base	8	106-042	Top Fill			X
9 127-120 Blower Base	9	127-118	Blower Base	х		
10	9	127-119	Blower Base	İ	х	
10	9	127-120	Blower Base	l		х
171-138 Heat Exchanger Assembly	10	171-175	Heat Exchanger Assembly	Х		
171-144 Heat Exchanger Assembly 2 3 3 3 12 168-002 Internal Flue Baffle Outside 2 3 3 3 12 168-013 Internal Flue Baffle Inside 3 3 913-0002 Flue Stack Assembly	10				x	
11						х
12 168-013 Internal Flue Baffle Inside // 13 913-0002 Flue Stack Assembly x x 13 913-0004 Flue Stack Assembly x x 14 168-003 Secondary Air Baffle x x 14 168-010 Secondary Air Baffle x x 15 112-031 Door Switch Bracket x x 16 112-099 Ignition Module Bracket x x 17 913-0005 Collector Box Assembly x 17 913-0006 Collector Box Assembly x				2	3	2
13 913-0002 Flue Stack Assembly				٦	Ť	2
13 913-0004 Flue Stack Assembly				¥	x	
14 168-003 Secondary Air Baffle x 14 168-008 Secondary Air Baffle x 14 168-010 Secondary Air Baffle x 15 112-031 Door Switch Bracket x x 16 112-099 Iqnition Module Bracket x x 17 913-0005 Collector Box Assembly x 17 913-0006 Collector Box Assembly x	1		•	 ^	"	x
14 168-008 Secondary Air Baffle x 14 168-010 Secondary Air Baffle x 15 112-031 Door Switch Bracket x x 16 112-099 Iqnition Module Bracket x x 17 913-0005 Collector Box Assembly x 17 913-0006 Collector Box Assembly x					_	 ^
14 168-010 Secondary Air Baffle 3 15 112-031 Door Switch Bracket X X 16 112-099 Iqnition Module Bracket X X 17 913-0005 Collector Box Assembly X 17 913-0006 Collector Box Assembly X			•	^		
15		1			X	
16				-	-	X
17						X
17 913-0006 Collector Box Assembly				X	X	X
· · · · · · · · · · · · · · · · · · ·				X		
	17	913-0006	Collector Box Assembly		X	
17 913-0007 Collector Box Assembly	17	913-0007	Collector Box Assembly			Х

Date: 3-22-91 Supersedes: 5-04-90

2110-853 Page: 2

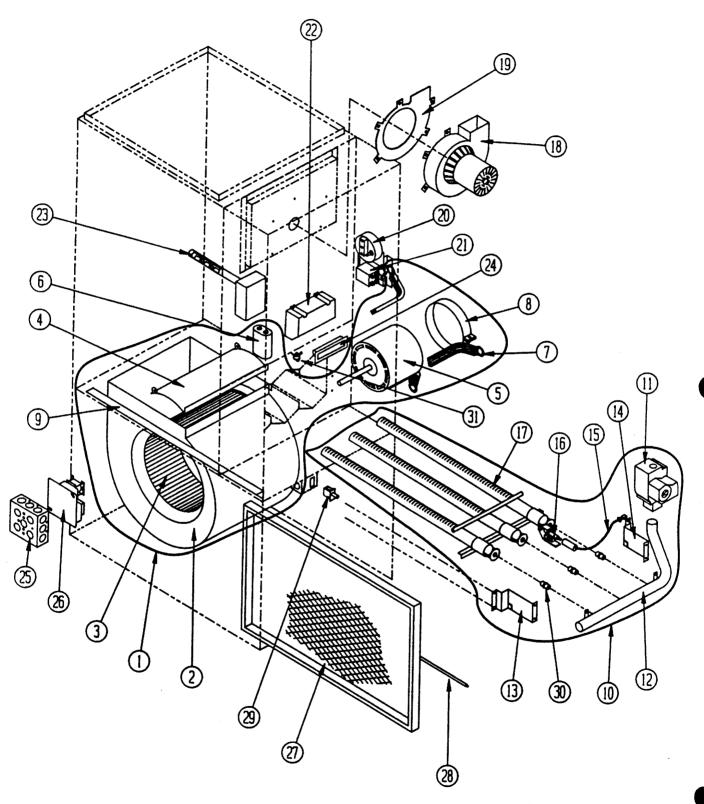

Date: 2-19-90 Supersedes: 9-21-89

> 2110-853 Page 3

FUNCTIONAL COMPONENTS

			I	I	I
			H	H	H
			6	8	1
Dwg.	Part No.	Description	0	5	1
No.			D	D	5
			3	4	D
			6	8	4
			В	В	8
					В
18	8109-001	Induced Draft Blower	Х	X	Х
19	1921-019	IDB Gasket	Х	Х	X
20	8406-021	Pressure Switch	Х	Х	Х
21	8201-048	DPST Relay 24V Coil	Х	Х	Х
22	5651-073	Ignition Module	Х	Х	Х
23	8402-042	Fan/Limit Control	Х	Х	Х
24	1171-025	Door Pull	Х	X	Х
25	8614-001	Junction Box	Х	X	Х
26	8201-006	Fan Center	Х	Х	Х
27	7003-004	16x25x1 Permanent Filter	Х	Х	X
28	5401-002	Filter Spring	Х	Х	Х
29	8406-013		Х	Х	Х
30	9010-010	Gas Orifice #38	2	3	4
31	8406-046	Flame Rollout Switch	Х	Х	Х
	4046-118	Wiring Diagram	Ж	X	Х

Date: 2-19-90 Supersedes: 9-21-89

2110-853

Page: 4