REPLACEMENT PARTS MANUAL

HIGH ECONOMY GAS FIRED FURNACES

MDDELS: IC60D36A, IC85D42D, IC115D48A

Manual 2110-854 Revision F Date 12-15-93 Supersedes 3-26-92

* GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.


Page Description	Page	<u>Date</u>	Supersedes		
	_	0.40.00	0.04.00		
Cabi net ComponentsExploded View	l	2-19-90	9-21-89		
II	2	3-26-92	2-19-90		
Functional ComponentsExploded View	3	3-26-92	2-19-90		
" Usage List	4	12-15-93	3-26-92		

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

^{*}A complete and current manual consists of pages dated as shown in the following index.

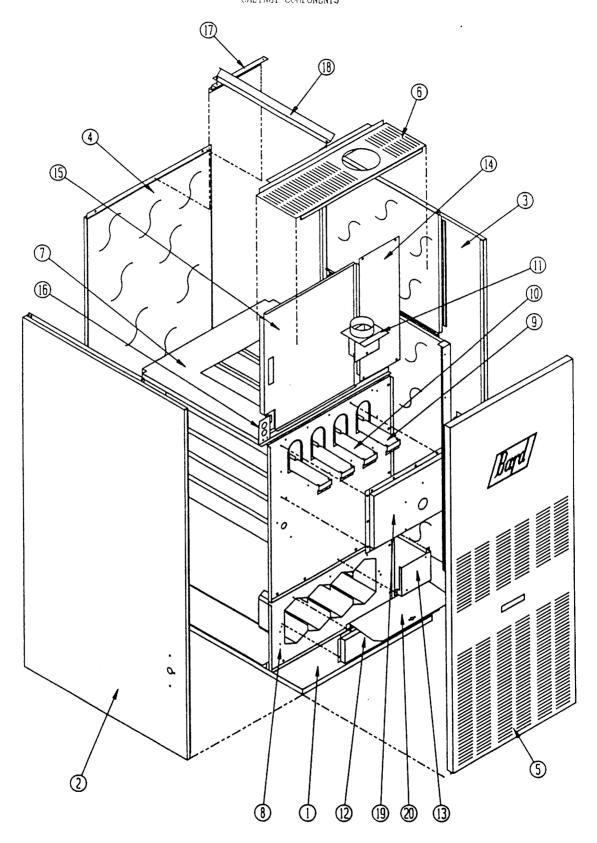

IC115D48A model shown above

Date: 2-19-90

Supersedes: 9-21-89

2110-854 Page 1


CABINET COMPONENTS

			C	I C	I
			6	8	1
Dwg.	Part No.	Domanintion	0	5	1
No.	rait No.	Description	D	D	5
MO.			3	•	- 1
	l			4	D
			6	2	4
			A	D	8 A
1	127-039	Lower Base Assembly	Х		
1	127-041	Lower Base Assembly		X	
1	127-043	Lower Base Assembly	<u> </u>		X
2	501-126	Left Side Assembly	X	X	Х
3	501-125	Right Side Assembly	X	X	Х
4	508-017	Back Assembly	X		
4	508-018	Back Assembly	İ	Х	_
4	508-019	Back Assembly			Х
5	152-083	Burner Door	X		
5	152-086	Burner Door		Х	
5	152-088	Burner Door			X
6	107-074	Top Fill Assembly	X		
6	107-075	Top Fill Assembly		Х	
6	107-076	Top Fill Assembly			Х
7	126-038	Blower Base	Х		
7 7	126-040	Blower Base		Х	_
_	126-044	Blower Base	 		X
8	171-137	Heat Exchanger Assembly	Х		
1 1	171-141	Heat Exchanger Assembly		Х	
8	171-146	Heat Exchanger Assembly	-	-	X
+	168-002	Internal Flue Baffle Outside	2	3	2
10	168-013	Internal Flue Baffle Inside	<u> </u>	-	2
11	913-0002	Flue Stack Assembly	X		
11	913-0004			Х	X
12	168-003	Secondary Air Baffle	X		
12	168-008	Secondary Air Baffle		Х	
12	168-010	Secondary Air Baffle	 	 	X
13	112-099	Ignition Module Bracket	X	X	X
14	152-118	Right Filter Door	X	X	X
15	152-115	Left Filter Door	Х		
15	152-116	Left Filter Door	1	X	
15 16	152-117	Left Filter Door Door Switch Bracket	 -	 	X
17	112-028		X	X	X
+	130-062 130-023	Rear Filter Support	X	X	X
18		Filter Support	X	Х	X
19	913-0005	Collector Box Assembly Collector Box Assembly	X	,,	
	913-0006 913-0007	-		Х	
19 20		Collector Box Assembly	-	-	X
20	140-159 140-163	Switch Support	X	x	
20	140-163	Switch Support Switch Support		^	,
1 20	140-101	patren anhhore	<u> </u>	I	Х

Date: 3-26-92 Supersedes: 2-19-90

2110-854

Page: 2

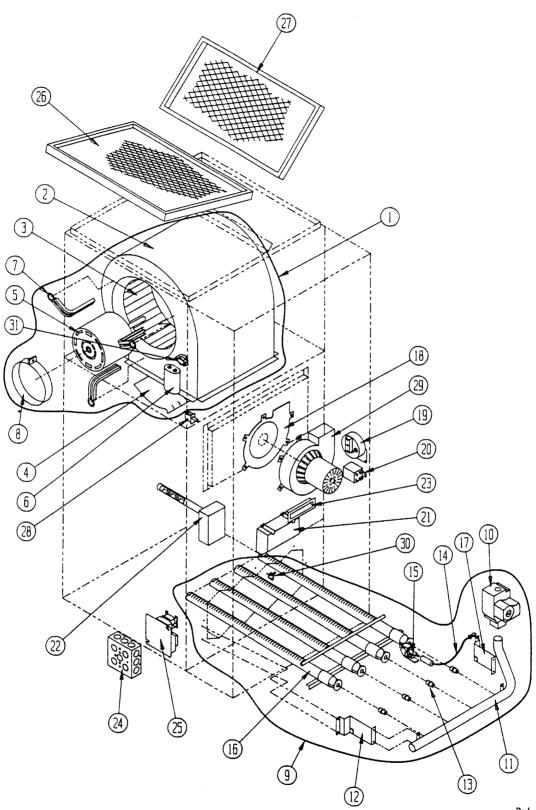

Date: 3-26-92

Supersedes: 2-19-90

2110-854

Page: 3

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	I C 6 0 D 3 6 A	I C 8 5 D 4 2	I C 1 1 5 D 4 8
					A
1	900-114	Blower Assembly	Х		
1	900-116	Blower Assembly		X	
1	900-118	Blower Assembly			Х
2	151-075	Blower Housing	Х		
2	151-076	Blower Housing		Х	
2	151-077	Blower Housing			Х
3	5152-010	Blower Wheel	X		
3	5152-014	Blower Wheel		Х	
3	5152-059	Blower Wheel			Х
4	144-125	Diffuser	Х		
4	144-128	Diffuser		X	
4	144-129	Diffuser			Х
5	8105-008	Motor	Х		
5	8105-009	Motor		X	
5	8106-018	Motor			X
6	8552-002	Capacitor	Х	X	
6	8552-004	Capacitor	-		Х
7	8200-036	Motor Mount Arm	3	_	
7	8200-034	Motor Mount Arm		3	3
8	8200-033	Motor Mount Band	Х	X	Х
9	901-0074	Burner Assembly	Х		
9	901-0050	Burner Assembly		X	.
9 10	901-0061	Burner Assembly		-	X
11	5651-062 5818-019	Gas Valve Burner Manifold	Х	X	Х
11	5818-020	Burner Manifold	X	.,	
11	5818-021	Burner Manifold		Х	
12		Left Manifold Bracket		-	X
13	112Y095 9010-010	Gas Orifice #38	2	3	X 4
14	8600-009	Ignition Cable	Х	X	X
15	8620-038	Pilot Burner Assembly		X	X
16	9010-036	Burner Venturi 2 Section	X		_
16	9010-036	Burner Venturi 3 Section	^	,	
16	9010-037	Burner Venturi 4 Section		X	ا ,, ا
1 6 1	2010_020	partier retirati a secrion	<u> </u>	l	X

·					
			I	Ī	I
			C	C	C
			6	8	1
Dwg.	Part No.	Description	0	5	1
No.			D	D	5
			3	4	D
			6	2	4
			A	D	8
11					A
18	1921-019	IDB Gasket	Х	Х	Х
19	8406-051	Pressure Switch	Х	Х	х
20	8201-048	DPST Relay24V	Х	X	Х
21	5651-093	Ignition Module	x	Х	Х
22	8620-083	Fan/Limit Control	х		
22	8620-082	Fan/Limit Control		Х	х
23	1171-025	Door Pull	Х	Х	Х
24	8614-001	Junction Box	Х	Х	Х
25	8201-006	2 Speed Fan Center	Х	Х	Х
26	7003-001	Permanent Filter 10x20x1		2	1
27	7003-003	Permanent Filter 15x20x1	1		1
28	8406-013	Door Switch	Х	Х	Х
29	8109-001	Induced Draft Blower	Х	X	Х
30	8406-038	Flame Rollout Switch	Х	Х	Х
31	8402-014	Upper Limit	Х	Х	Х
			1		
	4046- 119	Wiring Diagram	X	X	Х

Date: 12-15-93 Supersedes: 3-26-92

2110-854

Page: 4