REPLACEMENTPARTS MANUAL

EXTRA HIGH EFFICIENCY II CONDENSING GAS FURNACE CH--SERIES

Manual 2110-856 Revision G Date 10-28-91

Supersedes 9-23-91

***** * GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.

***** ** INDEX **

| Page Description | <u>Page</u> | Date | <u>Supersedes</u> |
|--|---------------|---------------------|-------------------------------|
| Cabinet ComponentsExploded View "Usage List | 1 2 | g-23-91 10-28-91 | 3-22-91 g-23-91 Z-19-90 |
| Functional ComponentsExploded View "Usage List | 3 4 | g-23-91 g-23-91 | Ž-19-90 8-30-91 |


****** *** IMPORTANT *** *****

Contact the installing and/or local Bard distributor $for\ all\ parts$ requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

^{*}A complete and current manual consists of pages dated as shown in the following index.

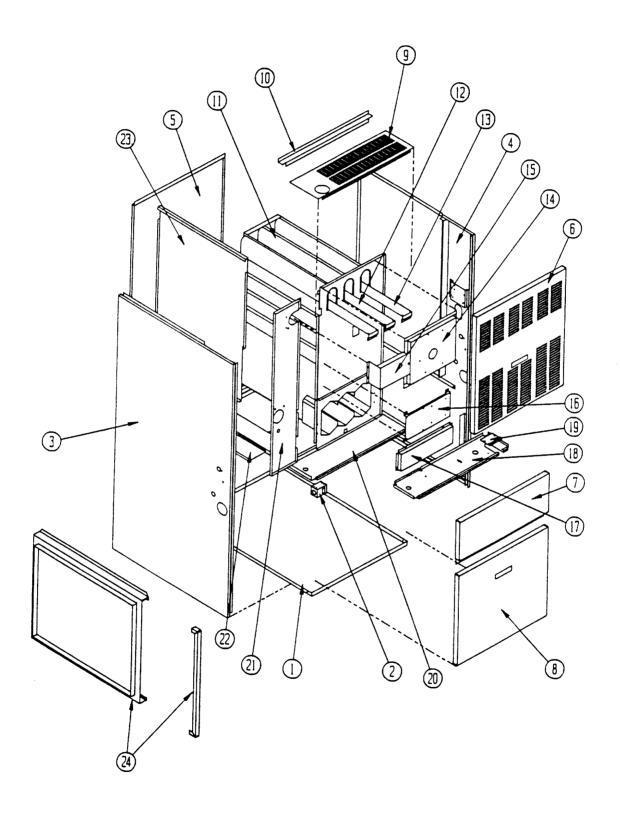

Date: 9-23-91 Supersedes: 3-22-91

2110-856

| | | C | C | C | |
|------|----------|------------------------------|--|--|--------|
| | | H | H | H | |
| | | | 0 | 0 | 1 |
| | | 6 | 8 | 0 | |
| Dwg. | · 1 | | 0 | 0 | 0 |
| No. | | | D | D | D |
| | | | 3 | 4 | 6 |
| | | | 6 | 8 | 0 |
| | | | В | В | В |
| 1 | 127-189 | Lower Base Spotweld Assembly | X | | |
| 1 | 127-190 | Lower Base Spotweld Assembly | | х | |
| 1 | 127-191 | Lower Base Spotweld Assembly | | | Х |
| 2 | 112-031 | Door Switch Bracket | X | Х | Х |
| 3 | 501-241 | Left Side Assembly | Х | Х | X |
| 4 | 501-240 | Right Side Assembly | Х | Х | х |
| 5 | 508-018 | Back Assembly | Х | | |
| 5 | 508-019 | Back Assembly | | Х | |
| 5 | 508-073 | Back Assembly | | | Х |
| 6 | 152-148 | Vestibule Door | Х | | |
| 6 | 152-149 | Vestibule Door | | Х | |
| 6 | 152-150 | Vestibule Door | | | х |
| 7 | 152-145 | Burner Door | Х | | |
| 7 | 152-146 | Burner Door | | х | |
| 7 | 152-147 | Burner Door | | | x |
| 8 | 152-151 | Blower Door | Х | | |
| 8 | 152-152 | Blower Door | Ì | Х | |
| 8 | 152-153 | Blower Door | | | х |
| 9 | 106-111 | Top Fill | Х | | |
| 9 | 106-112 | Top Fill | | Х | |
| 9 | 106-113 | Top Fill | | - | x |
| 10 | 140-134 | Plenum Support | Х | | |
| 10 | 140-135 | Plenum Support | " | x | |
| 10 | 140-136 | Plenum Support | | " | x |
| 11 | 171-158 | Heat Exchanger Assembly | × | \vdash | \Box |
| 11 | 171-159 | Heat Exchanger Assembly | " | x | |
| 11 | 171-160 | Heat Exchanger Assembly | | " | Х |
| 12 | 168-013 | Flue BaffleShort | | Х | Х |
| 13 | 168-002 | Flue Baffle | X | X | Х |
| 14 | 913-0039 | Flue Collector Box Assembly | X | ⇈ | 1 |
| 14 | 913-0036 | Flue Collector Box Assembly | ^ | × | |
| 14 | 913-0030 | Flue Collector Box Assembly | | ^ | x |
| 15 | 169-034 | IDB Transition | Х | | 1 |
| 15 | 169-035 | IDB Transition Assembly | ^ | x | |
| 15 | 169-035 | IDB Transition Assembly | | ^ | Х |
| *16 | 112-088 | Ignition Module Bracket | Х | + | ^ |
| | 1 | 1 1 | ^ | , | |
| *16 | 112-100 | Control Mounting Bracket | - | X | X |
| 17 | 168-003 | Secondary Air Baffle | X | | 1 |
| 17 | 168-008 | Secondary Air Baffle | | X | |
| 17 | 168-010 | Secondard Air Baffle | | | ↓ X |

| | 100 102 | Hanifold Life Life |
|----|----------|---------------------------|
| 20 | 127-149 | Blower Base Weld Assembly |
| 20 | 127-120 | Blower Base Weld Assembly |
| 20 | 127-146 | Blower Base Weld Assembly |
| 21 | 520-119 | Coil Partition |
| 22 | 140-133 | Support Coil |
| 23 | 134-098 | Coil Shield |
| 23 | 134-099 | Coil Shield |
| 24 | 919-0002 | Filter Rack W/Door |
| 24 | 919-0003 | Filter Rack W/Door |
| , | 131-0 | 89 _094 |

Part No.

120-149

120-147

120-148

136-131

136-132

Dwg.

No.

18

18 18

19

19

*80,000 and 100,000 ignition module bracket shown.

Date: 10-28-91 Supersedes: 9-23-91

2110-856

 $C \mid C$

H H H

0 0 1 6 8 0

0 0 0

DDDD

3 4 6

6 8 0 B B B

X

Х

Х

X

X

X

x x x

x x x

x x

x x

Description


Burner Compartment Partition

Burner Compartment Partition

Manifold Fill Plate

Manifold Fill Plate

Burner Compartment Partition x

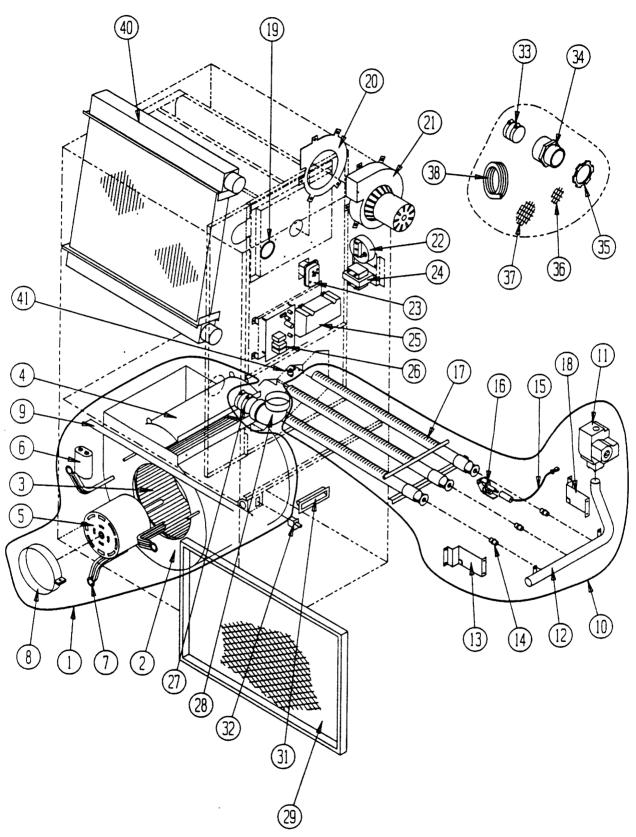

Date: 9-23-91 Supersedes: 2-19-90

2110-856

| | | | C H | C H | C H |
|--------|----------------------------------|------------------------------|--------|----------|--------|
| | | | 0 | 0 | 1 |
| | | | 6 | 8 | 0 |
| Dwg. | Part No. | Description | 0 | 0 | 0 |
| No. | | · | D | D | D |
| | | | 3 | 4 | 6 |
| | | | 6 | 8 | 0 |
| | | | В | В | В |
| 1 | 900-100 | Blower Assembly | X | | |
| 1 | 900-101 | Blower Assembly | | X | |
| 1 | 900-102 | Blower Assembly | | | Х |
| 2 | 151-085 | Blower Housing | X | | |
| 2 | 151-074 | Blower Housing | | Х | |
| 2 | 151-084 | Blower Housing | | | X |
| 3 | 5152-013 | Blower Wheel | X | | |
| 3 | 5152-059 | Blower Wheel | | X | |
| 3 | 5152-061 | Blower Wheel | | | X |
| 4 | 144-127 | Diffuser | X | | |
| 4 | 144-129 | Diffuser | | X | |
| 4 | 144-131 | Diffuser | | | X |
| 5 5 | 8105-008 | Motor | X | | |
| 5 | 8106-018 | Motor | | Х | |
| 6 | 8107-004 | Motor | | | Х |
| 6 | 8552-002 | Capacitor | X | | |
| 6 | 8552-004 | Capacitor | | X | _ |
| 7 | 8552-026 8200-034 | Capacitor Motor Mount Leg | | <u>.</u> | Х |
| 7 | 8200-03 1 8200-035 | Motor Mount Leg | Х | Х | |
| 8 | 8200-033 | Motor Mount Strap | v | | X |
| 9 | 104-796 | Blower Angle | X | X | X |
| 9 | 104-792 | Blower Angle | ٨ | x | x |
| 10 | 901-0083 | Burner Assembly | X | ^ | |
| 10 | 901-0082 | Burner Assembly | ٨ | Х | |
| 10 | 901-0084 | Burner Assembly | | ^ | х |
| 11 | 5651-062 | Gas Valve | х | Х | × |
| 12 | 5818-019 | Gas Manifold | X | <u> </u> | - n |
| 12 | 5818-020 | Gas Manifold | ., | x | |
| 12 | 5818-021 | Gas Manifold | | " | х |
| 13 | 1127095 | Left Manifold Bracket | Х | Х | X |
| 14 | 9010-010 | Gas Orifice Spud | Х | Ë | Ë |
| 14 | 9010-046 | Gas Orifice Spud | | Х | х |
| 15 | 8600-009 | Ignition Cable | Х | Х | Х |
| 16 | 8620-038 | Pilot Assembly | Х | Х | Х |
| 17 | 9010-036 | Burner Venturi | Х | | |
| 17 | 9010-037 | Burner Venturi | | х | |
| 17 | 9010-038 | Burner Venturi | | | Х |
| 18 | 112X095 | Right Manifold Bracket | Х | Х | Х |
| 19 | 1921-020 | Sili∝ne Die-Cut Gasket | Х | Х | Х |
| 20 | 1921-019 | IDB Gasket | Х | Х | Х |
| 21 | 8620-033 | Induced Draft Blwr Assy Kit | X | Х | Х |

| · | | | | | | |
|-------------|--------------------------------|---------------------------|---------------------------------|--------------------------------------|---------------------------------|---|
| Dwg. No. | Parts No. | Description | C H O 6 O D 3 | C H O 8 O D 4 8 | C H 1 O O D 6 | |
| | | | В | В | В | 1 |
| 22 | 8406-043 | Pressure Switch | X | | | ĺ |
| 22 | 8406-041 | Pressure Switch | | | Х | 1 |
| 22 | 8406-042 | Pressure Switch | | X | | 1 |
| 23 | 8620-032 | Limit Assembly | Х | X | Х | ĺ |
| 24 | 8407-039 | Transformer | Х | X | Х | ſ |
| 25 | 5651-073 | Ignition Module | Х | X | Х | ſ |
| 26 | 8201-053 | Blower Control | Х | Х | Х | ſ |
| 27 | 6093-007 | "No Hub" Connector | Х | Х | Х | J |
| 28 | 6095-005 | 90 Degree Street Elbow | Х | X | Х | J |
| 29 | 7003-004 | 16x25x1 Permanent | Х | Х | Х | J |
| 31 | 1171-025 | Door Pull | Х | Х | Х | J |
| 32 | 8406-013 | Door Switch | Х | Х | Х | I |
| 33 | 6093-008 | "No Hub" Connector | Х | Х | Х | ſ |
| 34 | 6093-006 | 2" Male Adapter | Х | Х | Х | |
| 35 | 8611-063 | 2" Conduit Lock Nut | Х | Х | Х | ſ |
| 36 | 7002-009 | 2" Bird Screen | Х | Х | Х | I |
| 37 | 7002-008 | 3" Bird Screen | Х | Х | Х | J |
| 38 | 5452-005-6000 Vinyl Drain Hose | | Х | Х | Х | J |
| *39 | 8620-031 | Condensate Neutralizer | Х | Х | Х | J |
| 40 | 5055-001 | Coil Assembly | Х | Х | Х | I |
| 41 | 8406-037 | Flame Rollout Switch | Х | Х | Х | I |
| | 4046-108 | Wiring Diagram | Х | Х | Х | I |
| | 8620-040 | Pilot Gas Tube W/Fittings | X | Х | Х | |

^{*}Not pictured.

Date: 9-23-91 Supersedes: 8-30-91

2110-856