REPLACEMENT PARTS MANUAL

EXTRA HIGH EFFICIENCY II CONDENSING 6AS FURNACE CH--SERIES

Manual 2110-856

Revision -- Date 7-26-89

Supersedes

****** * GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.

INDEX *****

Page Description	<u>Page</u>	Date	<u>Supersedes</u>
Cabinet ComponentsExploded View Usage Lf st	1	7-26-89	
"Usage Lf st	2	7-26-89	
Functional ComponentsExploded View	3	7-26-89	
"Usage List	4	7-26-89	


***** *** IMPORTANT *** *****

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

^{*}A complete and current manual consists of pages dated as shown in the following index.

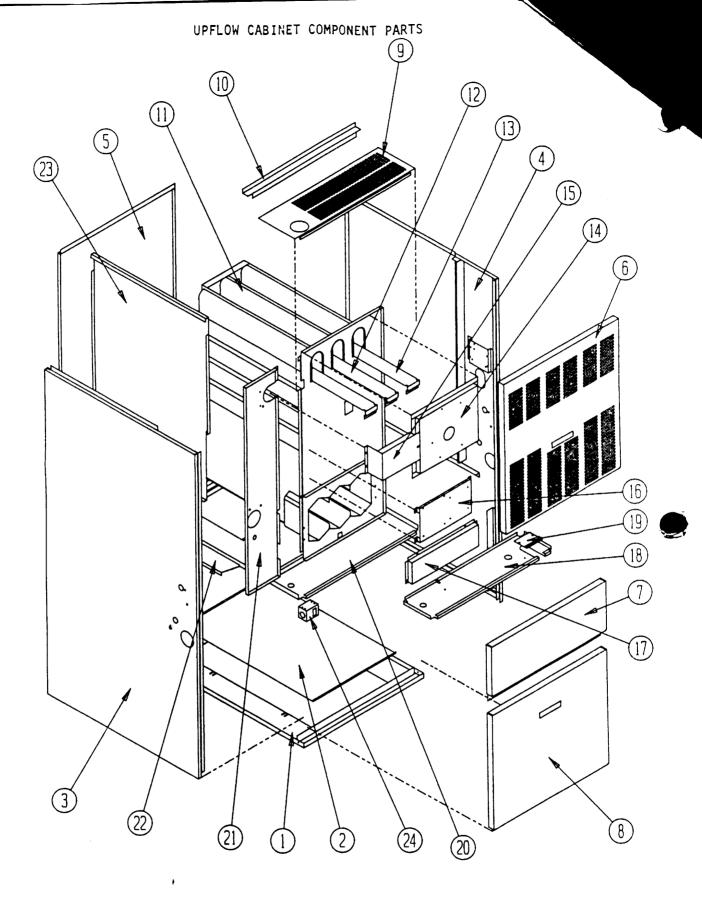

Date: 7-26-89

Supersedes:

2110-856 Page 1

J				C	C	C	
				H	H	H	
				0	0	1	
	l _			6	8	0	
	Dwg.	Part No.	Description	0	0	0	
	No.			D	D	D	
	}			3	4	6	
			}	6	8	0	
	<u> </u>			B	B	<u> </u>	
	1	127-125	Lower Base Spotweld Assembly			1	
	1	127-127	Lower Base Spotweld Assembly		Х		
	1	127-148	Lower Base Spotweld Assembly	↓_	 	X	_
	2	136-121	Bottom Fill Plate	X	X		
	2	136-133	Bottom Fill Plate	-	╀	X	_
	3	501-182	Left Side Assembly	X	X	X	-
	4	501-181	Right Side Assembly	X	X	X	_
	5	508-018	Back Assembly	X			
	5	508-019	Back Assembly		X		
•	5	508-073	Back Assembly	 —	_	X	4
	6	152-148	Vestibule Door	Х			
	6 6	152-149	Vestibule Door		X		
	7	152-150	Vestibule Door			X	4
	7	152-145 152-146	Burner Door	X			
	7	1	Burner Door		X		I
1	8	152-147 152-151	Burner Door Blower Door		-	X	+
	8	152-151	Blower Door	Х	_		
	8	152-152	Blower Door		X		
1	9	106-111	Top Fill		-	X	+
ı	9	106-111	Top Fill	X	_	ĺ	
	9	106-112	Top Fill		X	_	l
1	10	140-134	Plenum Support			X	ł
	10	140-135	Plenum Support	X	,,	1	
	10	140-136	Plenum Support		X	X	
1	11	171-158	Heat Exchanger Assembly	X		<u> </u>	t
	11	171-159	Heat Exchanger Assembly	Λ	x		1
	11	171-160	Heat Exchanger Assembly		n	x	
1	12	168-013	Flue BaffleShort		Х	X	t
1	13	168-002	Flue Baffle	Х	X	X	t
1	14	168-031	Flue Collector Box	X		 	t
Ì	14	168-032	Flue Collector Box		X		
	14	168-033	Flue Collector Box		•	x	
1	15	913-0041	IDB Transition	Х		<u> </u>	t
	15	913-0038	IDB Transition Assembly		х		
	15	913-0044	IDB Transition Assembly			х	
T	*16	112-088	Ignition Module Bracket	х		\ <u>``</u>	t
	*16	112-089	Control Mounting Bracket		х	х	
T	17	168-003	Secondary Air Baffle	X			t
	17	168-008	Secondary Air Baffle		х		
l	17	168-010	Secondard Air Baffle			X	l
							_


				C	C	C	Ī
				H	H	H	ļ
				0	0	1	l
	1			6	8	0	
	Dwg.	Part No.	Description	0	0	0	l
	No.			D	D	D	
	Ì			3	4	6	l
				6	8	0	l
				В	В	В	l
	18	120-122	Burner Compartment Partition			Х	Ī
	18	120 -12 0	Burner Compartment Partition	Х			l
	18	120-121	Burner Compartment Partition		х		١
	19	136-131	Manifold Fill Plate	Х	Х		Ī
	19	136-132	Manifold Fill Plate			х	l
	20	127-149	Blower Base Weld Assembly	Х			İ
	20	127-120	Blower Base Weld Assembly		х		
	20	127-146	Blower Base Weld Assembly			x	
	21	120-119	Coil Partition	Х	Х	Х	ľ
4	22	140-133	Support Coil	Х	х	Х	Ī
	23	134-098	Coil Shield	Х	Х		ľ
	23	134-099	Coil Shield			х	
	24	112-031	Door Switch Bracket	Х	Х	Х	

\$80,000 and 100,000 ignition module bracket shown.

Date: 7-26-89

Supersedes:

2110-856 Page 2

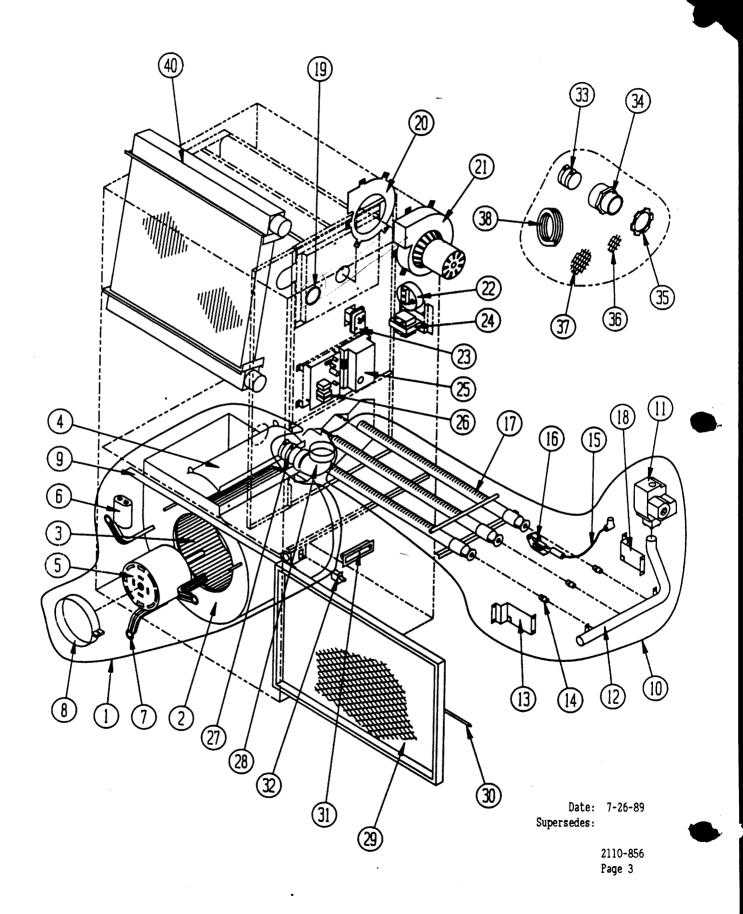

			C	C	C
			H	H	H
			0	0	1
			6	8	0
Dwg.	Part No.	Description	0	0	0
No.	1410	posseripore.	D	D	D
10.			3	4	6
			6	8	0
			В	В	В
 	200 000	Diame Assetting		D	B
1	900-088	Blower Assembly	Х		
1	900-094	Blower Assembly		Х	
1	900-089	Blower Assembly			Х
2	151-067	Blower Housing	X		
2	151-041	Blower Housing		Х	
2	151-066	Blower Housing		<u> </u>	X
3	5152-013	Blower Wheel	Х	ŀ	
3	5152-059	Blower Wheel		Х	
3	5152-061	Blower Wheel			Х
4	144-120	Diffuser	X		
4	144-088	Diffuser		Х	
4	144-117	Diffuser			Х
5	8105-008	Motor	Х		
5	8106-018	Motor		Х	
5	8107-004	Motor			х
6	8552-002	Capacitor	Х		
6	8552-004	Capacitor		х	
6	8552-026	Capacitor			х
7	8200-034	Motor Mount Leg	Х	Х	
7	8200-035	Motor Mount Leg			x
8	8200-033	Motor Mount Strap	Х	Х	Х
9	104-769	Blower Angle	X		
9	104-731	Blower Angle	"	х	Х
10	901-0083	Burner Assembly	Х	-	
10	901-0082	Burner Assembly	^	x	
10	901-0084	Burner Assembly		^	ا پا
11	5651-062	Gas Valve	v	-	X
12		Gas Manifold	X	Х	X
1 1	5818-019	=	X	_	
12	5818-020	Gas Manifold		X	
12	5818-021	Gas Manifold			X
13	1127095	Left Manifold Bracket	X	X	X
14	9010-010	Gas Orifice Spud	X		
14	9010-046	Gas Orifice Spud		X	X
15	8600-008	Ignition Cable	X	X	X
16	8554-009	Pilot Assembly	X	X	Х
17	9010-036	Burner Venturi	X		
17	9010-037	Burner Venturi		X	
17	9010-038	Burner Venturi			Х
18	112X095	Right Manifold Bracket	X	Х	Х
19	1921-020	Silicone Die-Cut Gasket	X	Х	Х
20	1921-019	IDB Gasket	X	X	X
21	8620-033	Induced Draft Blwr Assy Kit	X	Х	х

			C	C	C
			H	H	H
			0	0	1
			6	8	0
Dwg.	Parts No.	Description	0	0	0
No.			D	D	D
1			3	4	6
			6	8	0
<u></u>			В	В	В
22	8406-043	Pressure Switch	Х		
22	8406-041	Pressure Switch			X-
22	8406-042	Pressure Switch		Х	
23	8620-032	Limit Assembly	Х	Х	Х
24	8407-039	Transformer	Х	Х	Х
25	5651-060	Ignition Module	Х	Х	Х
26	8201-053	Blower Control	Х	Х	Х
27	6093-007	"No Hub" Connector	Х	Х	Х
28	6095-005	90 Degree Street Elbow	Х	Х	Х
29	7003-004	16x25x1 Permanent	Х	Х	Х
30	5 4 01-002	Filter Spring	Х	Х	Х
31	1171-025	Door Pull	Х	Х	Х
32	8 4 06-013	Door Switch	Х	Х	Х
33	6093-008	"No Hub" Connector	Х	Х	Х
34	6093-006	2" Male Adapter	Х	Х	Х
35	8611-063	2" Conduit Lock Nut	Х	Х	Х
36	7002-009	2" Bird Screen	Х	Х	Х
37	7002-008	3" Bird Screen	Х	Х	х
38	5452-005-0	5000 Vinyl Drain Hose	X	Х	Х
*39	8620-031	Condensate Neutralizer	Х	Х	Х
40	5055-001	Coil Assembly	Х	Х	Х

*Not pictured.

Date: 7-26-89 Supersedes: