

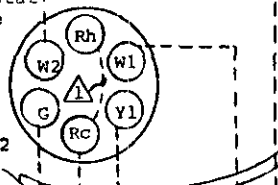


T872C1004 Thermostat
Q672A1005 Subbase

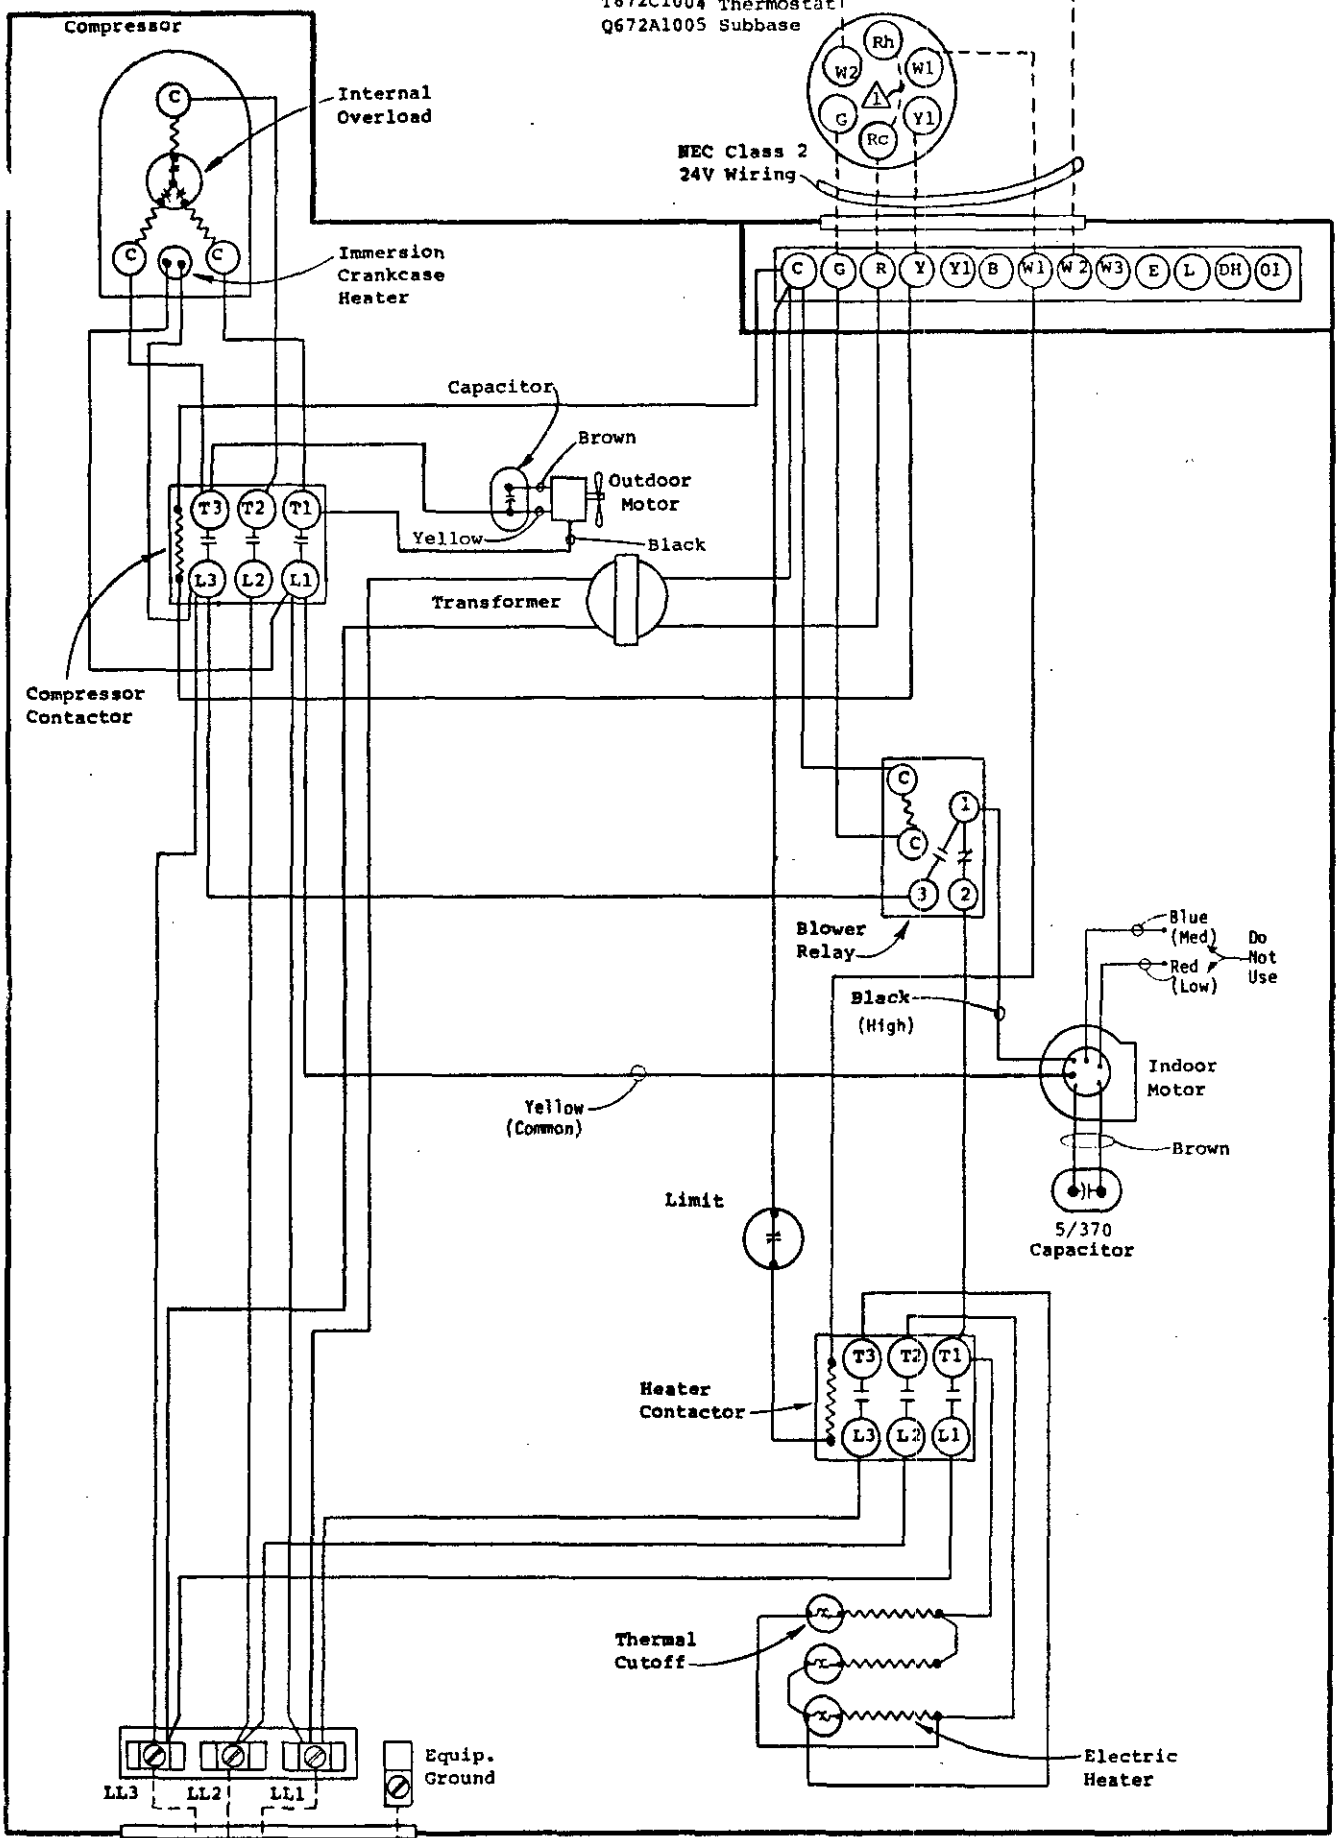


NEC Class 2
24V Wiring

24V
Terminal
Block



USE COPPER OR
ALUMINUM WIRE

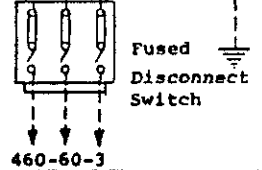

Factory Wiring ———
Field Wiring - - - -

▲ Add jumper Rc to Rh. Set heat
anticipators at .40A.

MODEL
P36A4
w/6,9,12,15kw

4001-321C