


T874C1000 Thermostat  
 Q674A1001 Subbase  
 or  
 T872C1004 Thermostat  
 Q672A1005 Subbase

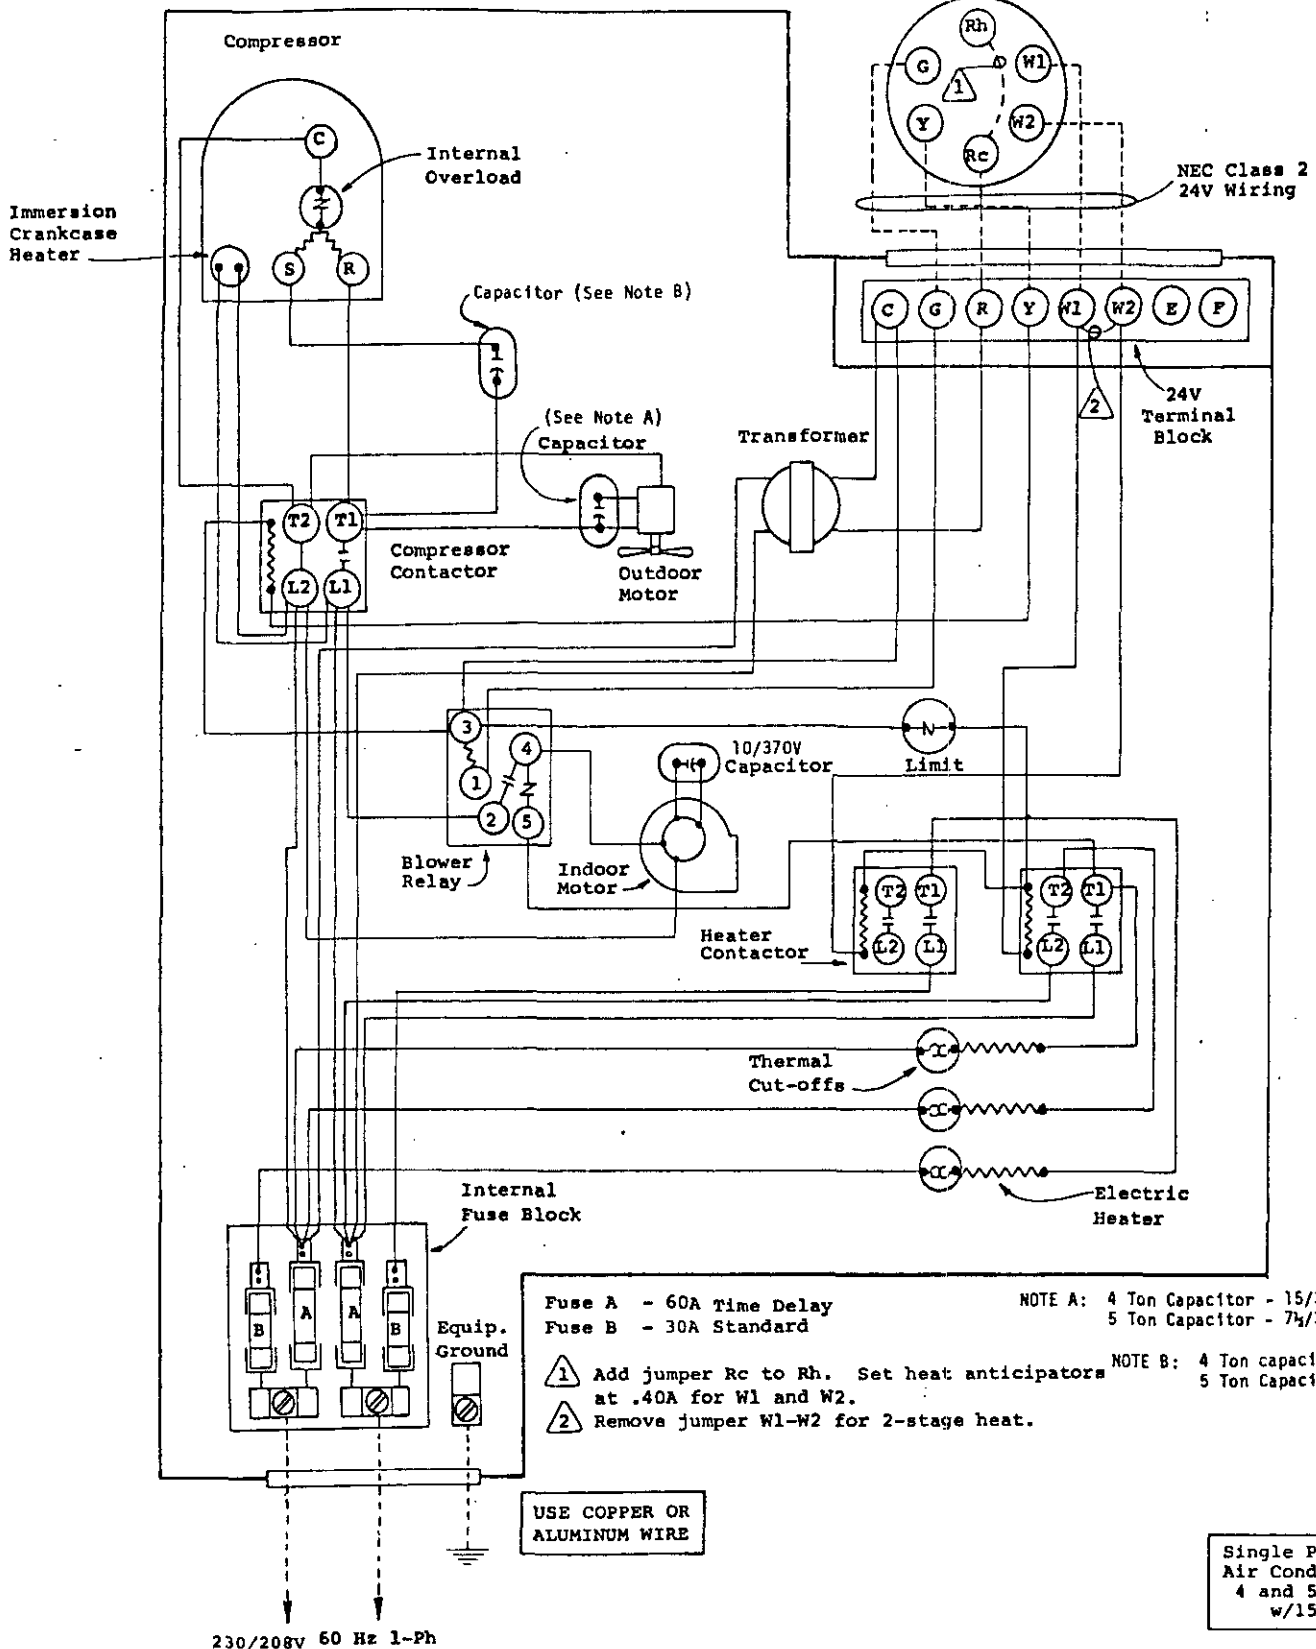

Fuse A - 60A Time Delay  
 Fuse B - 30A Standard

NOTE A: 4 Ton Capacitor - 15/370V  
 5 Ton Capacitor - 7 1/2/370V

- ⚠ Add jumper Rc to Rh. Set heat anticipators at .40A for W1 and W2.
- ⚠ Remove jumper W1-W2 for 2-stage heat.

NOTE B: 4 Ton capacitor - 40/440V  
 5 Ton Capacitor - 45/440V

USE COPPER OR ALUMINUM WIRE

Single Package  
 Air Conditioner  
 4 and 5 Ton  
 w/15Kw

230/208V 60 Hz 1-Ph

Factory Wiring ———  
 Field Wiring - - - -