


T874C1000 Thermostat
Q674A1001 Subbase

or

T872C1004 Thermostat
Q672A1005 Subbase 3

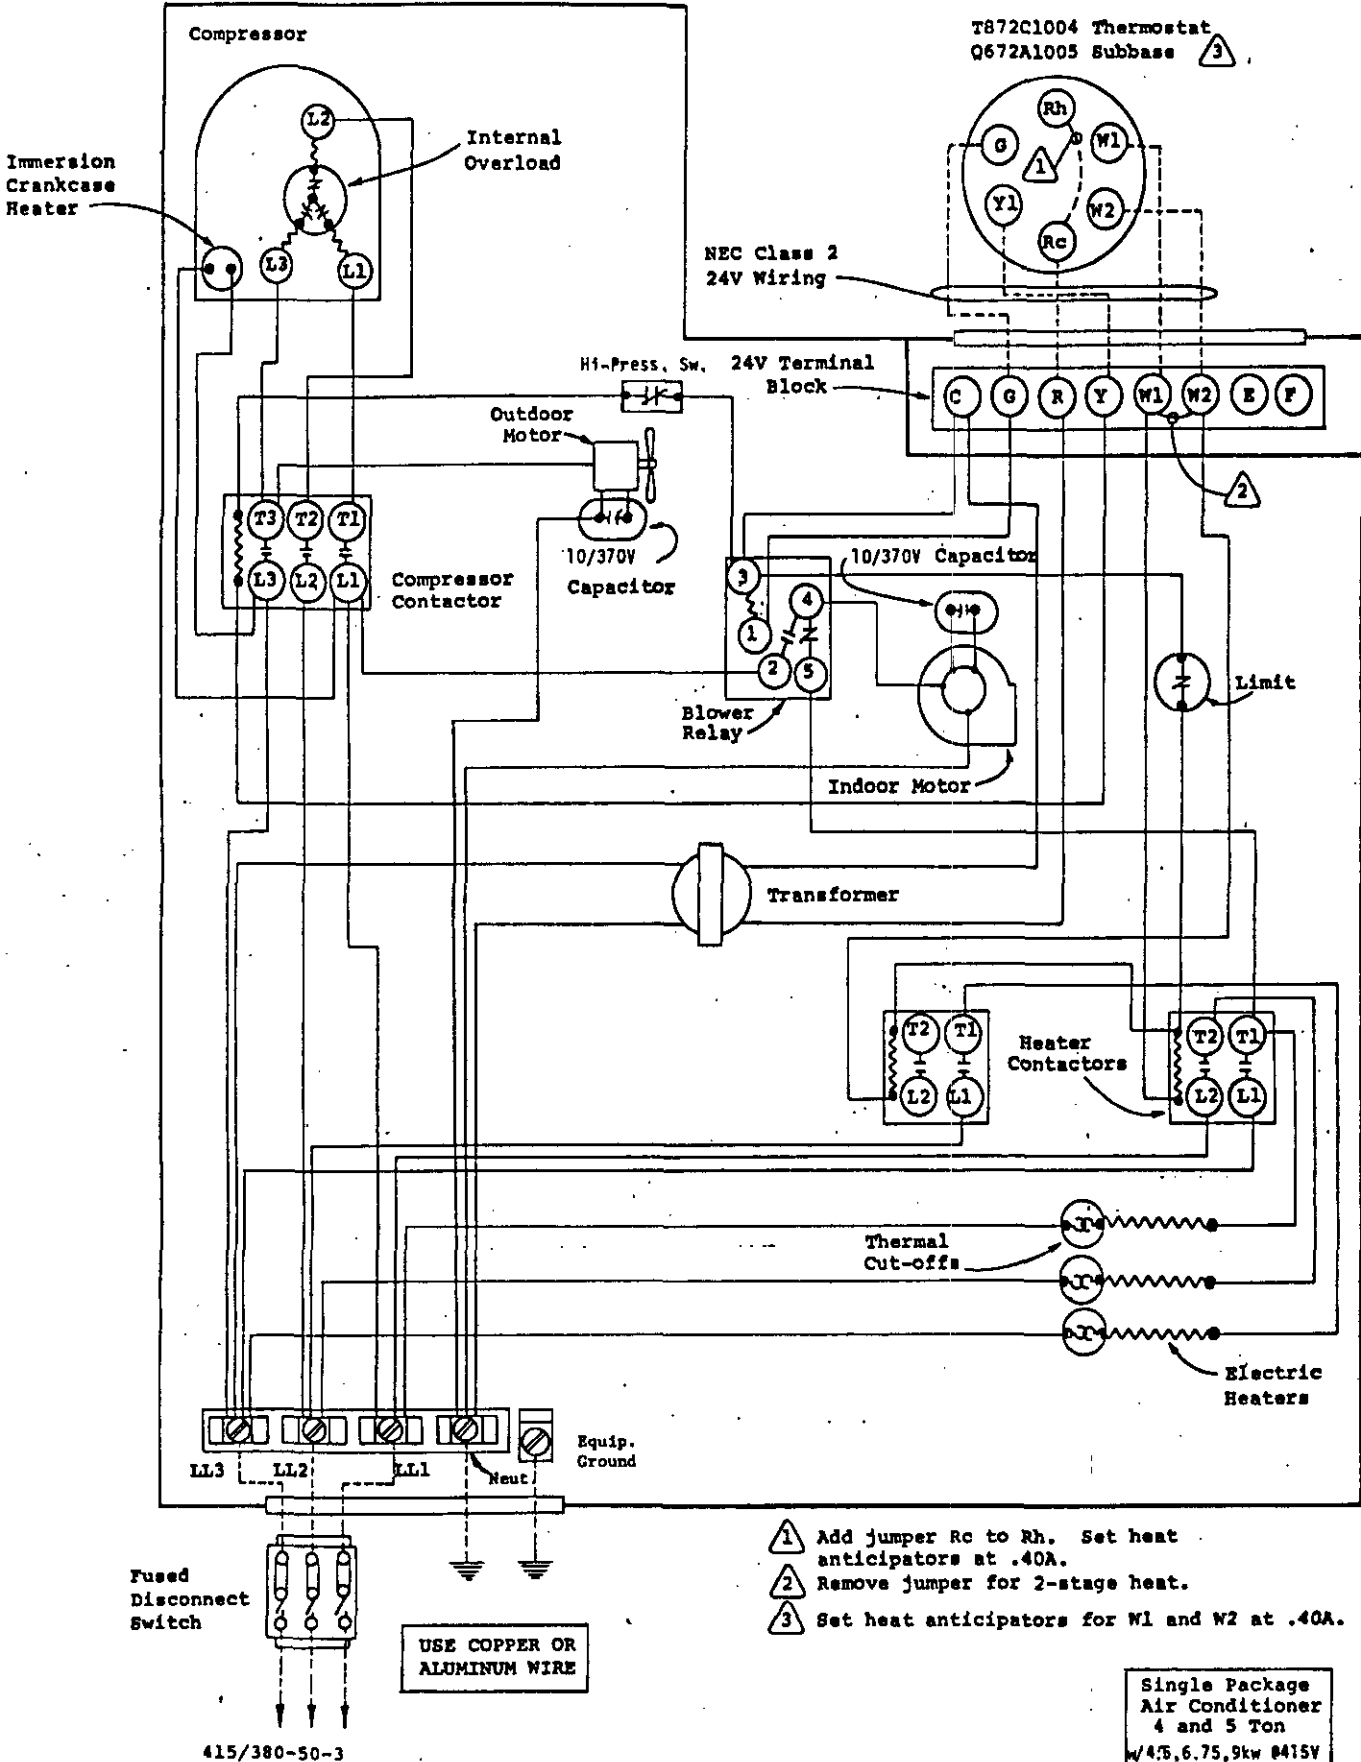

- 1 Add jumper Rc to Rh. Set heat anticipators at .40A.
- 2 Remove jumper for 2-stage heat.
- 3 Set heat anticipators for W1 and W2 at .40A.

Single Package
Air Conditioner
4 and 5 Ton
W/4.5, 6.75, 9kw B415V

Factory Wiring ———
Field Wiring - - - - -