


T872C1004 Thermostat
Q672F1026 Subbase

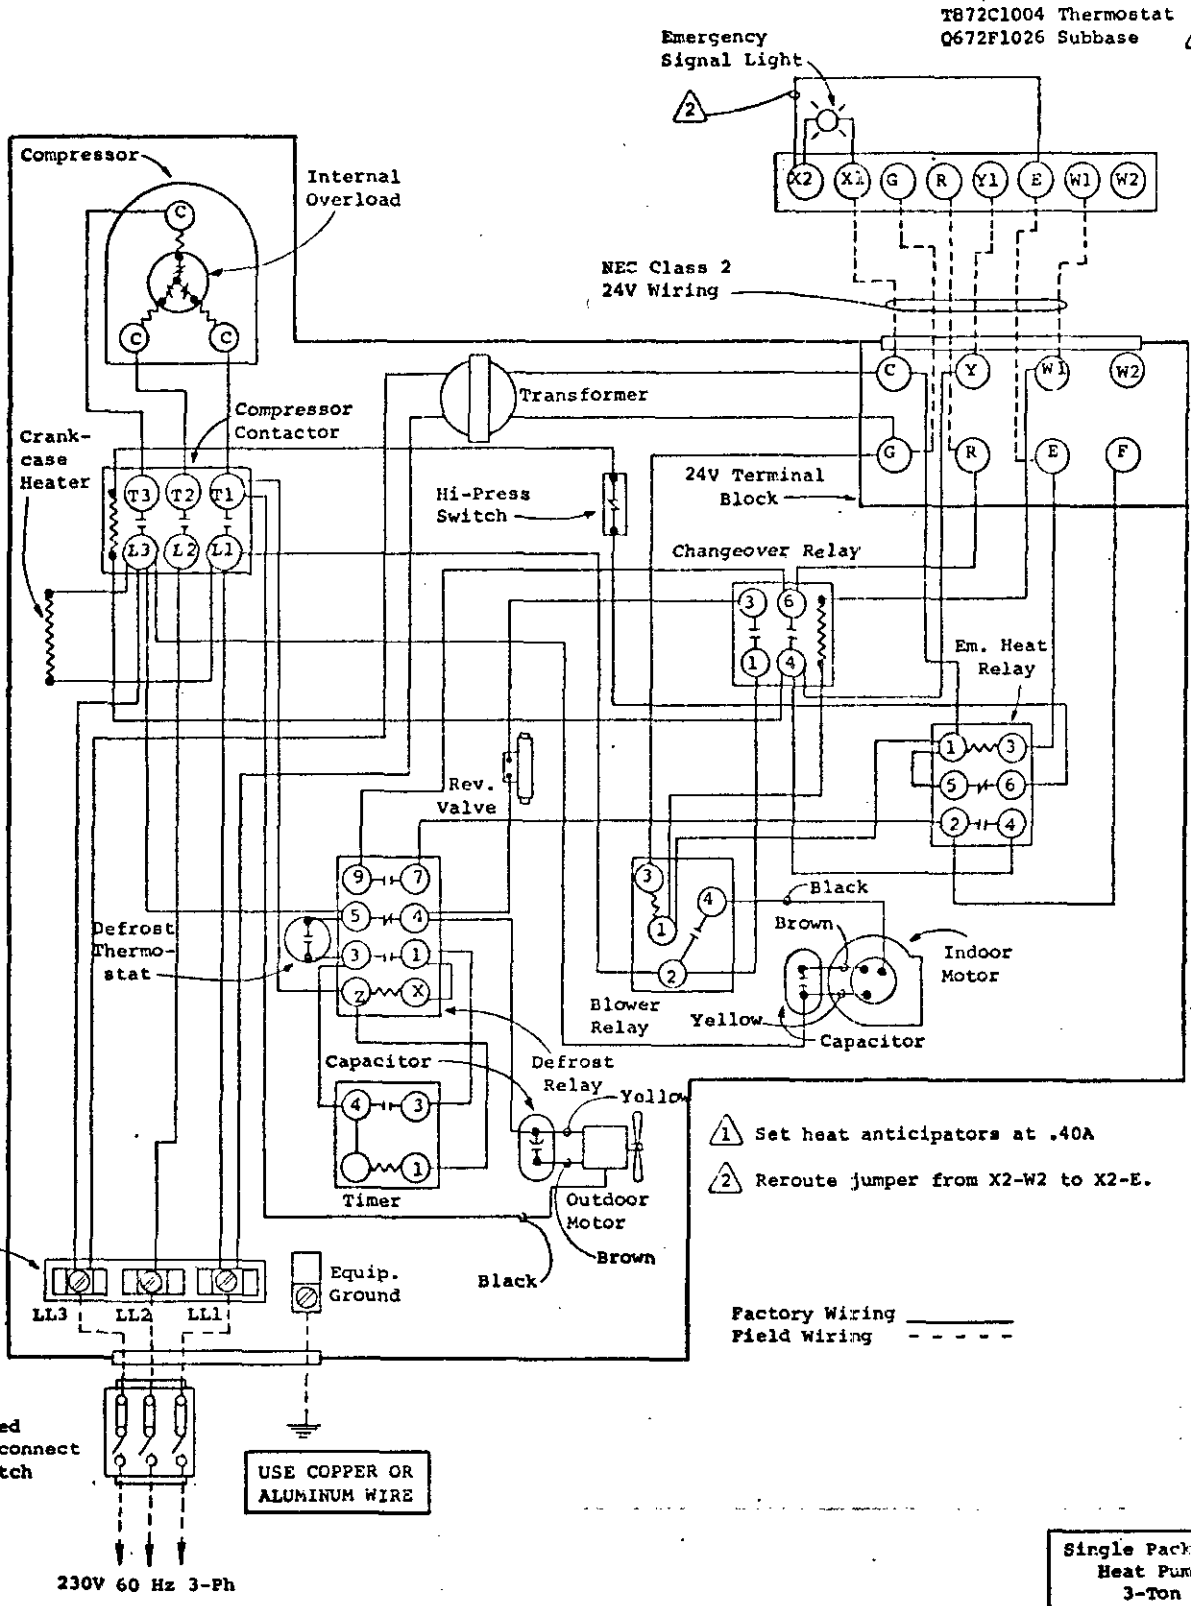

- 1 Set heat anticipators at .40A
- 2 Reroute jumper from X2-W2 to X2-E.

Factory Wiring _____
Field Wiring - - - - -

Single Package
Heat Pump
3-Ton