

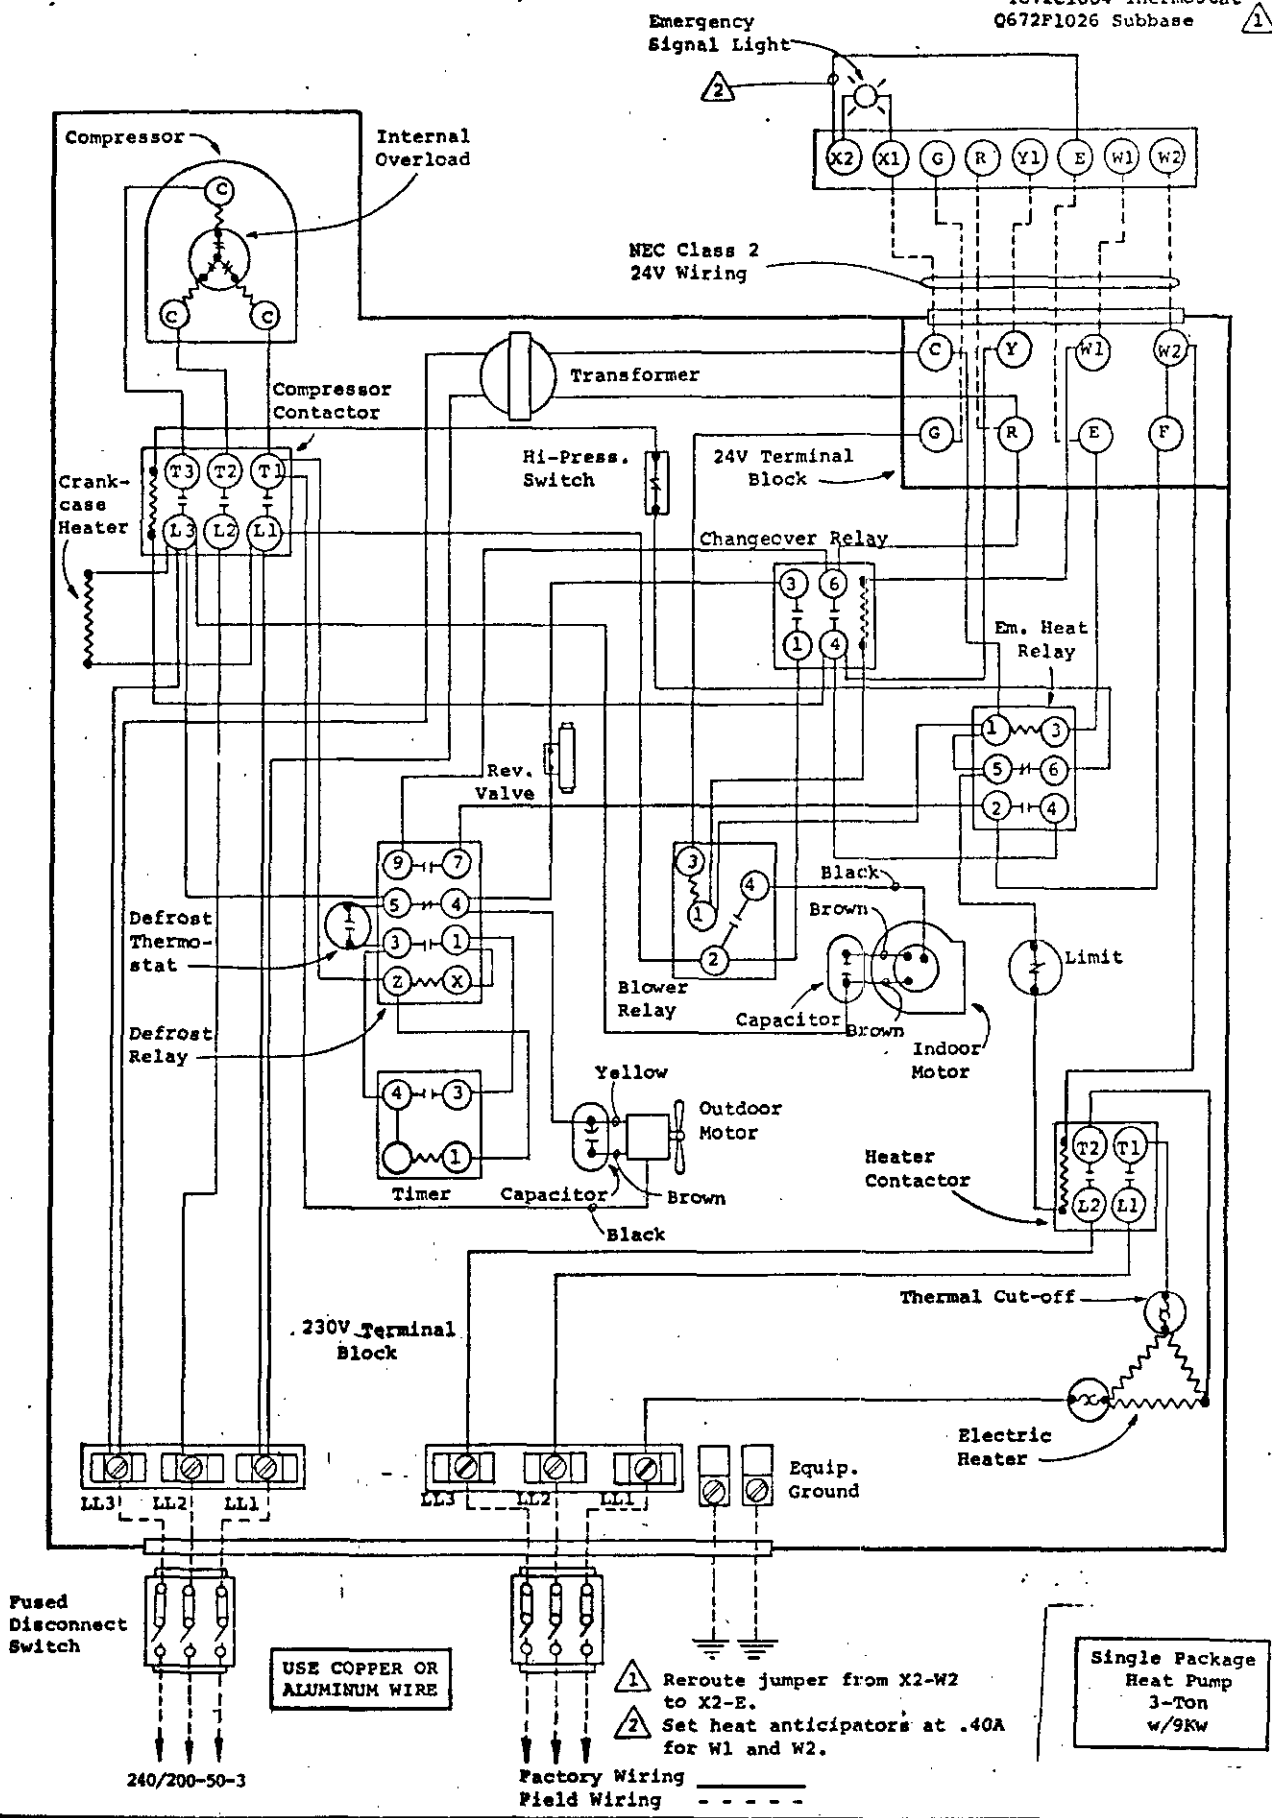
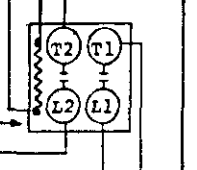
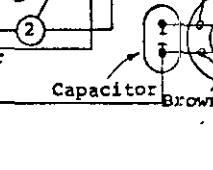
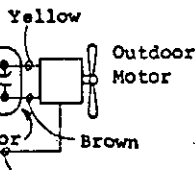
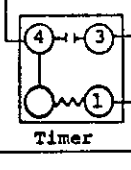
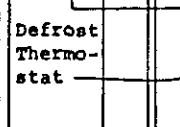


T872C1004 Thermostat
Q672F1026 Subbase

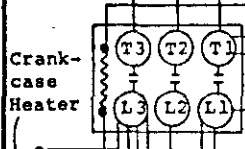

Emergency Signal Light

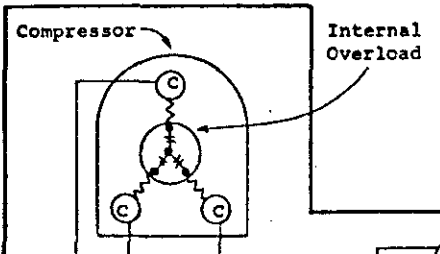

Fused Disconnect Switch

USE COPPER OR ALUMINUM WIRE

- 1 Reroute jumper from X2-W2 to X2-E.
- 2 Set heat anticipators at .40A for W1 and W2.

Single Package Heat Pump
3-Ton
w/9KW

240/200-50-3

Factory Wiring
Field Wiring