


USE COPPER OR ALUMINUM WIRE

- ⚠️ 1 Capacitor provides off-cycle crankcase heat.
- ⚠️ 2 See alternate thermostat sheet. Set heat anticipator at .40A.

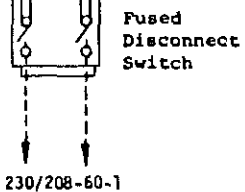

MODELS
20WA1 & 24WA2
w/8 or 10kw

Factory Wiring ———
Field Wiring - - - - -