


USE COPPER OR ALUMINUM WIRE

- 1 3-terminal capacitor provides off-cycle crankcase heat.
- 2 This wire omitted and 2-terminal capacitor used on model 18WA1 and 20WA.
- 3 See alternate thermostat sheet. Set heat anticipator at .40A.

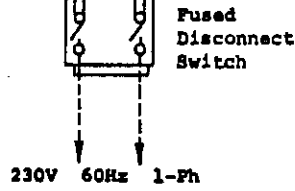

Models
18WA1, 20WA, 24WA1
w/8 or 10kw

Factory Wiring ———
Field Wiring - - - - -