


USE COPPER  
CONDUCTORS ONLY

- ⚠ Wired for off-cycle crankcase heat.
- ⚠ See alternate thermostat sheet.  
Set heat anticipator at .40A.
- ⚠ For 208V operation move this  
wire to 208V transformer tap.

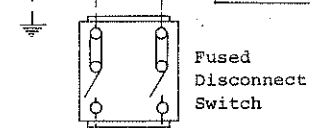

230/208-60-1

MODEL  
30WA2

Factory Wiring ———  
Field Wiring - - - - -

4008-110E