


T874C1000 Thermostat
 Q674A1001 Subbase
 or
 T872C1004 Thermostat
 Q672A1005 Subbase

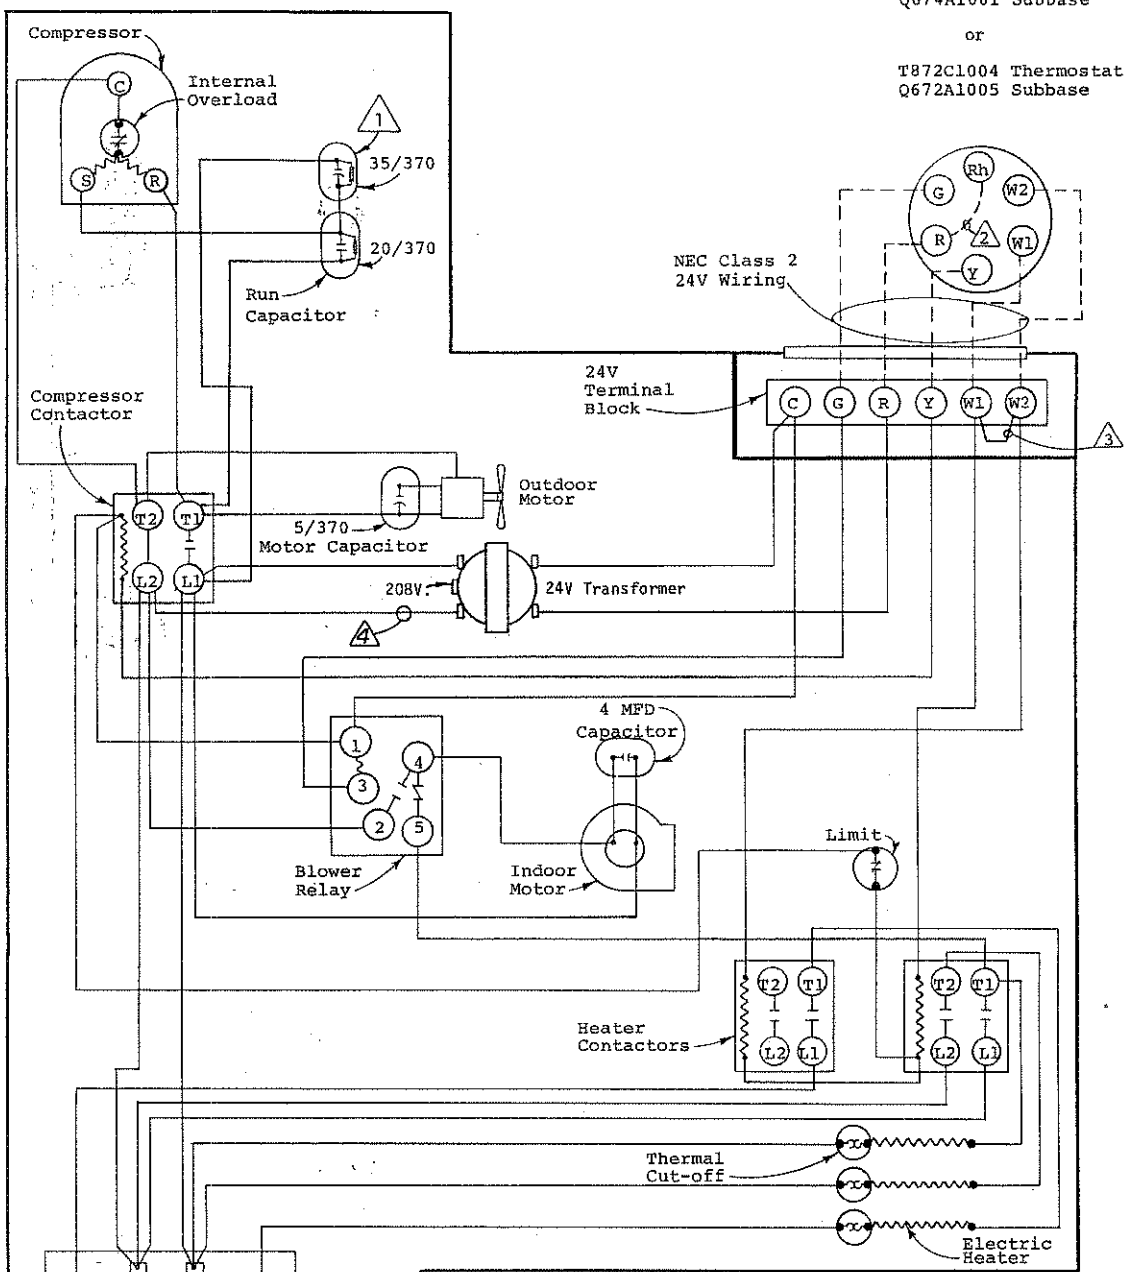

- Fuse A - 60A Time Delay
- Fuse B - 30A Standard
- All fuses type K-5
- ① Capacitor provides off-cycle crankcase heat.
- ② Add jumper Rc to Rh. Set heat anticipator for W1 and W2 at .40A.
- ③ Remove jumper W1-W2 for 2-stage heat.
- ④ For 208V operation move this wire to 208V transformer tap.

MODEL
 30WA2
 w/15KW

230/208-60-1
 Factory Wiring ———
 Field Wiring - - - - -

Equip. Ground
 USE COPPER OR ALUMINUM WIRE

4008-140E