
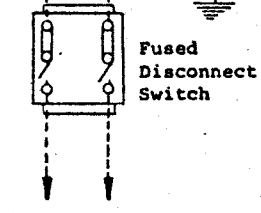
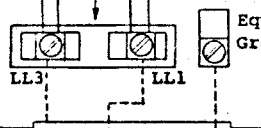


T872C1004 Thermostat
Q672F1026 Subbase

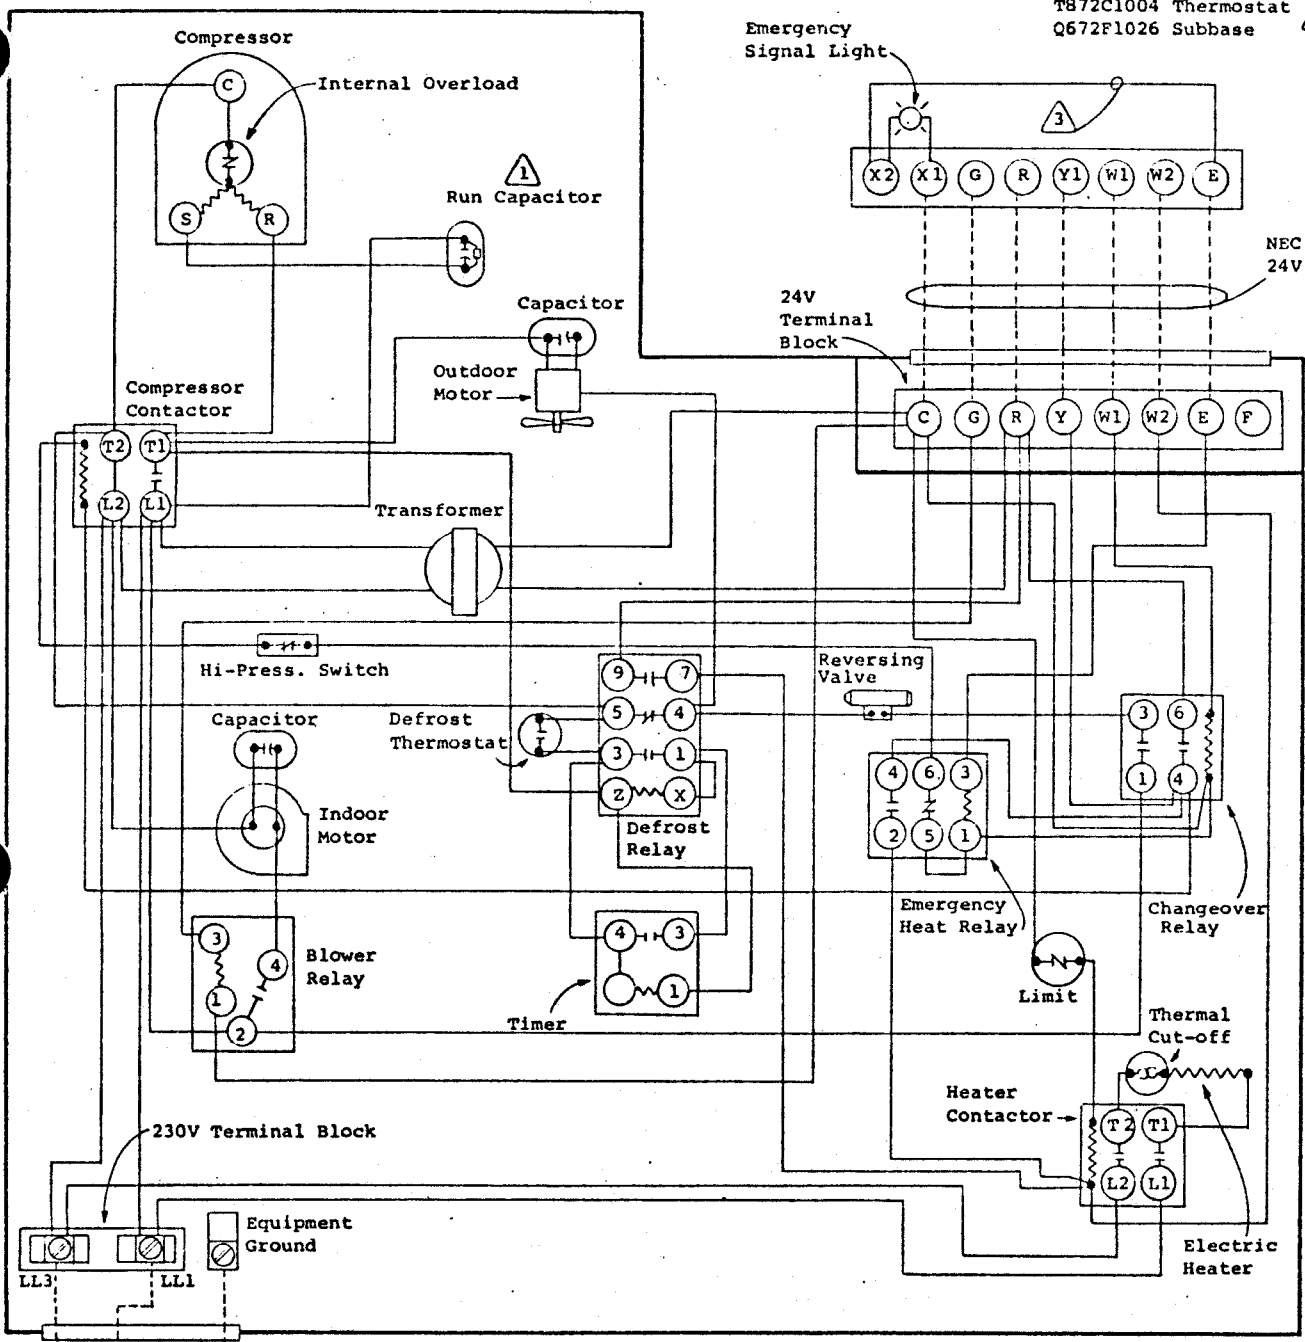

230V 60 Hz 1-Ph

USE COPPER OR ALUMINUM WIRE

- ⚠️ 1 Capacitor provides off-cycle crankcase heat.
- ⚠️ 2 Set heat anticipators at .40A for W1 and W2.
- ⚠️ 3 Reroute jumper from X2-W2 to X2-E.

Factory Wiring ———
Field Wiring - - - -

MODEL
36WH1
w/5Kw