


T872N1036/  
Q672F1299  
OR  
T874N1024/  
Q674F1261

T872R1164/  
Q672L1185  
OR  
T874R1129  
Q674L1181

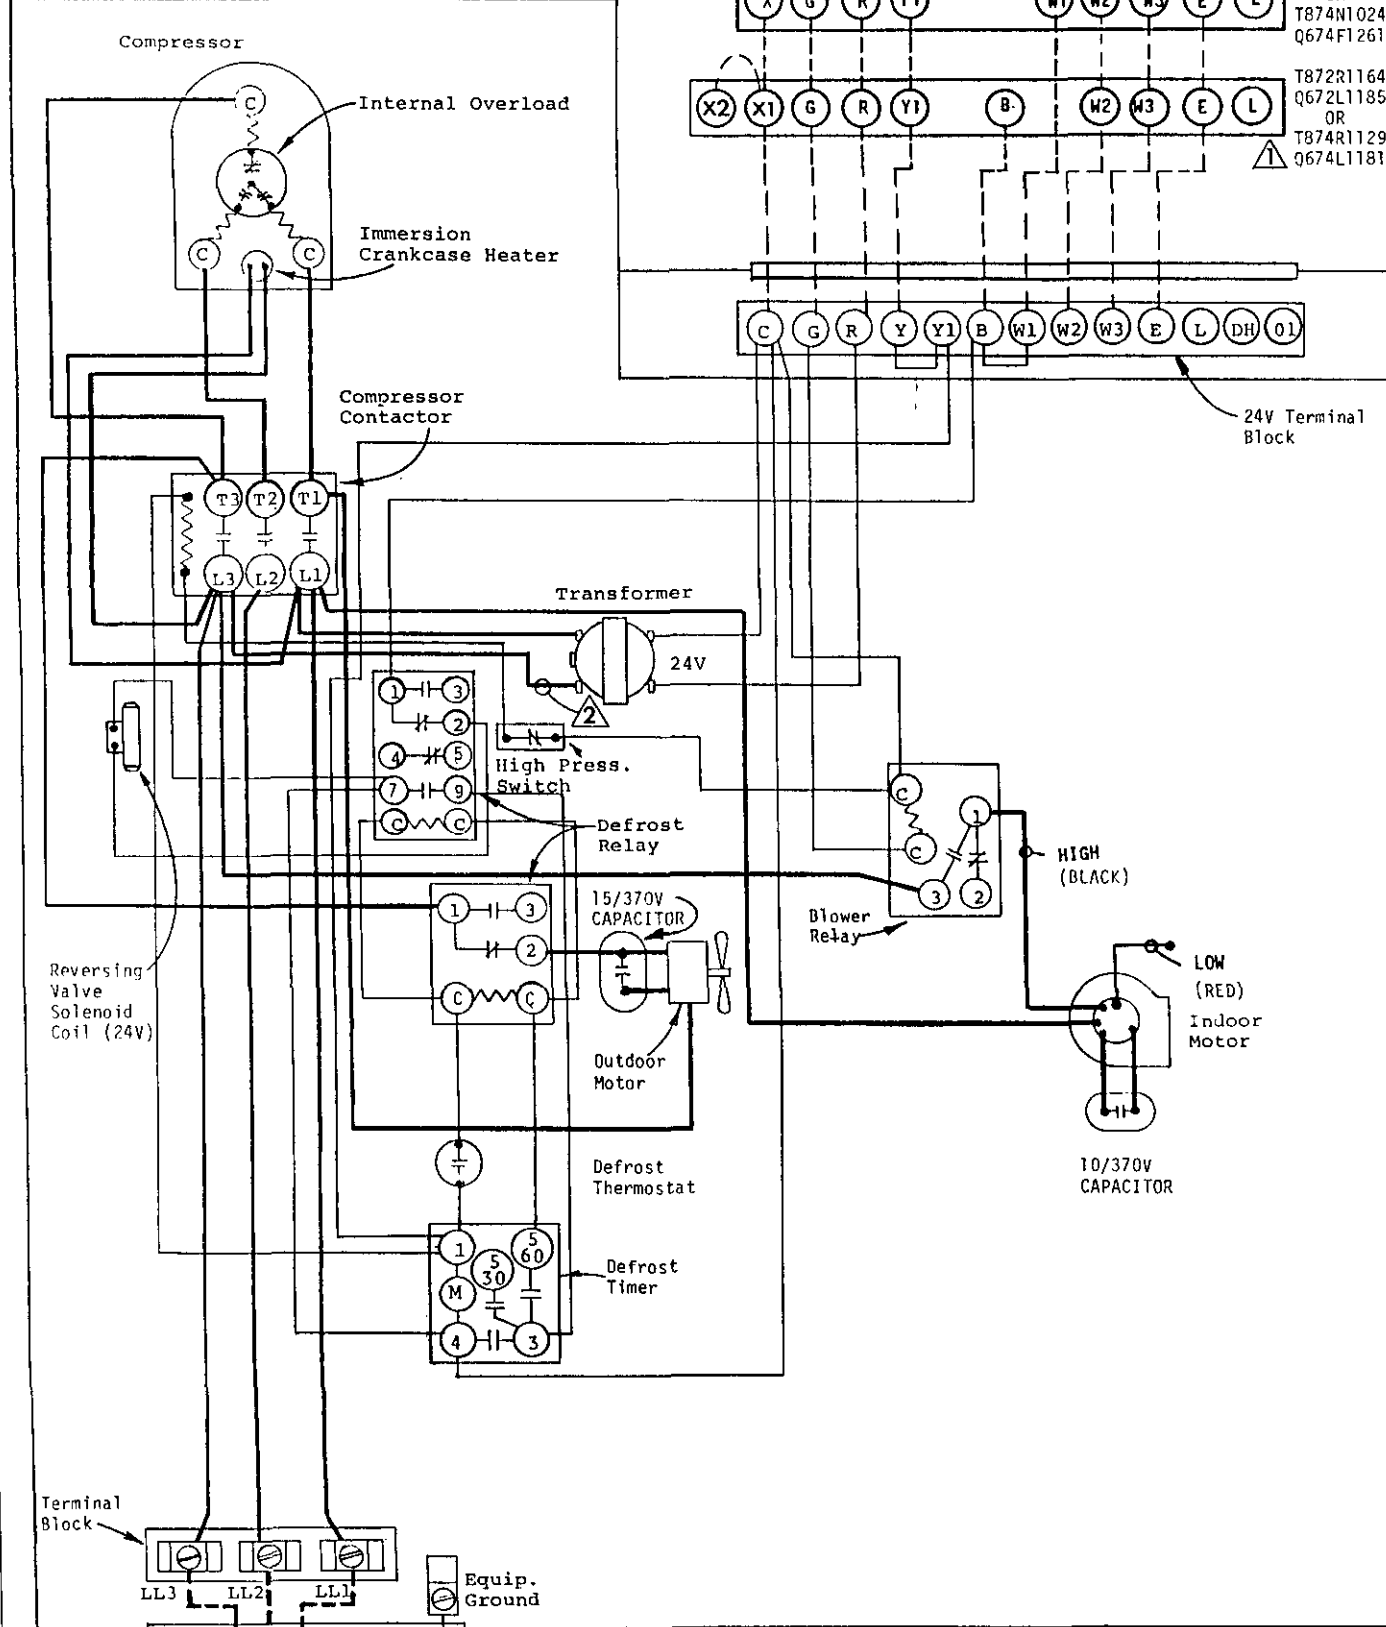

USE COPPER OR ALUMINUM WIRE

FACTORY WIRING	FIELD WIRING
Low Voltage ———	-----
High Voltage ———	-----

- ⚠ If there is an X1 and X2 terminal on Q674L1181, jumper them together and connect from C to either one.
- ⚠ For 208V operation move this wire to 208V transformer tap.