


FACTORY WIRING FIELD WIRING
 Low Voltage _____
 High Voltage _____

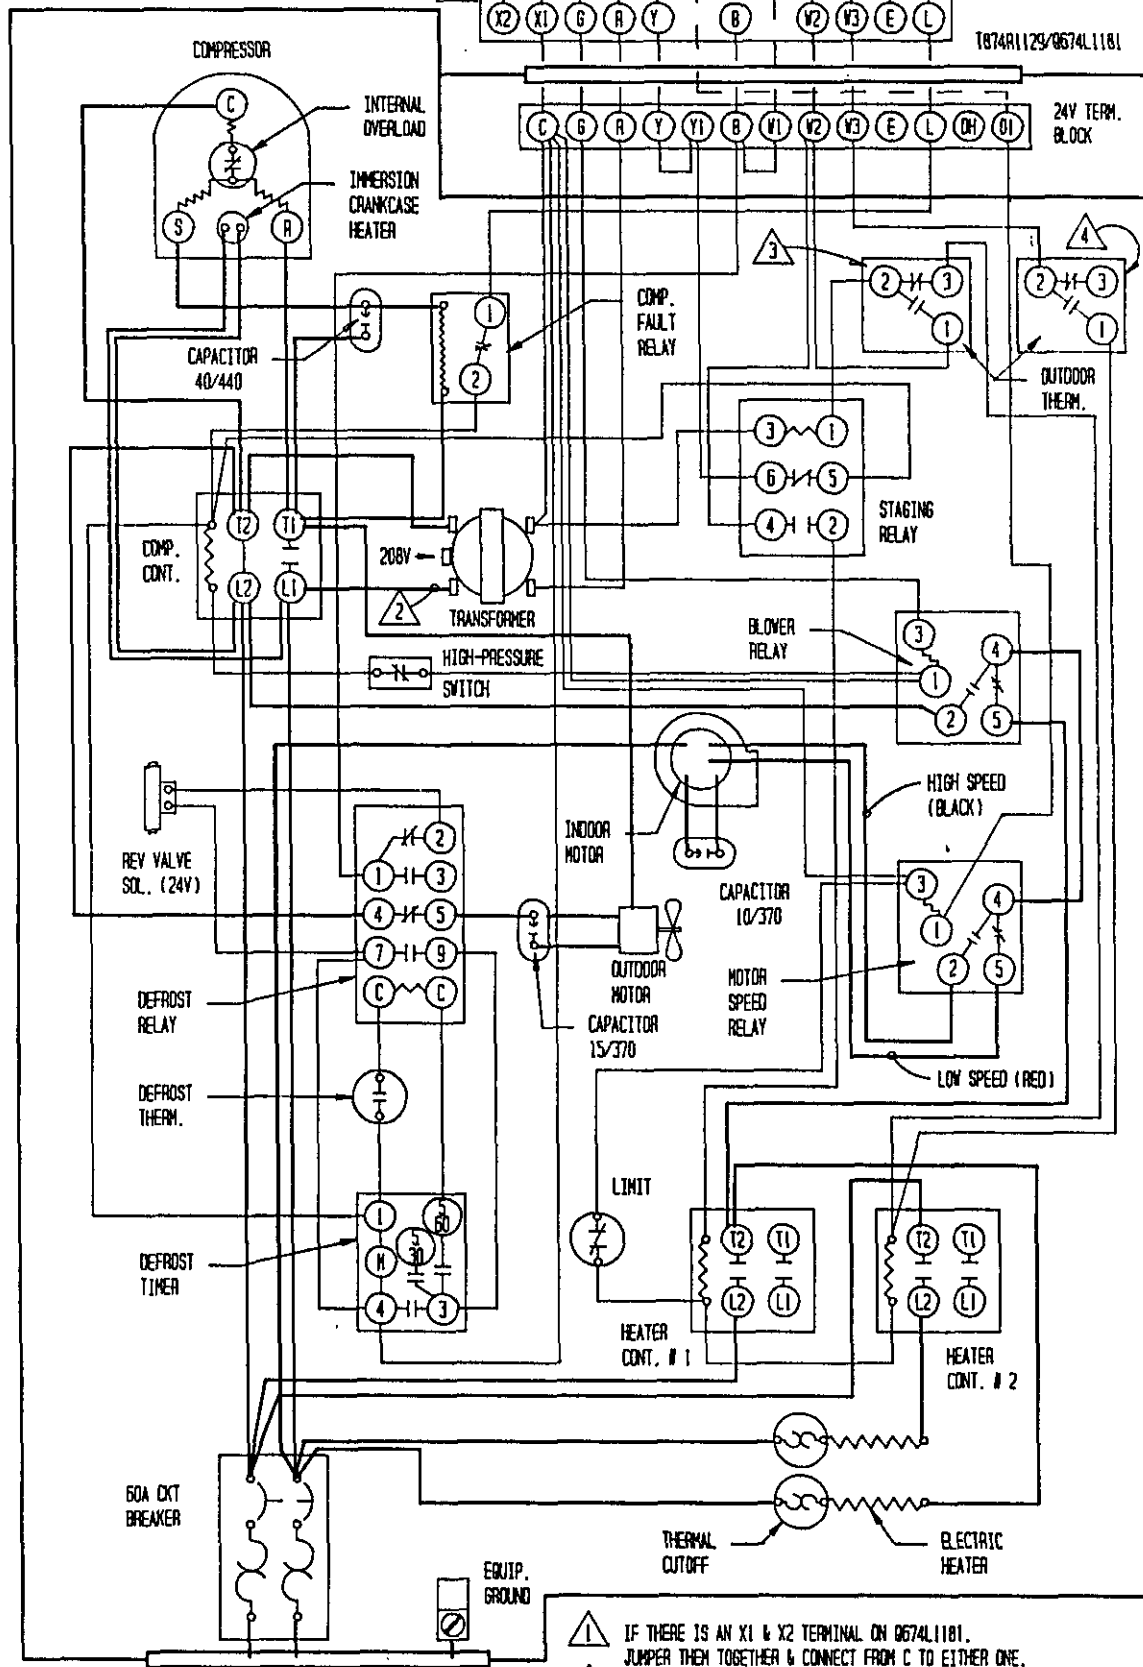

USE COPPER OR ALUMINUM WIRE

230/208-60-1

- 1 IF THERE IS AN X1 & X2 TERMINAL ON 0674L1181, JUMPER THEM TOGETHER & CONNECT FROM C TO EITHER ONE.
- 2 FOR 208V OPERATION, MOVE THIS WIRE TO 208V TRANSFORMER TAP.
- 3 OUTDOOR THERMOSTAT # 1 FACTORY SET AT 25 DEGREES.
- 4 OUTDOOR THERMOSTAT # 2 FACTORY SET AT 20 DEGREES.